



DJ Speaker
ZEB **THUMP805**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-THUMP 805** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- 160W RMS
- Up to 8h* Backup
- Dual 20.32cm Full range Driver
- Dual Voice Changing Wireless Mic
- Karaoke Function
- 6.3mm Microphone Input x 2
- 6.3mm Guitar Input & Volume Control
- BT v5.3 | USB | mSD | AUX
- TWS Function
- Volume ,Bass, Treble controls
- MIC Volume & Echo Controls
- Carry Handle with wheels
- RGB Lights
- LED Dot Matrix Display

- Type-C Charging
- Built-in Rechargeable Battery

Specifications:

Output Power (RMS) : 160W

Driver Size

Full range : 20.7cm x 2

Tweeter : 6.1cm x 1

Speaker Impedance

Full range : 3.6Ω

Tweeter : 10.2Ω

Frequency Response : 20Hz-20kHz

S/N Ratio : ≥80dB

Separation : ≥80dB

File format support

(USB/mSD) : MP3

Line input : 3.5mm

Max supported

USB/mSD memory size : 32GB

Charging time : 4h

Playback time : 8h*

BT name : ZEB-Thump 805

BT Version : v5.3

Product Dimension

(W x D x H) : 31.5 x 32.5 x 72.5 cm


Net. Weight : 9 kg

** at 50% volume (with LED off)*

Package Contents:

Speaker	: 1 U
Wireless Mic	: 2 U
Charging cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

Button Description:

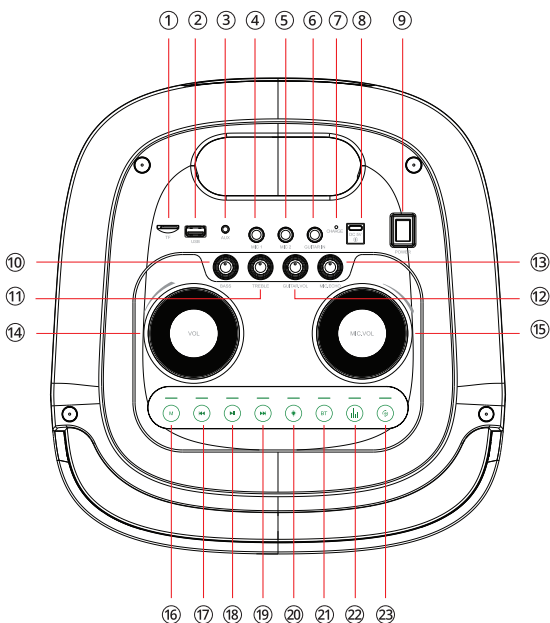

- ① mSD card
- ② USB port
- ③ AUX
- ④ MIC1 input port
- ⑤ MIC2 input port
- ⑥ Guitar input port
- ⑦ LED indicator
- ⑧ Type - C Charging Port
- ⑨ Power ON/OFF Switch
- ⑩ Bass control knob
- ⑪ Treble control knob
- ⑫ Guitar Volume control Knob
- ⑬ Mic Echo control knob
- ⑭ Master Volume control
- ⑮ Mic Volume control
- ⑯ Mode Button
- ⑰ Previous Track Button
- ⑱ Play/Pause Button
- ⑲ Next Track Button
- ⑳ RGB Modes Button
- ㉑ BT Connect/Disconnect Button
- ㉒ Music spectrum Display effect
- ㉓ Microphone Voice Modulation (Neutral Mode, High pitch Mode 1, Sound Monster Mode, High pitch Mode 2, Reverberation Mode)

Instruction for Use

Button Function:

- Turn the speaker On/Off using the “POWER” switch.
- Single Press “M” button to switch between modes.
- Long press the “M” button to enter the TWS mode.
- Use the master volume control knob to increase/decrease the volume.
- Rotate MIC volume knob to adjust the sound level of the Microphone.
- Rotate Guitar Volume Knob to adjust the sound level of Guitar.
- Use the Bass control knob to increase/decrease the bass level.
- Use the Treble volume knob to increase/decrease the treble level.
- Press the Previous/ Next button to control the media.
- Press ►|| button to Play or Pause the Track being played.
- Press  button to switch between different LED modes.
- Press the “BT” button to connect or disconnect the BT mode.
-  Insert 6.3mm Guitar plug into the GUITAR input port.
-   Insert 6.3mm wired microphone into the MIC 1 / MIC 2 Port.

- **Spectrum Mode:** Short press the " button to display the music spectrum (frequency visualizer); short press again to show the song name.
- **Voice Change:** Short press the " button to switch between microphone voice effects (Neutral Mode, High Pitch Mode 1, Sound Monster Mode, High Pitch Mode 2, Reverberation Mode).

Pairing with the Bluetooth speaker:

- Power ON the Speaker and you will hear the indication tone for the BT mode.
- Turn ON BT on your phone or tablet and search for the nearby BT compatible devices.
- Search for the BT name **"ZEB-Thump 805"** and tap to connect it.

Micro SD / USB Mode:

- Once the speaker is ON, insert the micro SD card / USB drive to the respective ports of the **"ZEB-THUMP 805"** and the speaker will automatically detect the track from the USB drive/Micro SD card and play.
- Press Prev/Next button to control the media.
- Use the Master volume knob to control the volume of the speaker.

AUX-In:

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable. Connect one end of the cable to the AUX - In port on the speaker and the other end an audio source. The audio from the source can be Played through the speaker.

TWS Function:

- When two speakers are in Bluetooth mode, long press the “M” button on one of the speakers to enter TWS mode. It will search and connect with another speaker automatically.
- Once the two speakers are connected successfully, you can control both speakers at the same time.

Note: Requires two speakers for the TWS feature.

Charging the Speaker:

- Use a DC 5V/3A adapter for charging the speaker.
- RED LED will be ON while charging.
- Once the speaker is fully charged, the RED LED goes OFF.

