



DJ Speaker
**NEB THUMP
850**



User Manual

www.zebronic.com

Dear Customer,

Thank you for purchasing **ZEB-THUMP 850** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features

140W RMS Output

Up to 10h* Backup

Dual 20.32cm Full range Drivers

TWS Function

Karaoke Function

Dual Wireless MIC

Volume, Bass & Treble controls

Mic Volume & Echo controls

BT v5.3 | USB / mSD | AUX

Dual 6.3mm Microphone Input

Neon Wheel RGB Lights

Remote control

LED Display

Type-C Charging
Built-in Battery
Carry Handle with Wheels

Specification:


Output Power (RMS) : 140W
Driver Size
Full range : 20.32cm x 2
Tweeter : 2.54 cm
Impedance
Full range : 4Ω
Tweeter : 9Ω
Frequency response : 60Hz-18kHz
S/N Ratio : ≥65dB
File format support : MP3
Line input : 3.5mm
Max supported
memory size : 32GB (USB/mSD)
Charging time : 7h
Playback time : 10h*
BT name : ZEB-Thump 850
BT version : v5.3
Product Dimension
(W x D x H) : 34 x 32.8 x 76 cm
Net.Weight : 8 kg

Package Content :

Speaker : 1 U
Remote : 1 U
Wireless Mic : 2 U
Charging Cable : 1 U
Input cable : 1 U
QR Code Guide : 1 U
Microphone Clamp : 2 U


**at 70% Volume (LED OFF)*

Buttons Description :

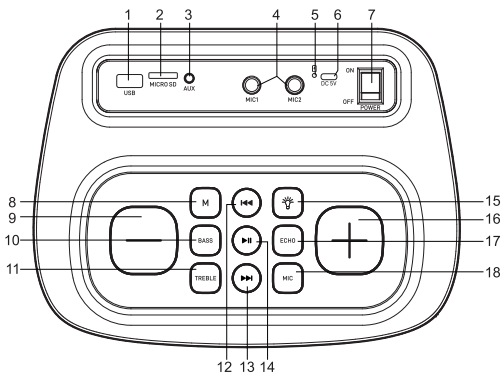

- | | |
|------------------------------|-------------------------|
| 1. USB Port | 14. Next Button |
| 2. mSD Port | 15. RGB Light Button |
| 3. AUX Port | 16. Volume Increase |
| 4. Mic Port 1,
Mic Port 2 | 17. Echo Button |
| 5. LED Indicator | 18. Mic Priority button |
| 6. Charger Port (Type-C) | |
| 7. Power Switch | |
| 8. Mode Button | |
| 9. Volume Decrease | |
| 10. Bass Button | |
| 11. Treble Button | |
| 12. Previous Button | |
| 13. Play/Pause Button | |

Remote Button Description.

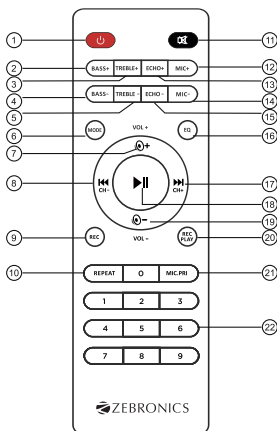

1. Standby/Awake
2. Music bass +
3. Music treble +
4. Music bass -
5. Music treble -
6. Input modes
7. Volume +
8. Previous track/FM channel & Long press for music rewind.
9. Recording
10. Repeat music (works under USB/mSD modes)
11. Mute
12. Mic volume +
13. Mic echo +
14. Mic volume -
15. Mic echo -

16. EQ
17. Next track/FM channel & Long press for music forward.
18. Play/Pause
19. Volume –
20. Play the recorded file
21. Mic priority ON/OFF
22. Numeric keys (0–9)

Button Instruction:

1. USB Port: Reads audio files in MP3 format from USB storage devices.

2. Micro-SD Port: Reads audio files in MP3 format from the Micro-SD.

3. AUX Input: Auxiliary audio input jack.

4. Microphone Input: Wired microphone input jack.

5. Charging Indicator.

6. DC 5V Input: Type-C port.

7. Power Switch: Switches the power on or off.

8. MODE: Short press to switch the function between USB/Micro SD/BT/AUX/FM modes.

9. Volume Down Button: Decreases the volume.

10. Bass Button: Short press the button, then press the Volume Up or Volume Down button to adjust the bass level.

11. Treble Button: Short press the button, then press the Volume Up or Volume Down button to adjust the treble level.

12. Previous Song / Previous Channel: In USB/Micro SD/BT mode, short press to select the previous track.

In FM mode, short press the Previous button to select the previous channel.

13. Next Song / Next Channel: In USB/Micro SD/BT mode, short press to select the next track.

In FM mode, short press the Next button to select the next channel.

14. Play/Pause: In USB/Micro SD card reading mode, short press to play or pause.

In FM mode, press and hold for 3 seconds to search for stations.

15. Light Mode Button: Press briefly to switch between different lighting modes.

16. ECHO Button: Short press the button, then press the Volume Up or Volume Down button to adjust the microphone echo level.

17. Microphone Priority Button: Short press the button, then press the Volume Up or Volume Down button to adjust the microphone level.

General Instructions

BT Connectivity:

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "**ZEB-Thump 850**" to connect.

USB:

- Insert the USB into the slot provided on the speaker.
- The speaker will automatically detect the USB and the supported audio content will be played from it.

***Note:** This mode isn't selectable on the speaker or remote control unless a USB is connected.*

FM Radio:

- Switch the speaker to FM mode.
- Single press Previous/Next channel button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-IN:

- The speaker can be connected to an audio source using a 3.5mm cable.
- Connect one end of the cable to the AUX-IN port on the speaker and the other end to an audio source.
- The audio from the source can be played through the speaker.

TWS Function:

- Turn on both "ZEB-THUMP 850" speakers in BT mode. Press and hold the "TWS" button for 3–5 seconds on any one of the speakers to initiate TWS pairing.
- After a few seconds, both speakers will connect successfully.
- Now search for a nearby BT device on your mobile phone or other source device and tap on the BT device named "ZEB-THUMP 850" to connect. To exit TWS mode, press and hold the "TWS" button for 3–5 seconds.

Recording Function:

- To record microphone input, first plug a USB/mSD card into the speaker. It will act as a storage device. Press the REC key on the remote to start/stop recording. Once the song or voice is recorded through the microphone, press the REC PLAY key to play the recorded file.

Charging the Speaker:

- Use a DC 5V/2A adapter for charging the speaker.
- The red LED will be ON while charging.
- Once the speaker is fully charged, the red LED goes OFF.

