



DJ Speaker

ZEB THUMP MONSTER 100



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-THUMP MONSTER 100** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the failure of Warranty.
- To know more about Terms and conditions for warranty policy, please visit:

<https://zebronics.com/pages/warranty-policy>

Features

Up to 6h* Backup

3 Way Speaker

30.48 cm Full range Drive

Quad Drive + Dual Tweeter

TWS Function

3 EQ Modes

Karaoke Maker

Dual UHF MIC

Karaoke Function

6.3mm Microphone Input x 2

6.3mm Guitar Input

MIC Volume & Echo Controls

Volume, Bass & Treble controls

BT V5.3 | USB | mSD | AUX

Remote control
LED Display
Carry Handle with Wheels
Built-in Battery
MIC Holder

Specification:

Driver Size

Full range : 30.48 cm x 1

Mid Range : 7.62 cm x 4

Tweeter : 7.62 cm x 2

Impedance

Woofer : 3Ω

Mid Range : 6Ω

Tweeter : 6Ω

Frequency response : 60Hz-20kHz

S/N Ratio : ≥75dB

File format support : MP3

Line input : 3.5mm

Max supported USB/

mSD memory size : 32GB

Charging time : 4h

Playback time : 6h*

BT name : ZEB-THUMP
MONSTER 100

BT version : v5.3

Product Dimension

(W x D x H) : 37 x 39.8 x 103 cm


Net.Weight : 26.6 kg

**at 50% Volume (LED OFF)*

Package Content :


DJ Speaker	: 1 U
Wireless Mic	: 2 U
Power Cord	: 1 U
Input cable	: 1 U
Remote	: 1 U
Mic Battery	: 2 U
Charging cable (MIC)	: 1 U
QR Code Guide	: 1 U

Product Description :

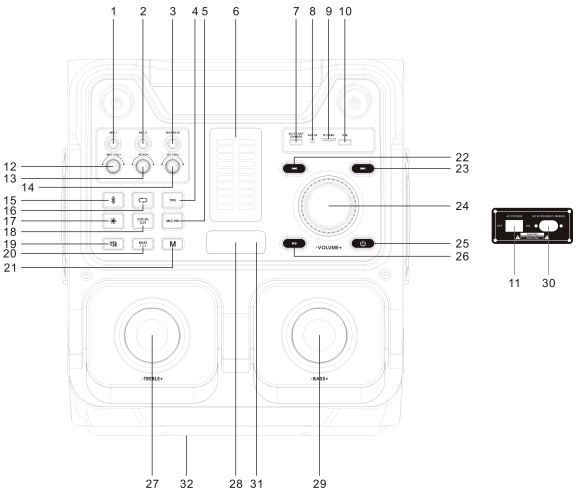

1. MIC 1 input port
2. MIC 2 Input port
3. Guitar input port
4. TWS Button
5. Mic Priority Button
6. Spectrum LED lighting
7. DC 5V Out Charge
8. AUX IN
9. mSD Card Slot
10. USB Port
11. Power Switch
12. MIC Volume Control Knob
13. Echo Volume Control Knob
14. Guitar Volume Control Knob
15. BT Button
16. Playback Button
17. RGB Mode Button
18. Vocal Cut Button
19. Mute Button
20. EQ Button
21. Mode Button
22. Previous Track Button
23. Next Track Button
24. Master Volume Control
25. Power Button
26. Play/Pause Button
27. Treble Control
28. LED Display
29. Bass Control
30. AC Charging Port
31. Charging Indicator LED

REMOTE CONTROL:

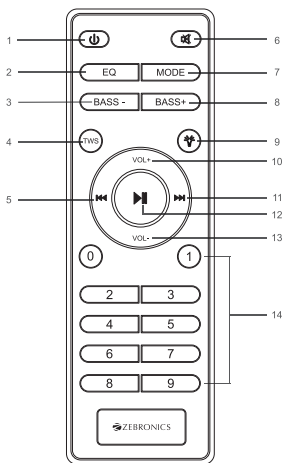

1. Power Button
2. EQ Button
3. BASS -
4. TWS Button
5. Previous Track / Channel
6. Mute Button
7. Mode Button
8. BASS +
9. LED Mode Button
10. Volume Increase +
11. Next Track / Channel
12. Play / Pause Button
13. Volume Decrease -
14. Channel Selection Button(0-9)

Button Functions:

- Press the "M" button to switch between the Input Modes of the speaker between BT Mode, AUX Mode & USB Mode while the LED Indicator denotes which Input Mode is currently Active.
- Press the TWS button for the TWS Connectivity between the two speakers only when both the speakers are available in BT Mode.
- Single Press the PLAY/PAUSE button to play/pause the tracks in the Input Mode (BT, mSD & USB). Single Press the PLAY/PAUSE button to toggle between mute & normal volume in AUX mode.
- Press the Power button to Turn ON/OFF the speaker.
- Press the Mic. Priority Button to make the speaker prioritize the sound from the connected microphone over other audio sources.
- Press the Vocal cut button to eliminate vocals from the music.
- Press the RGB Mode Button to switch between RGB LED modes of the speaker
- Press the Playback button in USB/mSD mode to select one of the playback sequencing modes (ALL - Play all tracks in sequence; RAND - Play tracks in random; ONE - Repeat one track; FOL - Repeat all tracks in a folder)
- Press the Mute button to mute or unmute the speaker sound.

- Press the previous track button to switch to the previous sound track. Press the next track button to switch to the next sound track.
- Press the EQ button to switch between the three EQ Modes; those are Default Mode, Bass-Boost Mode & Vocal Enhancement Mode.

General Instructions :

BT Connectivity :

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on **"ZEB-Thump Monster 100"** to connect.

USB :

- Insert the USB into the slot provided on the speaker.
- The speaker will automatically detect the USB and the supported audio content will be played from it.

Note :

This mode isn't selectable on the speaker or remote control unless a USB is connected.

AUX-IN :

- The speaker can be connected to an audio source using a 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

TWS Function :

- Turn on both **"ZEB-THUMP MONSTER 100"** speakers in BT mode Press and hold the "TWS" button for 3-5 seconds in any one of the speakers to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name **"ZEB-THUMP MONSTER 100"** to connect. To exit TWS mode, press and hold the "TWS" button for 3-5 seconds

Charging Instruction:

- Connect the pre-included Power Cord to the speaker & connect the other end to AC 220 - 240V power Socket.

Charging Indication:

- Charging indication LED glows red when charging and turns off once charged fully.