



ZEB DJ Speaker
VOX100



User Manual

www.zebronic.com

Dear Customer,

Thank you for purchasing the **ZEB-VOX 100 DJ Speaker**. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassembly of product or it will result in the failure of warranty.*
- *Turn off the speaker when the speaker not in use*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.3 | USB | mSD | FM | AUX
- 2 x 6.3mm Mic Input
- Dual UHF Wireless Mic
- TWS Function
- Multi Color LED Lights
- 5V USB Out
- Volume, Bass & Treble Controls
- Karaoke Maker
- Mic Volume, Reverb & Echo Controls
- Recording Function
- LED Display
- Remote Control
- Carry Handle with Wheels
- Upto 10h* Backup


Specifications:

Output Power (RMS)	: 220W
Driver Size	
Full range	: 30.48cm x 2
Mid range	: 7.62cm x 1
Tweeter	: 2.54cm x 1
Impedance	
Full range	: 4Ω
Mid range	: 6Ω
Tweeter	: 6Ω
Frequency response	: 55Hz-20KHz
S/N Ratio	: ≥70dB
Separation	: ≥60dB
File format support (USB/mSD)	: MP3
Line input	: 3.5mm
Max supported memory size	: 32GB USB/mSD
FM frequency range	: 87.5 MHz - 108 MHz
Charging Time	: 4.5h
Playback Time	: 10h*
BT name	: ZEB-Vox 100
BT version	: v5.3
Product Dimension	: 40 x 41 x 113 cm (W x D x H)
Net.Weight	: 19.8 kg
Country of origin	: PRC

Package Content:

DJ Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
QR Code Guide	: 1 U
Input cable	: 1 U
Power cord	: 1 U


Top Control Panel:

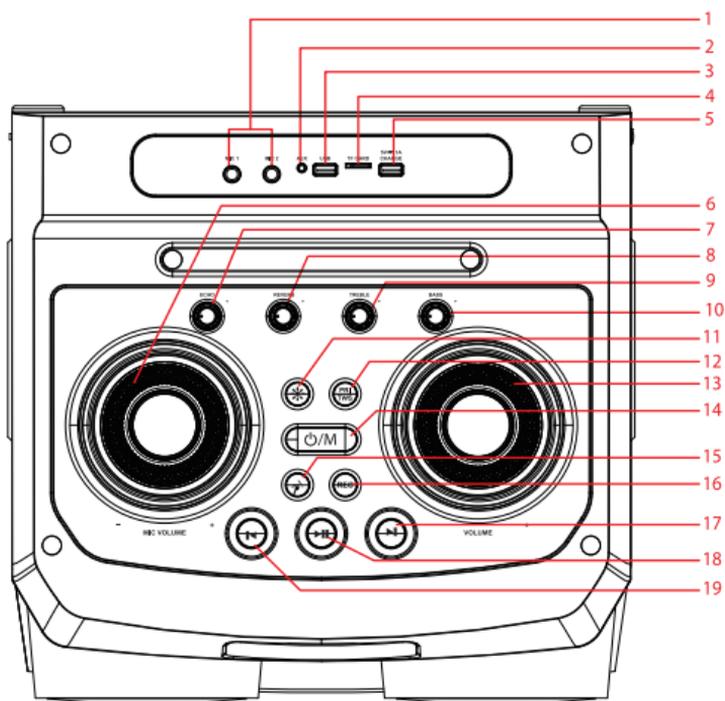


1. 6.3mm Microphone Inputs
2. AUX Input
3. USB Port
4. mSD Card Slot
5. Charging Port

6. MIC Volume Knob
7. Echo Control Knob
8. Reverb Control Knob
9. Treble Control Knob
10. Bass Control Knob
11. LED Mode Button
12. MIC Priority / TWS Button
13. Master Volume Knob
14. Power/Mode Button
15. Karaoke On/Off Button
16. Record Button Button
17. Next Track Button
18. Play/Pause Button
19. Previous Track Button

Overview of the Rear Panel

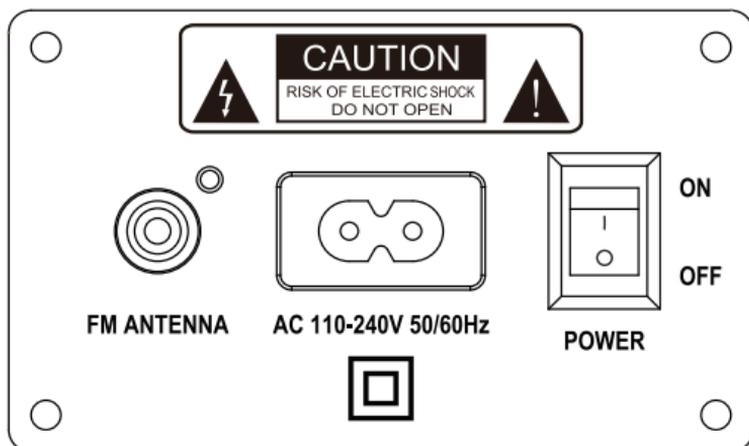

Remote Control

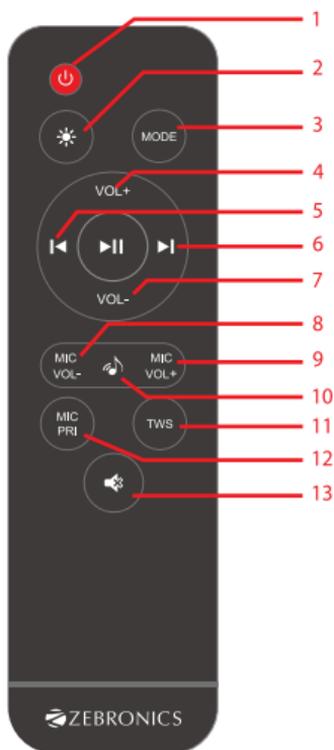

1. Power Button
2. LED Mode Button
3. Mode Button
4. Volume Increase
5. Previous Button
6. Next Button
7. Volume Decrease
8. Mic Volume -
9. Mic Volume +
10. Karaoke Button
11. TWS
12. Microphone Priority
13. Mute

Button Functions:

- To turn on the Speaker just Long press the Power/Mode Button. In order to change between different Input Modes just Single Press this button.
- The LED Mode Button is used to change between different LED Modes.
- In the Mic Priority/TWS button just single press this button to get into MIC Priority. Long press this button to get/exit into TWS Mode.
- In the Karaoke On/Off Button just single press this button to get/exit into Karaoke Maker.
- In the Previous Button you can change into Previous Tracks/Channels whereas the Next Button is used to change into Next Tracks.
- In the Next Button you can change into Next Tracks whereas the Next Button is used to change into Next Tracks/Channels.
- In the Play/Pause Button just single press this button to Play/Pause the tracks. Long press this button to Connect/Disconnect the BT Mode.

BT Mode:

- Switch the source to BT mode
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "ZEB-Vox 100" to connect.

USB/SD Mode:

- Insert the USB/SD card into the slot provided on the speaker
- The speaker will automatically detect the USB/SD card and the supported audio content will be played from it.

Note: This mode isn't selectable on the speaker or remote control unless a USB/SD flash card is connected.

FM Radio:

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX In:

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

Recording Function:

- First plug-in a USB/SD flash card which will act as a storage device into the slot provided on the speaker.
- Press the REC. button on the remote to start the recording.

- Press the REC. button again to stop the recording.
- Double Press the REC button to play the recorded file.

Karaoke Function:

- Press the Karaoke button to switch ON/OFF the Karaoke function
- Enjoy the Karaoke function with the Dual wireless Mic provided with the Speaker.

