



2.0 DJ Speaker
ZEB **VOX** 500



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-VOX 500 2.0 DJ Speaker**. Please read the user manual carefully before usage & save it for future reference.

Note :

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features :

- 38.1cm Dual Powerful Drivers
- 300W RMS
- Dual UHF Wireless Mic
- BT v5.3 | USB | mSD | FM | AUX | OPTICAL
- 2 x 6.3mm Mic Input
- TWS Function
- RGB LED Lights
- Volume, Bass & Treble Controls
- Mic Volume, Reverb & Echo Controls
- Karaoke Maker
- Recording Function

- LED Display
- Remote Control
- Carry Handle
- Up to 5h* Backup

Specification :

Output Power	: 300W (RMS)
Driver Size	: Full range - 38.1cm x 2 Mid range - 7.62cm x 2 Tweeter - 2.54 cm x 2
Impedance	: Full range - 2.8Ω Mid range - 4Ω Tweeter- 6Ω
Frequency response	: 45Hz-20kHz
S/N Ratio	: ≥60dB
Separation	: ≥40dB
File format support	: MP3
Line input	: 3.5mm
Max supported USB/mSD memory size	: 32GB
FM frequency range	: 87.5 MHz - 108 MHz
Charging time	: 4h
Playback time	: 5h*
BT name	: ZEB-Vox 500
BT version	: v5.3

Product Dimension

(W x D x H) : 45 x 40 x 135 cm
(Assembled)

Net.Weight : 32.2kg
(Assembled)


**at 50% Volume (LED OFF)*

Package Content :

Speaker	: 2U
Amplifier	: 1U
Remote	: 1U
Wireless Mic	: 2U
QR Code Guide	: 1U
Input cable	: 1U
Power cord	: 1U
FM Antenna Cable	: 1U
Speaker Interconnect Cable	: 2U
Connector cable for lights	: 2U


Usage Configurations :

Wiring:

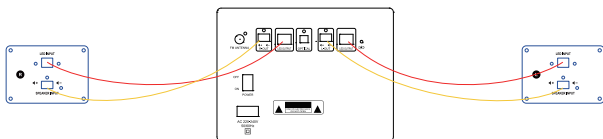


— Cable RJ45
— Cable RJ11


2.0 Configuration :

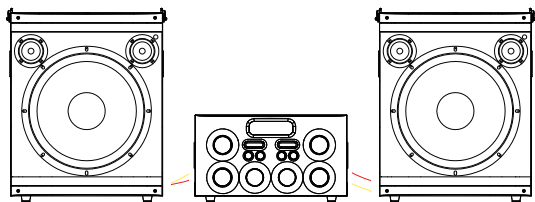


Stacked configuration :

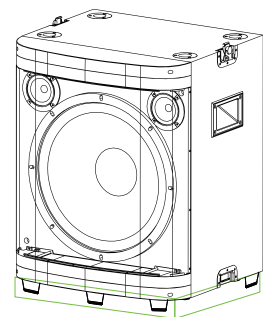


Please ensure the foot pads are aligned properly as shown in the image before stacking the speakers.

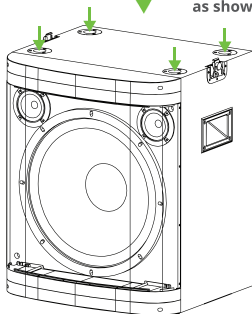

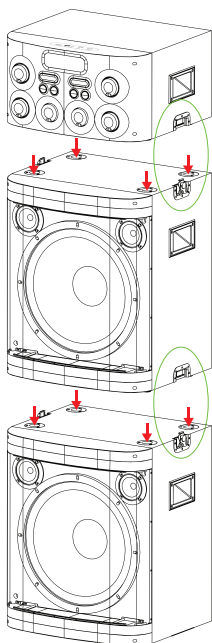


Secure the locks after stacking to hold the speakers firmly in place.

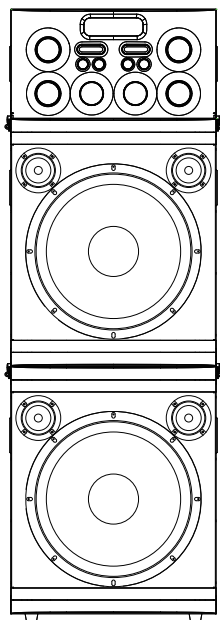

Product Description :

Front Panel :

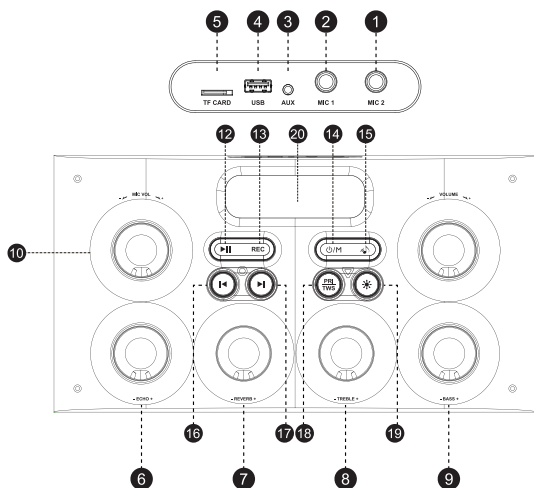


1. 6.3mm Microphone Input
2. 6.3mm Microphone Input
3. AUX Input
4. USB Port
5. mSD Card Slot
6. Echo Control Knob
7. Reverb Control Knob
8. Treble Control Knob
9. Bass Control Knob
10. MIC Volume Knob
11. Master Volume Knob
12. Play / Pause Button

- 13.Record Button
- 14.Power / Mode Button
- 15.Karaoke ON/OFF Button
- 16.Previous Track
- 17.Next Track
- 18.Mic Priority / TWS Button
- 19.RGB Mode Button
- 20.LED Display

Rear Panel :



Speaker :

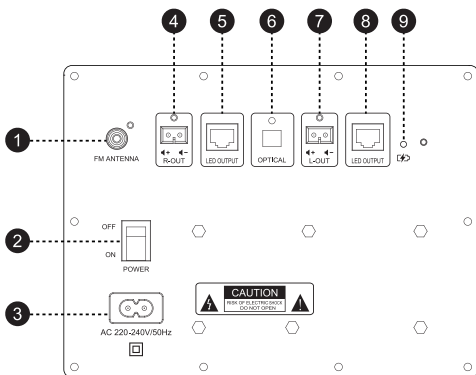

- 1. FM Antenna
- 2. Power Button
- 3. AC Power Port
- 4. Right Output +/-
- 5. LED Output
- 6. Optical Input


- 7. Left Output +/-
- 8. LED Output
- 9. Charging Indicator

Satellites :

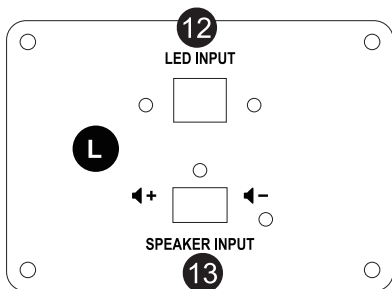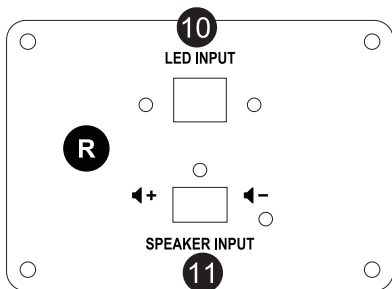

- 10. LED Input
- 11. Right Input +/-
- 12. LED Input
- 13. Left Input +/-

Remote Control :

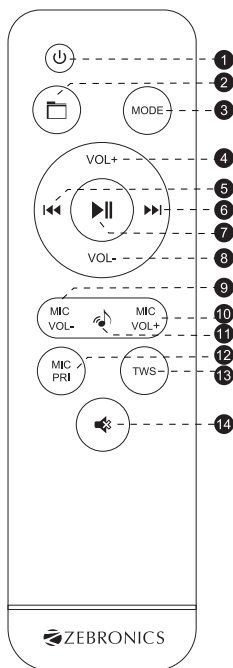

1. Power Button
2. Folder Button (Only works in USB/mSD mode)
3. Mode Button
4. Volume Increase
5. Previous Button
6. Next Button
7. Play / Pause Button
8. Volume Decrease
9. Mic Volume -

- 10.Mic Volume +
- 11.Karaoke Button
- 12.Microphone Priority
- 13.TWS
- 14.Mute

General Instructions :

Button Functions :

- Long press the Power/Mode Button to turn On the speaker. Single Press this button in order to change between Modes.
- The RGB Mode Button is used to change between different Light Modes.
- Single press the Mic Priority/TWS button to enable MIC Priority mode.Long press this button to enable/disable TWS Mode.
- Single press the Karaoke On/Off Button to enable/disable Karaoke Maker.
- Single Press the Previous Button to change to Previous Tracks/Channels & Single Press the Next Button to change to Next Tracks/Channels.
- Single press the Play/Pause Button to Play/Pause the sound tracks. Long press this button to disconnect the BT device or reconnect to the last paired BT device.

BT Connectivity :

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for

nearby BT devices.

- Tap on "ZEB-Vox 500" to connect.

USB/SD Mode :

- Insert the USB/mSD card into the slot provided on the speaker.
- The speaker will automatically detect the USB/mSD card and the supported audio content will be played from it.

Note : This mode isn't selectable on the speaker or remote control unless a USB/mSD card is connected.

FM Radio :

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Use FM cable for better reception. (FM cable included)

AUX-In :

- The speaker can be connected to an audio source using an AUX cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

Optical In / Coaxial In :

- Connect the optical/coaxial cable to the optical/coaxial digital output of your Source like TV or DVD player.
- Then connect the optical/coaxial cable to the optical/coaxial digital input of your speaker.
- Switch the Source device and Speaker ON. Set the connected Source to "PCM Stereo" or "Stereo 2.0".
- Start playing on the Source device.
- You can use the volume buttons to adjust the volume to your requirements.
- In this mode, playback can only be controlled on your Source device.

Recording Function :

- First plug-in a USB/mSD card which will act as a storage device into the slot provided on the speaker.
- Press the REC. button on the remote to start the recording.
- Press the REC. button again to stop the recording.
- Double Press the REC button to play the recorded file.

Karaoke Function :

- Press the Karaoke button to switch ON/OFF the Karaoke function.

- Enjoy the Karaoke function with the Dual wireless Mic provided with the Speaker.

Charging Instruction :

Connect the pre-included Power Cord to the speaker & connect the other end to AC 220-240V power socket.

Charging Indication :

- Charging indication will be displayed in the charging indicator located in rear side of the speaker.
- The charging indicator glows red while charging and turns off when fully charged.