

ZEBRONICS

DJ Speaker
NEB VOX



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-VOX** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit :*

<https://zebronics.com/pages/warranty-policy>

Features :

Wireless BT v5.3 / USB / SD / FM /
AUX /Optical/Coaxial / Mic Input x 2
Recording Function
LED Display
Remote Control
Dual UHF Wireless Mic
Volume, Bass & Treble Controls
Karaoke
Mic Volume, Bass & Treble Controls
Echo/ Delay / Volume Controls
TWS Function
LED Lights
2 way Speaker

 
Specifications :

Output power (RMS)	: 220W
Driver size	
Full range	: 30.48cm x 2
Tweeter	: 7.62cm x 1
Tweeeter	: 2.54cm x 1
Impedance	
Full range	: 4Ω
Tweeter	: 4Ω
Tweeeter	: 10Ω
Frequency response	: 50Hz-20KHz
S/N Ratio	: ≥60dB
Separation	: ≥60dB
File format support (USB)	: MP3, WMA,SBC
Line input	: 3.5mm to 3.5mm
Max. supported (USB) memory size	: 32GB
FM frequency range	: 87.5 MHz-108 MHz
Charging Time	: 4.5h*
Playback Time	: 10h*
BT name	: ZEB-VOX
BT version	: v5.3
Product dimension (W x D x H)	: 39 x 35 x 116 cm
Net. weight	: 22.9 Kg

Package Content :


DJ Speaker	: 1 U
Remote	: 1 U
Wireless MIC	: 2 U
QR Code Guide	: 1 U
Input Cable	: 1 U
Power Cable	: 1 U

Overview of the Top control panel :

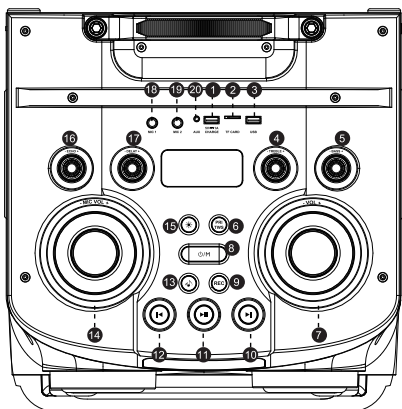


- | | |
|-----------------------|--------------------------|
| 1.Charging port | 11.Play/Pause |
| 2.mSD Card slot | 12.Next Track |
| 3.USB Port | 13.Karaoke ON/OFF |
| 4.Treble Control knob | 14.MIC Volume Knob |
| 5.Bass control knob | 15.Change LED Modes |
| 6.Mic Priority | 16.MIC Echo Control Knob |
| 7.Volume Control | 17.Delay Control knob |
| 8.Power/Mode | 18.Microphone slot 1 |
| 9.Record | 19.Microphone slot 2 |
| 10.Previous Track | 20.Aux input |

 Overview of the Rear Panel

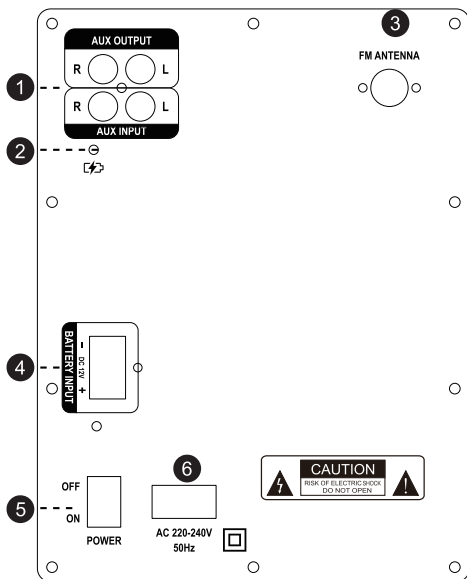

1. Left/Right AUX Output
Left/Right AUX Output
2. Charging indicator
3. FM Antenna
4. BATTERY INPUT
5. POWER OFF/ON
6. AC Power cord

 Remote Control

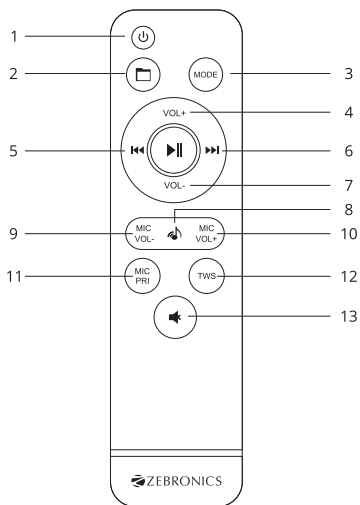

1. Power Button

2. Folder Button (In USB/TF mode, previous folder, next folder)

3. Mode Button

4. Volume increase

5. Previous (Channel-)

FM mode: Press the previous radio station. Press and hold the current frequency band for 3 seconds to search up semi-automatically.

In USB/TF mode : short press the previous track; Long press to fast backward,
In BT/AUX mode : No function.

6. Next (Channel+)

FM mode: Press a radio station; Hold down the current frequency band for 3 seconds to search semi-automatically.

In USB/TF mode: short press the previous track; Long press to fast forward,
In BT/AUX mode: has no function.

7. Volume Decrease

8. Karaoke Button

9. Mic Volume +

10. Mic Volume -

11. Microphone Priority

12. TWS

13. Mute

BT Mode :

- Switch the source to BT mode
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "**ZEB-VOX**" to connect

USB/SD Mode :

- Insert the USB/SD card into the slot provided on the speaker
- The speaker will automatically detect the USB/SD card and the supported audio content will be played from it.

***Note :** This mode isn't selectable on the speaker or remote control unless a USB/SD flash card is connected*

FM Radio :

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing

AUX-In :

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

Recording Function :

- First plug-in a USB/SD flash card which will act as a storage device into the slot provided on the speaker.
- Press the REC. button on the remote to start the recording.
- Press the REC. button again to stop the recording.
- Double Press the REC button to play the recorded file.

Karaoke Function :

- Press the Karaoke button to switch ON/OFF the Karaoke function
- Enjoy the Karaoke function with the Dual wireless Mic provided with the Speaker.

