



Portable BT Speaker

# MUSIC BOMB 20



## User Manual

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **“MUSIC BOMB 20”** BT speaker. Please read this user manual carefully before operation & save it for future reference.

### **Note:**

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the voiding your warranty.
- Please charge the product with power adaptor output rated voltage DC 5V.

### **Features**

BT v5.0

Supports USB Pendrive

Built-in FM Radio

AUX Input

TWS Function

Media / Volume control

Built-in Rechargeable battery

Mechanical Switches

Transparent Dual 6.35cm drives

Passive radiator

3 LED Modes + 1 OFF Mode

### **Specifications**

Output Power (RMS) : 15W ( 7.5W + 7.5W)

BT Version : 5.0

Driver Size : 6.35cm x 2

Speaker Impedance	: 3Ω
Frequency Response	: 90Hz-20kHz
S/N Ratio	: ≥60dB
Max Supported USB/mSD memory size	: 32GB (USB)
Supported Audio formats	: MP3/WAV/WMA
Charging time	: 3h
Playback time	: 36h*
Product Dimension	: 20 x 10.2 x 8cm (W x D x H)
Net. Weight	: 628g

### **Package Contents**

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U


### **Instructions for Use :**

#### **Charging the Speaker**

1. Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adaptor with minimum DC 5V 1A power rating.
2. LED will glow constantly, indicating that the battery is being charged.

*\* at 50% volume (LED off)*

## Product Details

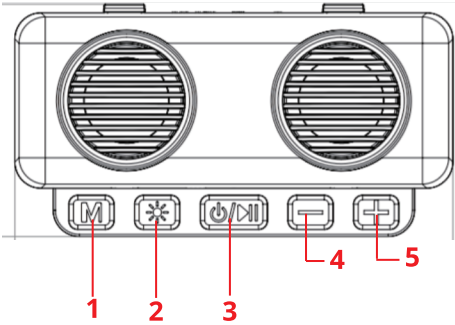

- 1 - MODE
- 2 - SINGLE PRESS TO CHANGE THE LED MODE  
PRESS AND HOLD TO TURN OFF LED
- 3 - PRESS AND HOLD TO TURN ON / TURN OFF  
SPEAKER  
SINGLE PRESS TO PAUSE  
DOUBLE PRESS - DURING FM MODE TO INITIATE  
FM SCANNING
- 4 - SINGLE PRESS - PREVIOUS TRACK IN  
USB/BT/mSD & FM CHANNEL IN FM MODE  
PRESS AND HOLD : TO DECREASE VOLUME
- 5 - SINGLE PRESS - NEXT TRACK IN  
USB/BT/mSD & FM CHANNEL IN FM MODE  
PRESS AND HOLD : TO INCREASE VOLUME

**Note :** Once the input source is connected, the modes will automatically be chosen. If you need to access a specific mode while multiple input sources are connected, hold down the Mode Button for a few seconds to switch between devices.

## **Bluetooth**

- Switch the Input mode to BT on your **“ZEB MUSIC BOMB 20”**
- Turn ON BT on your phone / tablet and search for nearby BT devices.
- Search for the BT name **“ZEB MUSIC BOMB 20”** and tap to connect it.

## **USB / mSD Mode**

- Connect the USB/ mSD card device to the respective ports of **“ZEB MUSIC BOMB 20”** and the speaker would automatically start playing from the mSD card/USB device.

## **AUX-IN**

Connect the speaker to an audio source (phone, TV, PC) using 3.5mm cable. Once connected AUX IN mode will automatically be chosen and thereafter audio can be streamed via the speaker from the connected source.

## **TWS (True Wireless Stereo) Function**

When two speakers are in Bluetooth mode, Double Tab the MFB button on one of the speaker to enter TWS mode, it will search and connect with another speaker automatically, when two speakers connected successfully, you can control two speakers at the same time.

***Note:** Requires two speakers for TWS feature*

## **FM Radio**

- Switch the speaker to FM mode. Double press PLAY/PAUSE button to scan for the available FM channels.
- Once the scanning is done, the scanned channels will begin to play. Use Prev/next button to change the FM channels.

