



Portable BT Speaker
MUSIC BOMB 40

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **“MUSIC BOMB 40”** BT speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the voiding your warranty.
- Please charge the product with power adaptor output rated voltage DC 5V.

Features

BT v5.1

TWS Function

Supports USB & mSD card

Built-in FM Radio

AUX Input

Call Function

Media / Volume control

Built-in Rechargeable battery

5 RGB modes + LED off

Passive Radiator

Specifications

Output Power (RMS) : 10W

BT Version : 5.1

Driver Size : 6.6 cm

Speaker Impedance	: 4Ω
Frequency Response	: 80Hz-20kHz
S/N Ratio	: ≥80dB
Max Supported USB/mSD memory size	: 32GB (USB)
Supported Audio formats	: MP3
Charging time	: 5-6h
Playback time	: 15h*
Product Dimension	: 10.5 x 13.8 cm (Dia x H)
Net. Weight	: 585g

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

Instructions for Use:

Charging the Speaker


1. Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter with minimum DC 5V 1A power rating.
2. LED will glow constantly, indicating that the battery is being charged.

** at 50% volume (With LED off)*

Input Mode Switching

When the Input source is connected, the modes will be automatically be chosen. If you need to access a specific mode while multiple input sources are connected, Press and hold down the TWS button for few seconds to choose the input modes.

Product Details

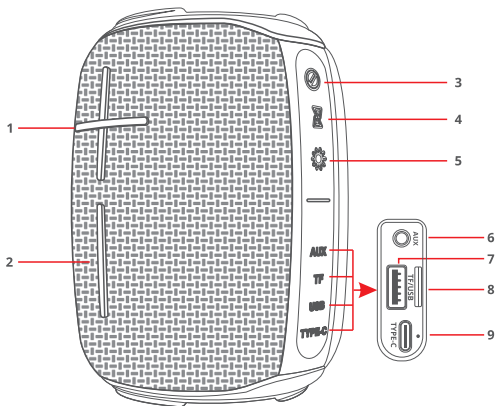

1. + Volume - Single press to Increase volume /
press and hold - Next track in BT/USB/FM Channel
in FM Mode
2. - Volume Single press to decrease volume /
press and hold - Previous track in BT/USB/FM
Channel in FM Mode

3. Power button - long press to Power On / Off & Double press during FM mode to scanning FM
4. TWS Button -
Single tap - TWS function
Long press - Input mode
5. LED Button -
Press hold - Led OFF / Led ON -
Short press to switch led modes
6. AUX IN
7. Micro SD slot
8. USB Port
9. Type C Charging port / FM Antenna

Button Function:

BT Mode

- Switch the Input mode to BT on your **“ZEB MUSIC BOMB 40”**
- Turn ON BT on your phone / tablet and search for nearby BT devices.
- Search for the BT name **“ZEB MUSIC BOMB 40”** and tap to connect it.

USB / mSD Mode

- Connect the USB/ mSD card device to the respective ports of **“MUSIC BOMB 40”** and the speaker would automatically start playing from the USB/ mSD card/device.

AUX-IN

Connect the speaker to an audio source (phone, TV, PC) using 3.5mm cable. Once connected AUX IN mode will be automatically be chosen and thereafter audio can be streamed via the speaker from the connected source.

Call Function

- Switch the Input mode to BT and connect to a mobile phone.
- During a call, short for the press “TWS / Power button” to answer/ end the call or long press the “TWS” button to reject the call.
- To re-dial a call, double press the “TWS” button to dial a call.

TWS (True Wireless Stereo) Function

When two speakers are in Bluetooth mode, short press button “TWS” on one of the speaker to enter TWS mode, It will search and connect with another speaker automatically, when two speakers connected successfully, you can control two speaker at the same time.

***Note:** Buy another Zebronics MUSIC BOMB 40 for TWS (true wireless stereo)setup.*

ISO 9001:2015 Certified Company

www.zebronics.com

