

 ZEBRONICS

Portable BT Speaker

**SOUND
FEAST** 60



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **SOUND FEAST 60** Portable Bt Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the use of this product at high temperature and high humidity environment.
- Avoid self-disassembly of the product, or it will result in voiding the product's warranty.
- Please charge the product with power adapter with output rated voltage of DC 5V.

Features

BT v5.0

Supports USB & mSD card

Built-in FM Radio

AUX Input

TWS Function

Media / Volume control

Built-in Rechargeable battery

6.3mm microphone Jack

Decor RGB lights with carry handle

6 LED Modes + 1 OFF Mode

Specifications

Output Power (RMS) : 10W

BT Version : 5.0

Driver Size : 16.51cm x 1

Speaker Impedance : 3Ω


Frequency Response	: 90Hz-20kHz
S/N Ratio	: ≥60dB
Max Supported memory size	: 32GB (USB/mSD)
Supported Audio formats	: MP3/WAV/WMA
Charging time	: 3-4h
Playback time	: 20h*
Product Dimension	: 23 x 13 x 27.5cm (W x D x H)
Net. Weight	: 945g

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

* at 50% volume (With LED off)

Product Details

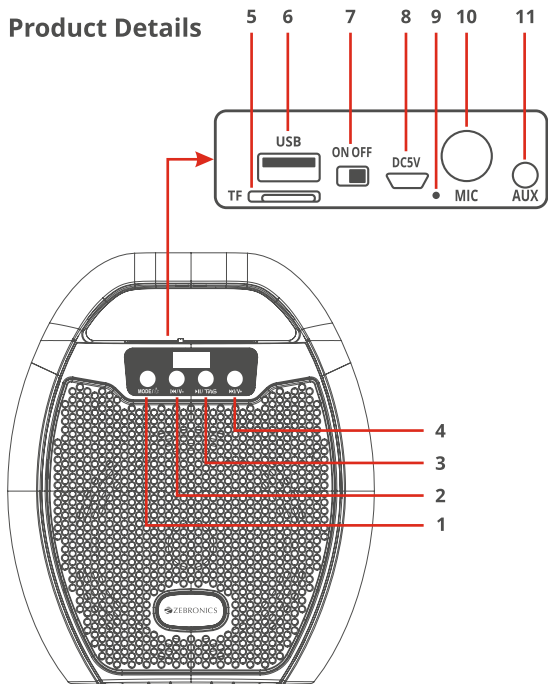

- 1 - LIGHT / MODE BUTTON
- 2 - PREVIOUS / VOL-
- 3 - PLAY / PAUSE / SCAN / TWS BUTTON
- 4 - NEXT / VOL+
- 5 - MICRO SD CARD SLOT
- 6 - USB PORT
- 7 - POWER ON/OFF SWITCH
- 8 - DC 5V CHARGING PORT
- 9 - CHARGE INDICATOR
- 10 - MIC INPUT
- 11 - AUX IN PORT

Button Function:

Bluetooth Mode

- Once the speaker is on, Please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and Tap on the BT name **SOUND FEAST 60** to connect to the Speaker.
- Double-press “+” or “-” to control the media
- Single-press “+” or “-” to adjust the volume
- Single press “ **Play/Pause/TWS** ” to play/Pause the track.

USB / mSD Mode

- Once the speaker is ON, Insert a USB drive / mSD Card to the speaker
- The speaker will automatically detect the tracks from the USB drive / mSD Card
- Double-press “+” or “-” to control the media
- Single-press “+” or “-” to adjust the volume
- Single press “ **Play/Pause/TWS** ” to play/Pause the track.

AUX-IN

Connect the speaker to an audio source (Phone, TV, PC) using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

Charging instruction

1. Connect the Micro USB charging cable to

the DC 5V charging port of the speaker and insert the other end into a USB power adaptor with minimum DC 5V 1A power rating.

2. LED blinks in a row, indicating that the battery is being charged. The LED will glow in a row once it is fully charged.

TWS Function

- Turn on two **SOUND FEAST 60** speakers you want to pair
- Double press the “ **Play/Pause/TWS** ” button on any one speaker to activate TWS mode.
- After Few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **SOUND FEAST 60** to connect.

*Note: Requires two **SOUND FEAST 60** speakers for TWS feature.*

LED Modes

1. Press & hold down the “ **Mode/LED** ” button to change the LED modes
2. Double Press the “ **Mode/LED** ” button to turn it off.

