




ZEBRONICS
ALWAYS AHEAD

Portable BT Speaker

**SOUND
FEAST 700**

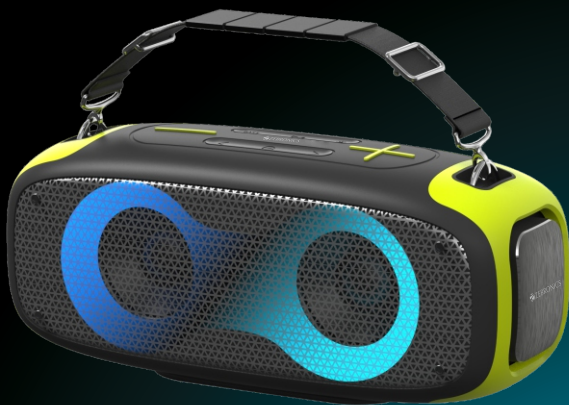

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing “**SOUND FEAST 700**” BT speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the use of this product at the high-temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*

Please charge the product with power adaptor output rated voltage DC5V.

Features

BT v5.1

Supports mSD

RGB Light with 9 led modes

USB Playback Support

AUX Input

Type C Charging

Call Function

Media / Volume control

Built-in Rechargeable battery

TWS Function

Dual passive radiator

Bass Boost

Type C Charging

Carry Strap

Specifications


BT Version	: 5.1
Driver Size	: 7.8 cm x 2
Speaker Impedance	: 4Ω
Frequency Response	: 80Hz-20kHz
S/N Ratio	: ≥80dB
Max Supported USB memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 4 H
Playback time	: 13H*
Product Dimension (W x D x H)	: 33 x 12 x 12 cm
Net. Weight	: 2.2 kg (With carry Strap)

**at 50% volume and LED OFF*

Package Contents

Speaker	: 1 U
Charging cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U
Carry Strap	: 1 U

Product Details

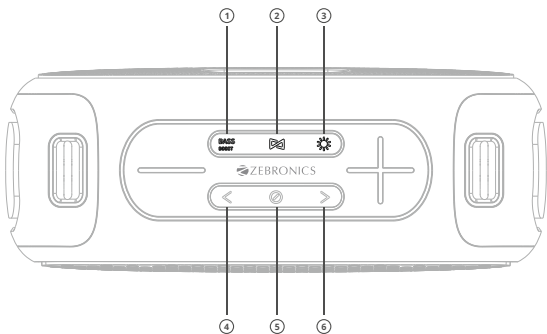

- 1 - BASS BOOST
- 2 - TWS
- 3 - RGB LED ON/OFF
- 4 - PREVIOUS TRACK
- 5 - POWER ON/OFF PLAY/PAUSE
- 6 - NEXT TRACK

Instructions for Use:

Charging the Speaker

1. Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adaptor with minimum DC 5V 1A power rating.
2. LED blinks in a row, indicating that the battery is being charged. The LED will glow in a row once it is fully charged.

LED Modes

Short press the RGB LED button to change the LED modes & to turn it off, press & hold down the RGB LED button.

Note:

Once the input source is connected, the modes will automatically be chosen. If you need to access a specific mode while multiple input sources are connected, hold down the TWS button for a few seconds to switch between devices.

BT mode

1. Switch the Input mode to BT on your "SOUND FEAST 700"
2. Turn ON BT on your phone / tablet and search for nearby BT devices.
3. Search for the BT name "SOUND FEAST 700" and tap to connect it.

USB/ mSD mode

Connect the USB/ mSD card device to the respective ports of "SOUND FEAST 700" and the speaker would automatically start playing from the mSD card/USB device.

AUX mode

Connect the speaker to an audio source (phone, TV, PC) using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

Call Function

BT should be connected with a mobile phone. During a call, short for the press "TWS" button to answer/end the call or long press the "TWS" button to reject the call.

To re-dial a call, double press the "TWS" button to dial a call.

TWS(True Wireless Stereo) function

When two speaker are in Bluetooth mode, short press button "TWS" on one of the speaker to enter TWS mode, It will search and connect with another speaker automatically, when two speakers connected successfully, you can control two speaker at the same time.

Note: Requires two speakers for TWS feature

ISO 9001:2015 Certified Company

www.zebronics.com

