



Portable BT Speaker

ZEB **AXON150**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **"ZEB-AXON 150"** Portable BT Speaker. Please read this user manual carefully before usage and save it for further reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassemble of the product as it results in the failure of Warranty.*

Caution: *There is a risk of explosion if the product is disposed in the fire*

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- 100W RMS
- Upto 7h* Backup
- Upto 3h** Backup
- Advanced DSP Sound
- 2 EQ Modes
- Deep Bass
- BT v5.3 | USB | mSD | AUX
- Headphone Out | 6.3mm Mic IN
- Media | Volume Control
- Dual Passive Radiator

- Wireless Mic
- Karaoke Maker
- Mic Echo | Volume Control
- RGB LED Lights
- Built-in Battery
- Detachable Carry strap
- Built-in Powerbank

Specifications:

Output Power (RMS)	: 100W
BT Version	: v5.3
Driver Size	
Woofer	: 10.5 cm x 1
Tweeter	: 4.8 cm x 2
Speaker Impedance	
Woofer	: 4Ω
Tweeter	: 2Ω
Frequency Response	: 40Hz-18kHz
S/N Ratio	: ≥82dB
Max Supported	
USB Memory Size	: 128GB
Supported	
Audio Formats	: MP3
Charging Time	: 4h
Playback Time	: 7h*
	3h**
Product Dimension	: 18.6 x 10 x 22.1 cm
	(W x D x H)
Net Weight	: 2.1 kg

* at 70% Volume (LED Off)


** at 100% Volume (LED Off)

Package Contents :

Speaker	: 1 U
Wireless Mic	: 1 U
Charging Cable	: 1 U
Input Cable	: 1 U
Carry Strap	: 1 U
QR Code Guide	: 1 U

Product & Port Description:


Speaker:

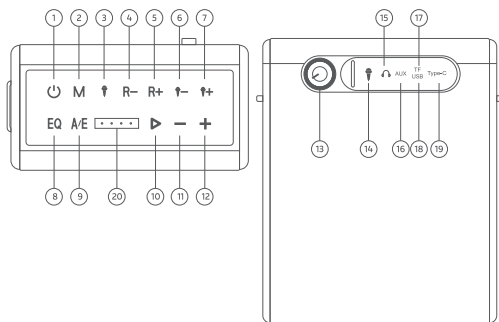

1. Power ON/OFF & RGB Control
2. Mode (BT / mSD / USB / AUX)
3. Microphone ON/OFF
4. Echo Volume -
5. Echo Volume +
6. Microphone Volume -
7. Microphone Volume +

8. EQ Mode
9. Karaoke ON/OFF
10. Play/Pause
Answer/Reject/Hangup/Redial
11. Volume - / Previous Track
12. Volume + / Next Track
13. Volume Knob of 6.5mm Microphone
14. 6.5mm Microphone Port
15. Headphone Jack
16. Aux-in Port
17. mSD Slot
18. USB-A Port
19. Type-C Port
20. LED Indicators

Wireless Microphone:

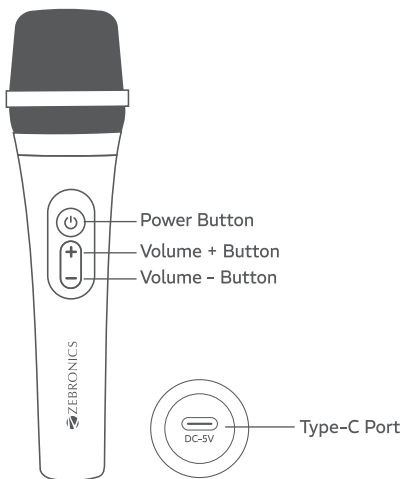

General Instructions:

Power ON/OFF:

- Press and hold the power button to turn ON/OFF the speaker.
- Press the power button once to change RGB lighting.

Mode:

- Press the “M” button to change between modes (BT / mSD / USB / AUX) and to disconnect the bluetooth.
- Press and hold the “M” button for 10 sec to reset the speaker and clean all the memory.

BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Select **“ZEB-Axon 150”** to connect.

USB/mSD Mode:

Insert the USB Drive/mSD Card to the speaker. The speaker will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect

the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

TWS Connectivity:

Turn on both speakers in BT (wireless) mode. Double press the mode button “M” to enable (Orange LED flashing continuously)/ disable TWS mode, both the speakers will connect automatically in TWS (Green LED remains ON on both the speakers). Connect the source device to the master speaker and your TWS mode is ready to go.

Note: Requires two ZEB-AXON 150 speakers for the TWS feature.

Music Controls:

- Press play button once to Play/Pause music. (Play: Blue LED stays on, Pause: Blue LED flashing continuously).
- Press “-” to decrease the volume.
- Press “+” to increase the volume.
- Press and hold the “-” button for 2 sec to revert to the previous song.
- Press and hold the “+” button for 2 sec to forward to the next song.

Mic Controls:

- Connect the microphone wirelessly or using a 6.5mm cable through the port in the

speaker.

- Press and hold the power button button on the mic to turn it on.(Yellow LED flashing continuously on the mic while pairing and remains on when paired successfully)
- Press the MIC button on the speaker to pair or unpair with the mic.(Green LED flashing continuously on the speaker while pairing and remains on when paired successfully)
- Press the "  " button to increase the volume of the MIC's audio.
- Press the "  " button to decrease the volume of the MIC's audio.
- Volume can also be controlled by the volume control buttons available on the microphone.
- Press R- to decrease the echo volume of the wireless microphone.
- Press R+ to increase the echo volume of the wireless microphone.
- Turn the volume knob to adjust the volume of the 6.5mm microphone.

EQ Mode:

- Press the EQ button to switch between the EQ modes.

A/E Mode:

- Press the A/E button to enable karaoke mode.

Call Functions:

- When there is an incoming call press play button once to answer the call.
- Press and hold the play button to reject the call.
- Press the play button once to hang up the call.
- Double press the play button to redial the last called number.

Charging Instruction:

Speaker:

- Connect the speaker to a 5V 3A DC adapter using the provided charging cable.
- A red LED flashes continuously when battery of the speaker is low.
- A red LED Glows constant when the speaker is charging.
- The LED goes off once the speaker is full charged.

Mic:

- The Mic can be charged with the charging cable that comes with the product.
- Connect the USB connector of the charging cable to the USB port of a DC5V charger and the other end to the Mic.

