

MPortable BT Speaker MAXON 200



User Manual

www.zebronoics.com

Thank you for purchasing the **ZEB- AXON 200** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.

Caution: There is a risk of explosion if the product is disposed in the fire

To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

Features:

- Wireless BT
- AUX Input
- Z-Sync Mode
- Call Function
- Media / volume control
- Built-in Rechargeable battery
- Dual Passive Radiator
- Fabric Finish
- IPX-6 Water-Resistance
- Carry Handle

- Deep Bass
- 3 EQ Modes
- RGB LED Lights

Specifications:

Output Power (RMS) : 180W

BT Version : v5.3

Driver Size

Woofer : 13.3 cm x 1 Midrange : 6.98 cm x 2

Tweeter : 3.81cm x 2

Speaker Impedance

Woofer : 4Ω

Midrange : 4Ω

Tweeter : 4Ω

Frequency Response : 60Hz-20kHz

S/N Ratio :≥80dB

Max Supported

USB/mSD memory size : 128GB Supported Audio formats : MP3

Charging time : 6 - 10h

Playback time : 10h*


Product Dimension

(WxD xH) : 48.6 x 18 x 23 cm

Net. Weight : 5.4 Kg

^{*} at 50% volume (LED off) - Default EQ

Port & Button Description:

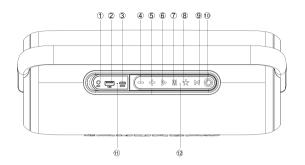

- 1. AUX Port
- 2. USB Port
- 3. Type-C Charging Jack
- 4. Backward/Volume Down
 - · Short press to decrease the volume
 - Long press to move to previous Track
- 5. Forward/Volume Up
 - Short press to increase the volume
 - · Long press to move to Next Track
- 6. Play/Pause
 - Short press to Play or Pause the Track
- 7. EQ Button
 - Short press to Switch between the Three Equalizer mode.
- 8. RGB Light
 - Short press to Switch between the LED modes

- 9. Mode Button
 - Short press to Switch between modes
 - · Long press to Enable TWS mode
- 10. Power Button
 - Long press to Turn ON/ OFF the Speaker.
- 11. Charging Indicator
- 12. Built-in Microphone

General Instructions

BT Mode:

Switch on the speaker to BT mode, Scan for nearby BT devices in your device. Tap on **"ZEB-AXON 200"** to connect.

USB Mode:

Insert the USB Drive to the USB port, the speaker will detect the USB Drive and the audio file will be played automatically.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

Z-Sync Mode:

This feature allows the user to connect multiple ZEB-Axon 200 speakers together.

Turn on Two or More ZEB-Axon 200, long press the mode button the speakers will automatically connect through Z-Sync mode. Now you are ready to go with Z-Sync mode.

Call Function:

Connect the Speaker to your mobile device.

- Short press the Play/ pause button to attend the call.
- Long press the Play/ Pause button to reject the call.

During the call,

- Short press the Play/Pause button to switch to mobile phone.
- Long press the Play/Pause button to End the call.

Charging Instruction:

Connect the charging cable to a DC5V adaptor and connect the other end to the speaker.while charging a Red LED will glow and the LED goes OFF once the speaker is fully charged.

ISO 9001:2015 Certified Company www.zebronics.com