



Portable BT Speaker

ZEB **BLOW 3**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the
“**ZEB-BLOW 3**” Portable BT Speaker. Please read
this user manual carefully before usage and
save it for further reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassemble of the product as it results in the failure of Warranty.*
- *Turn off the speaker if the speaker is not being used for a long period of time.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

48W RMS

Upto 7h* Backup

20.32cm Full Range Driver

TWS Function

BT v5.3 | USB | mSD | AUX

Wireless Mic

6.3mm Microphone Input

Volume, Bass & Treble Controls

Mic Volume and Echo Controls

Karaoke | Mic Recording

Built-in Battery

Multicolor LED Lights

Type-C Charging
Carry Handle
Remote Control
Mobile Holder

Specifications:


Output Power (RMS) : 48W
BT Version : v5.3
Driver Size
 Full range : 20.32cm
 Tweeter : 2.54cm
Speaker Impedance
 Full range : 2.2Ω
 Tweeter : 7.5Ω
Frequency Response : 65Hz to 18kHz
S/N Ratio : ≥60dB
Max Supported
USB/mSD Memory Size: 32GB
Supported Audio
formats : MP3
Charging Time : 4.5h
Playback Time : 7h*
Product Dimension : 26 x 27 x 36.5 cm
 (W x D x H)
Net.Weight : 2.8 kg

** at 50% volume (with LED off)*

Package Contents :

Speaker	: 1 U
Input cable	: 1 U
Charging Cable	: 1 U
Remote	: 1 U
Wireless Mic	: 1 U
Microphone Clamp	: 1 U
QR Code Guide	: 1 U

Button Description:

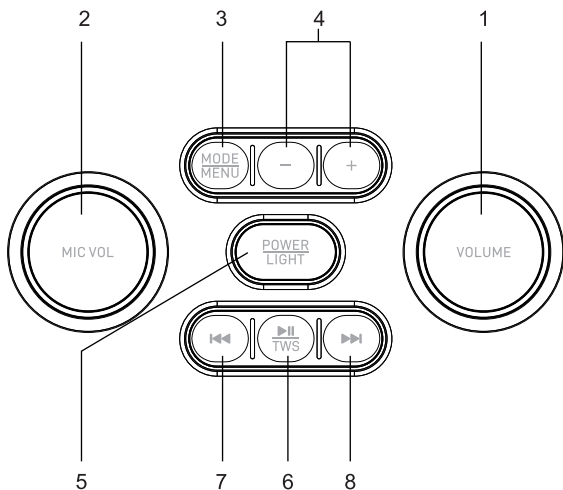

1. Master Volume Knob.

- Turn to Increase and decrease master Volume of the Speaker

2. Mic Volume Knob

- Turn to Increase and decrease Volume of Mic

3. Mode / Menu Button

- **Single Press** - To change the Switch mode between FM / AUX / BT / USB
- **Long Press** - To select Bass, Treble, and Echo adjustment levels.

4. + and - Tone Control Button

- Once you select the Bass/Treble/Echo adjustment level, Use the + and - buttons to increase or decrease the chosen levels.

5. Power / Light Button

- **Single Press** - To ON/OFF the LED Lights.
- **Long Press** - To ON/OFF the Power of the Speaker.

6. Play / Pause / TWS Button

- **Single Press** - To Play / Pause the Track
- **Long Press** - To ON / OFF the TWS Functions.


7. Previous Track Button.

- **Single Press** - To change the Previous track in BT/USB
- **Long Press** - To change the Previous channel in FM Mode.

8. Next track Button.

- **Single Press** - To change the Next track in BT/USB
- **Long Press** - To change the Next channel in FM Mode.

Port Description:

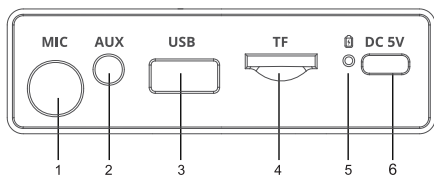

1. Mic Port
2. AUX Port
3. USB Port
4. mSD Port
5. Charging Indicator
6. Type - C charging Port

General Instructions:

Power ON/OFF:

- Press and hold the power button to turn ON/OFF the speaker.
- Press the power button once to change RGB lighting.

Mode:

- Press the "M" button to change between modes (BT / mSD / USB / AUX) and to disconnect the bluetooth.
- Press and hold the "M" button for 10 sec to reset the speaker and clean all the memory.

BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Select **"ZEB-BLOW 3"** to connect.

USB/mSD Mode:

Insert the USB Drive / mSD Card to the Speaker. The speaker will detect the USB/mSD Card and the audio files from the drive will be played automatically.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source.

The tracks from the audio source can be heard through the speaker.

TWS Connectivity:

Turn on both speakers in BT (wireless) mode. Double press the **Mode/Menu Button** enable (Orange LED flashing continuously)/ disable TWS mode, both the speakers will connect automatically in TWS.

Note: Requires two, ZEB-BLOW 3 speakers for the TWS feature.

Charging Instruction:

Speaker:

- Connect the speaker to a 5V 2.5ADC adapter using the provided charging cable.
- A red LED flashes continuously when battery of the speaker is low.
- A red LED Glows constant when the speaker is charging.
- The LED goes off once the speaker is full charged.

