



Portable BT Speaker

ZEB **BUDDY**
140



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-BUDDY 140** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Turn off the speaker when it is not in use.

To know more about Terms and conditions for warranty policy, please visit :

<https://zebrionics.com/pages/warranty-policy>

Features:

- 32W RMS
- Up to 8h* Backup
- Dual 7.62cm Drivers
- Karaoke Function
- Wireless Mic
- RGB LED Lights
- BT v6.0 | USB
- Volume & Media controls
- Mobile Holder
- Type-C Charging
- Carry Handle
- Built in Battery

Specifications:


Model No	: ZEB-PSPK 88
Output Power (RMS)	: 32W
BT Version	: v6.0
Driver Size	: 7.62cm x 2
Speaker Impedance	: 4Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: 80dB
Max Supported	
USB/mSD Memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 3.5h
Playback time	: 8h*
Product Dimension	
(WxD xH)	: 15.8 x 15.9 x 35.2 cm
Net. Weight	: 1.3kg

** at 70% Volume (LED off)*

Package Contents:

Speaker	: 1 U
Charging cable	: 1 U
Wireless Mic	: 1 U
QR Code Guide	: 1 U

Button Description:

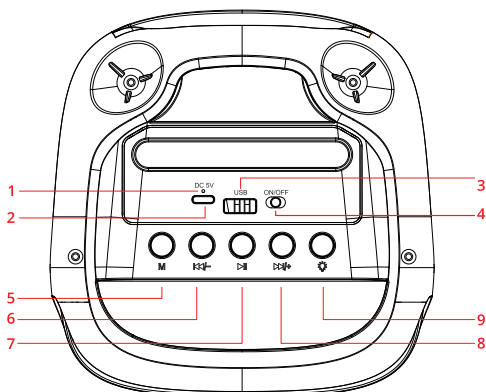

1. Charging LED Indicator

2. Type-C Charging Port

3. USB Slot

4. Power On | Off Toggle switch

5. Mode Button

6. Previous Track | Volume Decrease Button

7. Play | Pause Button

8. Next Track | Volume Increase Button

9. RGB Mode Button

Instructions for Use :

Button Functions :

- Turn ON | OFF the Speaker using the Power Toggle on top of the Speaker.
- Press the M button to switch the desired Modes of the Speaker.
- Press ►|| Button to play track or pause track being played.
- Short press the ◀◀/ - button to navigate to the previous sound track. Long Press the button to Decrease the Volume of the Speaker.
- Short press the ▶▶/ + button to navigate to the next sound track. Long Press the button to Increase the Volume of the Speaker.
- Use the 💡 Button to change the RGB Lighting Modes of the Speaker.

General Instructions :

Bluetooth connectivity

When the speaker is in BT mode, scan for nearby bluetooth devices on your phone and connect with the device named **ZEB-Buddy 140**.

USB Mode

Once a USB is inserted, the speaker will detect & automatically start playing songs from the USB.

FM Radio Mode

Short press **M** button to switch to FM mode. Once the speaker is in FM mode, short press the **▶|** button once to start scanning for FM channels. Once scanning is complete, short press the **◀◀/-** or **▶▶|/+** button to change the channels.

Charging Instruction

Connect the charging cable to a DC 5V Adapter. A Red LED would glow while charging & the LED would turn OFF once charging is complete.