

 ZEBRONICS

Portable BT Speaker

ZEB **BUDDY**
150



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-BUDDY 150** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Turn off the speaker when it is not in use.

To know more about Terms and conditions for warranty policy, please visit :

<https://zebronics.com/pages/warranty-policy>

Features:

- 40W RMS
- Upto 5h* Backup
- Dual 10.16cm Drivers
- Karaoke Function
- Wireless Mic
- RGB LED Lights
- BT v5.3 | USB | mSD
- 6.3mm Microphone Input
- Volume & Media control
- Mobile Holder
- Type C charging
- Carry Handle
- FM Radio

Specifications:


| | |
|--------------------------------------|-----------------------|
| Model No | : ZEB-KSPK 7 |
| Output Power (RMS) | : 40W |
| BT Version | : v5.3 |
| Driver Size | : 10.16cm x 2 |
| Speaker Impedance | : 4Ω |
| Frequency Response | : 20Hz-20KHz |
| S/N Ratio | : ≥80dB |
| Max Supported USB/mSD Memory size | : 32GB |
| Supported Audio formats | : MP3 |
| Charging time | : 4h |
| Playback time | : 5h* |
| Product Dimension (WxD xH) | : 18.8 x 18.9 x 42 cm |
| Net. Weight | : 1.9kg |

** at 70% Volume (LED off)*

Package Contents:

| | |
|----------------|-------|
| Speaker | : 1 U |
| Charging cable | : 1 U |
| Wireless Mic | : 1 U |
| QR Code Guide | : 1 U |

Button Description:

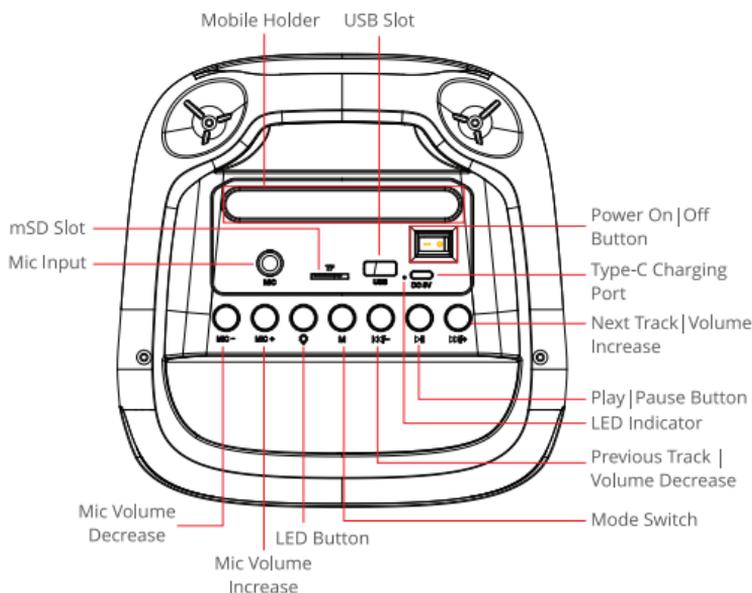

Instructions for Use:

Button Functions:

- Turn ON | OFF the Speaker using the Power Switch on top of the Speaker.
- Press the Mode button to switch the desired Modes of the Speaker.
- Press Play | Pause Button to play track or pause track being played.
- Short press the Next | Previous Track Button to toggle between the media content. Long Press the button to Increase | Decrease the Volume of the Speaker.
- Use the MIC Volume Increase | Decrease button to Increase | Decrease the MIC Volume.
- Use the LED Button to change the RGB Lighting Modes of the Speaker.

General Instructions:

Bluetooth connectivity

When the speaker is in BT mode, scan for nearby bluetooth devices on your phone and connect with the device named **ZEB-Buddy 150**.

USB Mode

Once a USB is inserted, the speaker will detect & automatically start playing songs from the USB.

Micro SD Mode

Once the micro SD card is inserted, the speaker will detect & automatically start playing songs from the micro SD card.

Charging Instruction

Connect the charging cable to a DC 5V Adapter. A Red LED would glow while charging & the LED would turn OFF once charging is complete.

