

 ZEBRONICS

PORTABLE BT SPEAKER

BBUDDY
Z600



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-BUDDY 600** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid self-disassemble of the product as it results in the failure of Warranty.
- Turn off the speaker if the speaker is not being used for a long period of time.
- Please charge the product with power adapter output rated voltage DC 5V.

Features

Wireless BT

Supports USB & mSD

Built-in FM Radio

AUX

LED Display

TWS Function

6.3mm Microphone input

Media/Volume control

Built-in Rechargeable battery

Wireless MIC

RGB Lights with control Switch

Specifications

Output Power (RMS)	: 40W
BT Version	: v5.0
Driver Size	: 16.51cm x 2
Speaker Impedance	: 4Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥ 80dB
Max Supported USB/mSD memory size	: 32GB
FM Frequency range Supported	: 87.5 MHz - 108 MHz
Audio formats	: Mp3
Charging time	: 4H
Playback time	: 5H*
Product Dimension (W x D x H)	: 240 x 187 x 570 mm
Net. Weight	: 2.83 kg

Package Contents:

Speaker	: 1 unit
Wireless MIC	: 1 unit
Charging/ 3.5mm AUX cable	: 1 unit

* at 50% volume (with LED off)

Instruction for Use:

Button Function:

1. Press the “**M**” button to change the input mode of the speaker.
2. Short press the “ **Prev/Next** ” button to change the PREV/ NEXT track or channel when in BT/USB mode or FM mode respectively.
3. Long press the “ **Prev/Next** ” button to increase/decrease the speaker volume.
4. Short Press the “ **Play/Pause** ” button to Play/Pause the track being played.
5. Long Press the “**Play/Pause**” button to RGB lights On/Off.

General Instructions

BT mode

1. Power ON the speaker, press “**M**” button to switch to BT Mode.
2. Switch ON BT on your phone or tablet and search for nearby BT devices.
3. Search for the BT name “**ZEB-BUDDY 600**” and tap to connect it.
4. In LED display the blinking “**Blue**” indication changes to stable, once BT is successfully paired.

USB/micro SD mode

Connect the USB/ micro SD card device to the respective ports of “**ZEB-BUDDY 600**” and the speaker would automatically start playing from the USB/ micro SD card device.

AUX mode

Connect the speaker to an audio source (phone, TV, PC) using Charging/3.5mm AUX cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source. Use button **"Play/Pause"** to Mute/Unmute song. Long press **"Prev/Next"** button to change the volume. Other buttons doesn't work.

FM Radio mode

Short press **"M"** button can switch to FM mode. Once the speaker is in FM mode, short press the **"Play/Pause"** button once to start scanning for FM channels. Once scanning is complete, short press the **"Prev/Next"** button to change the channels.

RGB Light

Long Press the **"Play/Pause"** button to turn RGB lights On/Off.

TWS(True Wireless Stereo) function

When two speaker are in Bluetooth mode, long press button **"M"** of one speaker to enter TWS mode, It will search and connect with another speaker automatically, when two speakers connected successfully, you can control two speaker at the same time.

***Note:** Requires two speakers for TWS feature*

Charging the Speaker:

1. Connect the micro USB charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter.
2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

