




Portable BT Speaker  
ZEB **CLIPPER PRO**

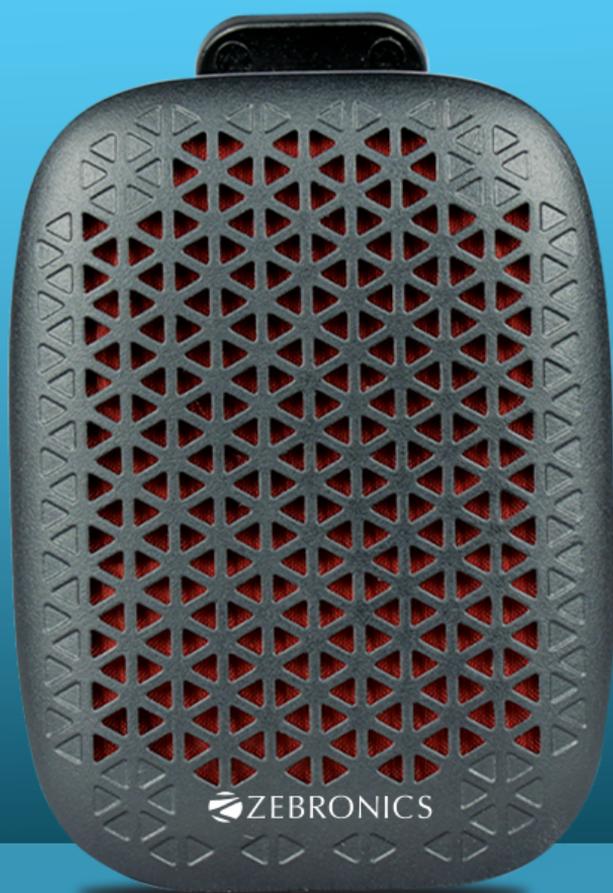

## User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the “**ZEB-CLIPPER PRO**” Portable BT Speaker. Please read this user manual carefully and keep it for future reference.

**Note:**

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

**Features:**

- BT v5.4
- Built-in Rechargeable Battery
- TWS Function
- Splash Proof
- Media/Volume Control
- Type-C Charging
- Call Function
- Compact design
- Magnetic Clip
- LED Indicator

## Specifications:


Model No.	: ZEB-PSPK 58
Output Power (RMS)	: 4W
BT Version	: v5.4
Driver Size	: 3.6 cm
Speaker Impedance	: 4Ω
Frequency Response	: 200Hz-20kHz
S/N Ratio	: ≥85dB
Supported Audio formats:	MP3
Charging time	: 2h
Playback time	: 6h*
Product Dimension	: 5 x 3 x 7.4 cm
Net. Weight	: 77g

## Package Contents:

Speaker	: 1 U
QR Code Guide	: 1 U
Charging cable	: 1 U

*\* at 80% volume*

## Button Inscription:

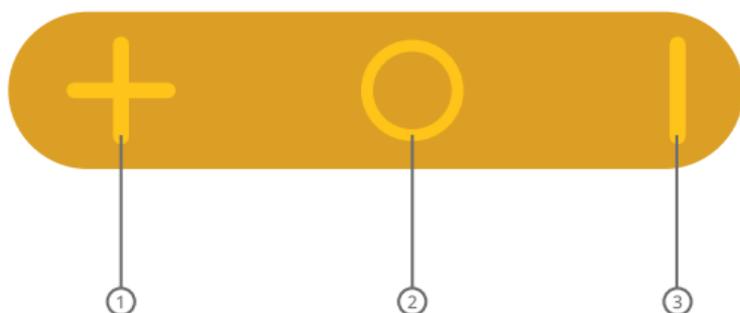

### 1. Volume increase/ Next Track

- Long Press this button to change into Next Tracks.
- Short Press this button to Increase the Volume Level.


### 2. MFB Button

- Short Press this button to Play/Pause the Tracks.
- Long press this button to Power On/Off the speaker.
- During the call short press to attend the incoming call and cut the call, and Double Press this button to reject the incoming call.


### 3. Volume decrease/ Previous

- Long Press this button to change into Previous Tracks.
- Short Press this button to Decrease the Volume Level.

## LED Indicator

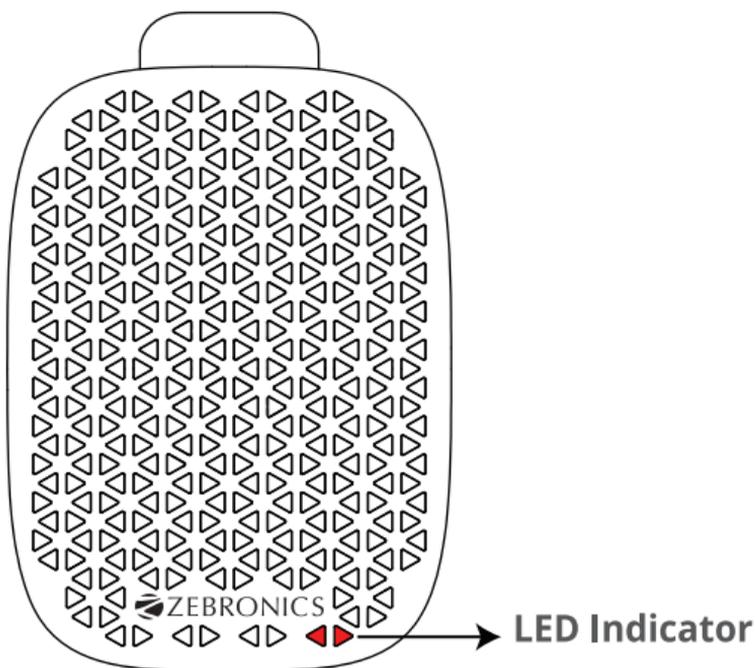

## Port Inscription

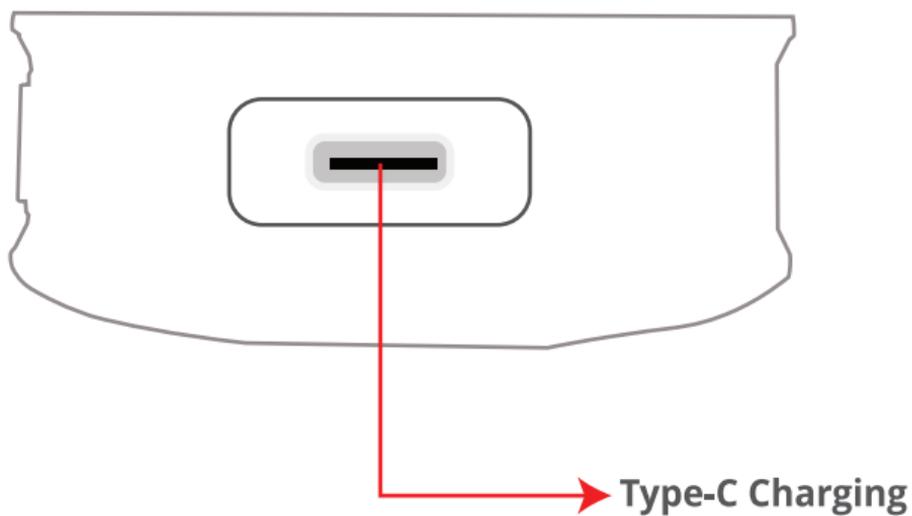

## General Instructions

### BT Mode

- Power ON the speaker.
- Turn On the BT on your device and search for nearby BT devices.
- Search for the BT Name **“ZEB-ClipperPro”** and tap to connect it.

### TWS Connectivity

- Turn on both “ZEB-CLIPPER PRO” Speakers in BT Mode.
- Double press the MFB Button in any one of the speakers to get into the TWS Mode.
- After a few seconds both the speakers will be connecting successfully.
- Now search for the nearby BT Devices in your mobile phones or other source device and tap on BT name **“ZEB-ClipperPro”** to connect.

### **Note:**

- *Requires two ZEB-CLIPPER PRO speakers for using TWS Mode.*

## **Charging the Speaker**

- Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter.
- Red LED glows, indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

