



ZEBRONICS  
ALWAYS AHEAD

Portable BT Speaker  
ZEB **COUNTY 3**



User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing **ZEB-COUNTY 3** BT speaker. Please read this user manual carefully before operation & save it for future reference.

**Note:**

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adaptor output rated voltage 5V DC.

**Features:**

Wireless BT

Supports USB & mSD card

Built-in FM Radio

AUX Input

Call function

Media / Volume control

Built-in Rechargeable battery

**Specification:**

Output power (RMS) : 3W

BT Version : 5.0

Driver Size : 5.7cm

Speaker Impedance : 3Ω

Frequency Response : 120Hz-15kHz

S/N Ratio : ≥68dB

Max. Supported USB/mSD  
memory size : 32GB

## Supported

Audio formats : Mp3

Charging time : 2H


Playback time : 10H\*

Product dimension : 145 x 90 x 135 mm  
(W x D x H)

Net. weight : 292g

*\* at 50% volume level*

## Button Description:

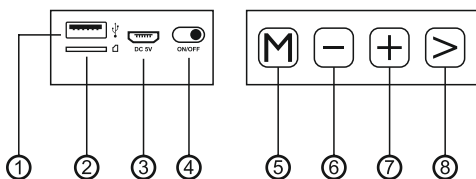

## Button Instructions:

Functions	Button
1	USB Port
2	MICRO SD Card slot
3	DC 5V Charging Port
4	ON/OFF switch
5	Mode Change Button
6	Vol- / Prev. Track / Prev. Fm Channel
7	Vol+ / Next Track / Next Fm Channel
8	Pause / Play; Scan Fm Channel / Answer / Reject / End The Call

## Instructions for Use:

### Button functions

1. Press the **M** button to change the input mode of the speaker.
2. Short press the **+/-** button to change the NEXT/PREV. track or channel when in BT mode or FM mode respectively.
3. Long press the **+/-** button to increase / decrease the speaker volume.
4. Press the **▶** button to Play / Pause the track being played.
5. During calls, press the **▶** button to attend / end a call. Long press the **▶** button to reject an incoming call.

## **Charging the Speaker**

1. Connect the USB charging cable to the DC 5V Charging port of the speaker and insert the other end into a USB power source/adapter.
2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

## **Pairing your device with Bluetooth Speaker**

1. Power ON the speaker until you hear the indication tone for Bluetooth mode.
2. Blue LED indicates that your speaker is now ON and is in pairing mode.
3. Switch ON BT on your phone or tablet and search for nearby BT devices.
4. Search for the BT name **"ZEB-COUNTY 3"** and tap to connect it.

## **Micro SD / USB mode**

Connect the Micro SD card / USB device to the respective ports of **ZEB-COUNTY 3** and the speaker would automatically start playing from the Micro SD card/USB device.

## **AUX mode**

Connect the speaker to an audio source (phone, TV, PC) using the micro USB to 3.5mm cable provided in the box. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

## FM Radio mode

Once the speaker is in FM mode, press the ► button once to start scanning for FM channels. Once scanning is complete, press the +/- button to change the channels. Connect the micro USB cable to the micro USB port of the speaker, which acts as antenna for better signal.

## TWS Connectivity

T.W.S. mode requires two units of **ZEB-COUNTY 3** speakers. after entering the BT mode, long press the **M** button (on either of the two speakers) after which, a pairing tone will be heard, indicating the inter-connection between the two speakers. Now check the phone's BT setting for **ZEB-COUNTY 3** and connect It to experience True Wireless Stereo.

