



Portable BT Speaker
ZEB COUNTY100



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-COUNTY 100** Portable BT Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltage DC 5V.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- 10W RMS
- Upto 8h* backup
- BT v5.3 | USB | mSD
- Dual Wireless MICs with Detachable MIC Holder
- Karaoke Maker & Voice Changing Modes
- Mic With Integrated Control
- Type-C Charging
- Carry Handle
- Media / Volume control
- Built-in Battery

Specifications:


Model No.	: ZEB-PSPK 84
Output Power (RMS)	: 10W
BT Version	: v5.3
Driver Size	: 5.7 cm
Speaker Impedance	: 3.4Ω
Frequency Response	: 80Hz-18kHz
S/N Ratio	: ≥75dB
Max Supported	
USB/mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 2.5h
Playback time	: 8h*
Product Dimension (W x	
D x H) (without MICs)	: 15 x 6.8 x 11.8 cm
Net. Weight (without MICs)	: 311g

** at 70% volume*

Package Content:

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U
Wireless MIC	: 2 U
Mic Holder	: 1 U

Button & Port Description:

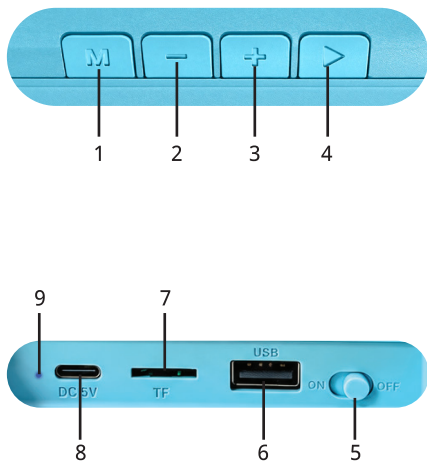

1. Mode Control
2. Volume - / Previous Track
3. Volume + / Next Track
4. Play & Pause
5. Power Switch
6. USB Port
7. mSD card slot
8. Type-C charging port
9. LED indicator

Instructions for Use:

- Slide the power switch to turn the speaker ON or OFF.
- Short press "-" button to decrease the volume & long press to skip to the previous track/ channel.
- Short press "+" button to increase the volume & long press to skip to the next track/ channel.
- Short press "M" button to switch between the modes.
- Short press "▶" button to Play or pause the track.

BT Mode:

- Power ON the speaker.
- Turn ON BT on your Source Device and search for nearby BT devices.
- Search for the BT name **ZEB-COUNTY 100** and tap to connect it.


mSD Mode:

Connect the mSD device to the respective ports and the speaker would automatically start playing from the mSD device.

USB Mode:

Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

Microphone Functions:

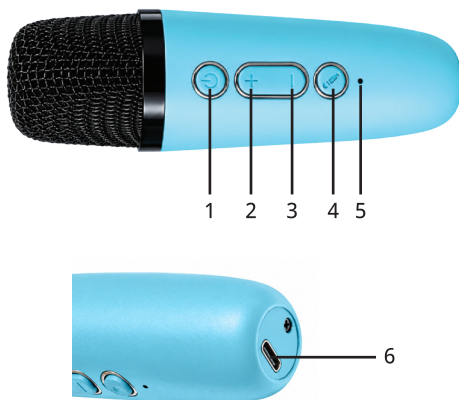

1. Power On/off, MIC on/off
2. MIC volume increase /Next track
3. MIC volume decrease / Previous Track
4. MIC voice changer / Karaoke maker
5. LED indicator
6. Type-C charging Port

Microphone function:

- Long press the "⏻" button for 2 seconds to turn the microphone On/Off.
- Single press the "⏻" button to turn off the mic but function is working.
- Single press the (+, -) buttons to adjust the microphone's volume.

- Long press the (+ , -) buttons to change tracks (Next / Previous).
- Single press the  button to karaoke mode turn on/off.
- Long press the  button to switch between 5 preset voice effects:
Neutral Mode, High pitch Mode 1, High pitch Mode 2, Sound monster Mode, Echo Mode

LED indications:

Speaker:

- Blue light blinks - BT discovery mode
- Blue light glows constant - BT paired successfully
- Red light glows - Charging
- Red light turns off - Fully charged

Microphone:

- Blue light blinks- Discovery mode
- Blue stable - Connected

Charging the Speaker

- Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter.
- Red LED glows, indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

