



Portable BT Speaker

**ZEB COUNTY 10**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the “**ZEB-COUNTY 10**” Portable BT Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembly of the product or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltage DC 5V.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

### **Features:**

16W RMS Output

upto 5h\* backup

Dual 5.2cm Drivers

Deep Bass

Passive Radiator

TWS Functon

8 RGB color modes

BT v5.3 | USB | mSD

Call Function

Media | Volume control

Type-C Charging

Built-in Rechargeable Battery

Carry Handle



## Specification

Model No	: ZEB-PSPK 67
Output Power (RMS)	: 16W (8W + 8W)
BT Version	: v5.3
Driver Size	: 5.2cm x 2
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-18kHz
S/N Ratio	: ≥70dB
Max Supported USB/mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 3.5h
Playback time	: 5h*
Product Dimension (W x D x H)	: 20.6 x 8.6 x 13.5 cm
Net. Weight	: 526g

## Package Contents

Speakers	: 1 U
Charging Cable	: 1 U
QR code Guide	: 1 U

## Buttons and Ports Description

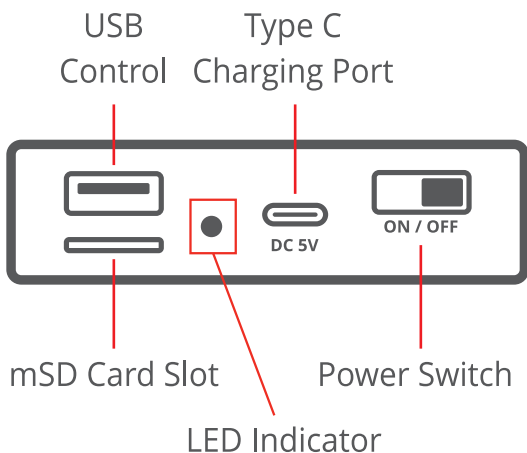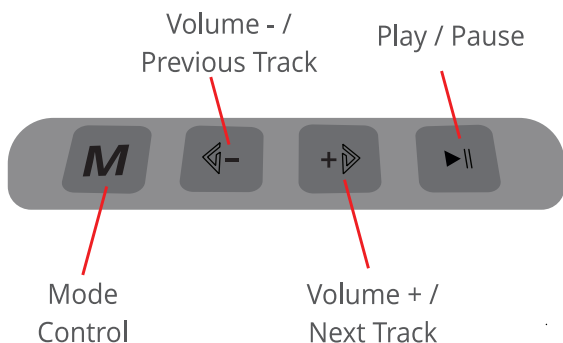



## Instructions for Use:

- Slide the Power button to ON/OFF the speaker.
- Short press “ +▶ ” to increase the volume by one level. Long press to skip to the next track / channel.
- Short press “ ◀- ” button to decrease the volume & Long press to skip to previous track / channel.
- Short Press “ M ” to switch between the input modes.
- Short press “ ▶|| ” to Play or Pause the Track, and Long press to connect TWS.
- Long press “ M ” to switch between the LED modes

## BT Mode:

- Power ON the speaker.
- Turn ON BT on your source device and search for nearby BT devices.
- Search for the BT name **"ZEB-COUNTY 10"** and tap to connect it.

## mSB Mode:

Connect the mSD device to the respective ports and the speaker would automatically start playing from the mSD device.

## USB Mode

Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

## **Charging the Speaker**

- Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter.
- Red LED glows, indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

