



Portable BT Speaker
COUNTY 3



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-COUNTY 3** BT speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adaptor output rated voltage 5V DC.

Features:

Wireless BT

Supports USB & mSD card

Built-in FM Radio

Call function

Media / Volume control

Built-in Rechargeable battery

Specification:

Output power (RMS) : 3W

BT Version : 5.0

Driver Size : 5.7cm

Speaker Impedance : 3Ω

Frequency Response : 120Hz-15kHz

S/N Ratio : ≥68dB

Max. Supported


USB/mSD memory size : 32GB

Supported

Audio formats : Mp3
Charging time : 2.5H
Playback time : 12H*
Product dimension : 14.5 x 7 x 12 cm
(W x D x H)
Net. weight : 270g

** at 50% volume level*

Button Description:

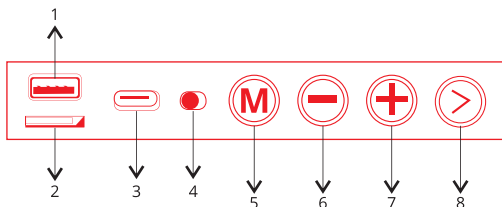

Button Instructions:

Functions	Button
1	USB input Port
2	MICRO SD Card slot
3	Type C Charging port
4	ON/OFF switch
5	Mode Change / TWS
6	Vol- / Prev. Track / Prev. Fm Channel
7	Vol+ / Next Track / Next Fm Channel
8	Pause / Play; Scan Fm Channel / Answer / Reject / End The Call & Redial

Instructions for Use:

Button functions:

- Press the M button to change the input mode of the speaker
- Short press the "+/-" button to change the NEXT/PREV. track or channel when in BT mode or FM mode respectively
- Long press the "+/-" button to increase / decrease the speaker volume.
- Press the ► button to Play/Pause the track being played.
- During calls, press the ► button to attend / end a call. Long press the ► button to reject an incoming call.
- Double press the ► to Re-dial last number.

Charging the Speaker

- Connect the USB charging cable to the DC 5V Charging port of the speaker and insert the other end into a USB power source/adapter.
- Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

Bluetooth Instructions:

- Make sure you are in BT discovery mode.
- In your source device settings, search for the BT name "ZEB-County 3"
- Once the BT name is visible in the settings, tap on it and click pair.

- Single press ">" button to play or pause the playback.
- Single press the "+/-" buttons skip tracks.
Long press "+/-" buttons to increase/decrease volume
- Single press the "+/-" buttons skip tracks.
Long press "+/-" buttons to increase/decrease volume.

USB/Micro SD Instructions:

- This mode activates upon inserting the drive into its respective ports.
- The supported file formats starts to play.
Single press ">" button to play or pause the playback.
- Single press the "+/-" buttons skip tracks.
Long press "+/-" buttons to increase/decrease volume.

FM Radio mode

Once the speaker is in FM mode, press the  button once to start scanning for FM channels. Once scanning is complete, press the +/- button to change the channels.



TWS Connectivity

T.W.S. mode requires two units of **ZEB-COUNTY 3** speakers. after entering the BT mode, long press the “M” button (on either of the two speakers) after which, a pairing tone will be heard, indicating the inter-connection between the two speakers. Now check the phone’s BT setting for **ZEB-COUNTY 3** and connect it to experience True Wireless Stereo.

