



Portable BT Speaker
ZEB COUNTY7



User Manual

www.zebronoics.com

Thank you for purchasing the **“ZEB-COUNTY 7”** Portable BT Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.3 / FM/ USB / mSD card
- Call function
- Media / Volume control
- TWS Function
- Carry Loop
- RGB LED lights
- Built-in Rechargeable battery

Specifications:


Model No.	: ZEB-PSPK 40
Output Power (RMS)	: 8W
BT Version	: v5.3
Driver Size	: 5 cm
Speaker Impedance	: 3Ω
Frequency Response	: 120Hz-15kHz
S/N Ratio	: ≥87dB
Max Supported USB/mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 4h
Playback time	: 15h*
Product Dimension (W x D x H)	: 14.4 x 8 x 4.1cm
Net. Weight	: 270g

** at 50% volume(LED off)*

Package Content:

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U

Button & Port Description:

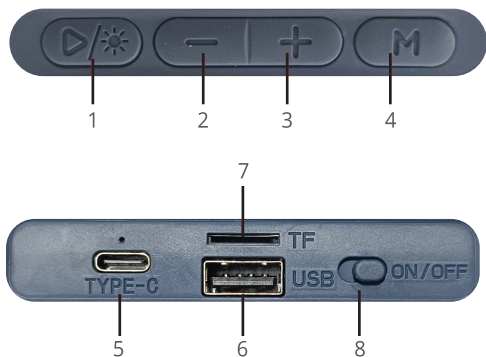

1. Play / Pause / LED Modes
2. Volume Down/ Previous Track or Channel
3. Volume Up/ Next Track or Channel
4. Mode
5. Type-C Port
6. USB input
7. mSD input
8. ON/OFF Switch

Instructions for Use:

BT Mode:

1. Power ON the speaker and make sure it is in Bluetooth mode.
2. Switch ON BT on your phone or tablet and search for nearby BT devices.
3. Search for the BT name "**ZEB-COUNTY 7**" and tap to connect it.

Micro SD / USB mode:

Connect the Micro SD card / USB device to the respective ports of **ZEB-COUNTY 7** and the speaker would automatically start playing from the Micro SD card/USB device.

AUX mode:

Connect the speaker to an audio source device using the 3.5mm cable provided in the box. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

FM Radio mode:

Short press the mode button to switch the speaker to FM mode. Long press the +/- button to change the channels.

TWS Connectivity:

After entering the BT mode, long press the "M" button (on either of the two speakers) after which, a pairing tone will be heard, indicating the inter-connection between the two speakers.

Now check the phone's BT setting for **ZEB-COUNTY 7** and connect it to experience True Wireless Stereo.

Charging the Speaker:

1. Connect the USB charging cable to the DC 5V Charging port of the speaker and insert the other end into a USB power source /adapter.
2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

