



Portable BT Speaker

NEB COUNTY NEB PLUS



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-COUNTY PLUS** Portable BT Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the use of this product at the high-temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adapter output rated voltage DC 5V.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

BT v5.3

USB | mSD

FM Radio

TWS Function

Call Function

Dual 5.2cm Drivers

Deep Bass

Passive Radiator

Upto 16h* Backup

8W RMS Output

Type-C Charging

Built-in Rechargeable Battery

Specifications:



Output Power (RMS)	: 8W (4W + 4W)
BT Version	: 5.3
Driver Size	: 5.2cm x 2
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-18kHz
S/N Ratio	: ≥70dB
Max. Supported USB/mSD Memory Size	: 32GB
Supported Audio Formats	: MP3
Charging Time	: 3h
Playback Time	: 16h*
Product Dimension (Dia x H)	: 20.5 x 8 x 12 cm
Net. Weight	: 447g

** at 50% Volume*

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U

Buttons and Ports Description

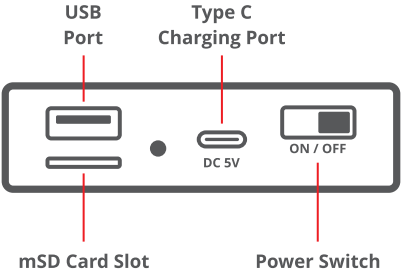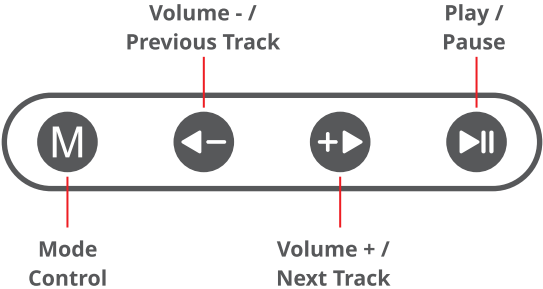

Instructions for Use:

Slide the Power button to ON/OFF the speaker.

- Short press “ +▶ ” to increase the volume by one level. Long press to skip to the next track / channel.
- Short press “ ◀- ” button to decrease the volume & Long press to skip to previous track / channel
- Short Press “ M ” to switch between the modes
- Short Press “ ▶|| ” to Play or Pause the Track.

BT Mode

- Power ON the speaker.
- Turn ON BT on your Source Device and search for nearby BT devices.
- Search for the BT name **ZEB-COUNTY PLUS** and tap to connect it.

mSD Mode

Connect the mSD device to the respective ports and the speaker would automatically start playing from the mSD device.

USB Mode

Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

FM Radio Mode

- Short press “**M**” button to Switch to FM mode & Short Press “▶||” button to scan the FM channel.
- Once the Scanning is done, the speaker will automatically play the first channel.

Charging the Speaker

- Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter.
- Red LED glows, indicating that the battery is being charged. The LED will turn Green once it is fully charged.

