



Portable BT Speaker
ZEB COUNTY *Smart*



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-COUNTY SMART** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Turn off the speaker when it is not in use. To know more about Terms and conditions for warranty policy, please visit :

<https://zebronics.com/pages/warranty-policy>

Features:

- Upto 8h* backup
- RGB LED Light
- TWS Function
- Passive Radiator
- Carry Handle
- BT v5.3 | USB
- Type-C Charging
- Built-in battery

Specifications:


Model No	: ZEB-KJSPK 7
BT Version	: 5.3
Driver Size	: 5.7cm
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥80dB
Max Supported	
USB Memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 2.5h
Playback time	: 8h*
Product Dimension	
(W x D x H)	: 11.2 x 9.2 x 14 cm
Net. Weight	: 338g

** at 70% Volume (LED off)*


Package Contents:

Speaker	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U

Button Description:

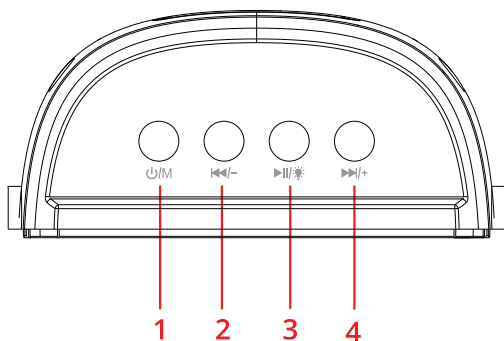

1. Power | Mode Button
2. Previous Track | Volume Decrease Button
3. Play | Pause | RGB Mode Button
4. Next Track | Volume Increase Button

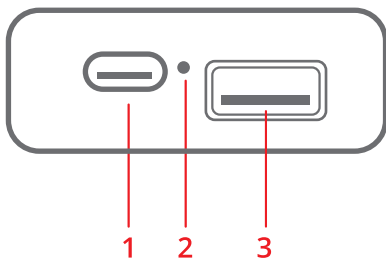

1. Type-c Charging port
2. Charging LED Indicator
3. USB Slot

Instructions for Use :

Button Functions :

- Long press to Turn ON | OFF the speaker using the  Button of the Speaker. Single Press the  Button to switch the desired Modes of the Speaker.
- Single Press  Button to play or pause track being played. Long press the same Button to ON|OFF the RGB Lights of the speaker. Double press to activate the TWS function.
- Single press the - Button to navigate to the previous sound track/channel. Long Press to the same button to Decrease the volume of the Speaker.
- Single press the /+Button to navigate to the next sound track/channel. Long press the same button to increase the volume of the speaker.

General Instructions :

BT connectivity

When the speaker is in BT mode. Switch ON BT on your phone or tablet and search for the nearby BT devices. Search for the BT name "**ZEB-CountySmart**" and tap to connect it.

USB Mode :

Connect the USB drive to the USB port. The speaker will automatically detect the USB drive and start playing the available audio files.

FM Radio Mode :

- Once the speaker is turned ON, Switch the speaker to FM mode using the Mode button.
- Once the speaker is in FM mode then Single press the play|Pause Button to scan between different channels.
- Single Press the Play/Pause Button to play/Pause the channels.

TWS Function :

- Turn ON two ZEB-CountySmart speakers you want to pair.
- Double press the  button speaker to activate TWS mode.
- After a few seconds, both the speakers will be connected successfully.
- Now search for a nearby BT device from your mobile and tap on the BT name **"ZEB-CountySmart"** to connect.
- To exit TWS mode, Single press the MODE button again.
- *Note: Requires two ZEB-CountySmart speakers for TWS feature.*

Charging Instruction :

- Connect the charging cable to the Type-C Charging Port of the speaker and insert the other end into a DC 5V charging power source/adaptor.
- Red LED glows indicating that the battery is being charged.
- After full charge the Red LED will goes OFF

