

# Portable BT Speaker 40



**User Manual** 

www.zebronics.com

Thank you for purchasing **ZEB-DAWN 40** BT speaker. Please read this user manual carefully before operation & save it for future reference.

#### Note:

- Avoid the use of this product at the hightemperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltage DC 5V.

### Features:

BT v5.1
Supports USB & mSD card
Built-in FM Radio
AUX Input
TWS Function
Call Function
Media / Volume control
Built-in Rechargeable battery

# **Specifications:**

 $\begin{array}{lll} \text{Output power (RMS)} & : 8W \\ \text{BT version} & : 5.1 \\ \text{Driver Size} & : 4.5 \text{cm} \\ \text{Speaker Impedance} & : 4\Omega \\ \end{array}$ 

Frequency response : 100Hz-20kHz

S/N ratio : ≥90dB

Max. supported

USB/mSD memory size : 32GB

Supported

audio formats : MP3, WAV

Charging time : 3h Playback time : 15h\*

Product dimension : 8.7 x 11.2 cm


(Dia x H)

Net. weight : 305g

# **Package Contents**

Speaker : 1 U
Charging Cable : 1 U
Input Cable : 1 U
QR Code Guide : 1 U

## **Buttons and Ports**

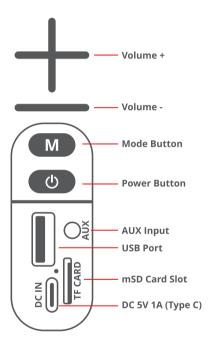

## **Button Functions**

- 1. Short press the "+/-" button to change the NEXT/ PREV track or channel when in BT /USB/mSD mode or FM mode respectively.
- 2. Long press the "+/-" button to increase/ decrease the speaker volume.
- 3. Single press the "**M**" button to change the input mode of the speaker.
- 4. Double press the "**M**" button to change the LED modes of the speaker.
- 5. Triple press the "**M**" button for TWS Function.
- 6. Long press the "M" button to Turn off LED.
- 7. Single press power button to Play/Pause track or channel when in BT /USB/mSD mode or FM mode respectively.
- 8. Long press power button to power ON/OFF the speaker.

# Instructions for Use: Charging the Speaker

- 1. Connect the Type-C charging cable to the DC 5V 1A charging port of the speaker and insert the other end into a USB power adaptor.
- 2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

## **BT Mode**

- 1. Switch the Input mode to BT on your "**ZEB-DAWN 40**".
- 2. Turn ON BT on your mobile phone or tablet and search for nearby BT devices.
- 3. Search for the BT name "**ZEB-DAWN 40**" and tap on it to pair the speaker.

## **USB/Micro SD Mode**

Connect the USB/ micro SD card device to the respective ports of "**ZEB-DAWN 40**" and the speaker would automatically start playing from the micro SD card/USB device. If necessary you can single press the **M** button.

## **AUX Mode**

Connect the speaker to an audio source (phone, TV, PC) using 3.5mm cable. Once connected, the speaker switches to the AUX mode and thereafter audio can be streamed via the speaker from the connected source. If necessary you can single press the **M** button.

## **FM Radio Mode**

Switch to FM mode and long press the "**M**" button to scan for the available FM Channels. Once the Scanning is done, the first scanned channel will start playing. Use Next/Previous button to access scanned channels.

## **Call Function**

BT should be connected with a mobile phone. During a call, single press on the "Power" button to answer the call or double press on the "Power" button to reject the call. To Redial a call, double tap on the power button to dial to the last caller.

## TWS (True Wireless Stereo) function

When two speakers are in Bluetooth mode, Triple press the "**Mode**" button on one of the speaker to enter TWS mode, It will search for the nearby speakers and pairs with another speaker automatically, when two speakers connected successfully, you can control two speakers at the same time.

**Note:** Buy another **ZEB-DAWN 40** for true wireless stereo (TWS) setup.

ISO 9001:2015 Certified Company www.zebronics.com