



Portable BT Speaker

ZEB **DELIGHT** 30



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-DELIGHT 30** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Turn off the speaker when it is not in use.

To know more about Terms and conditions for warranty policy, please visit :

<https://zebronics.com/pages/warranty-policy>

Features:

- 8W RMS Output
- Upto 7h* backup
- BT v5.4 | USB | mSD
- TWS Function
- 7 RGB Modes
- Call Function
- Carry Loop
- Type-C Charging
- Built-in Rechargeable Battery

Specifications:


Model	: ZEB-PSPK 76
Output Power (RMS)	: 8W
BT Version	: v5.4
Driver Size	: 5.2cm
Speaker Impedance	: 3Ω
Frequency Response	: 150Hz-10kHz
S/N Ratio	: ≥86dB
Max Supported USB memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 4h
Playback time	: 7h*
Product Dimension (WxD xH)	: 17.5 x 7.1 x 7.5 cm
Net. Weight	: 380g

** at 70% Volume (LED off)*

Package Contents:

Speaker	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U

Product Description:

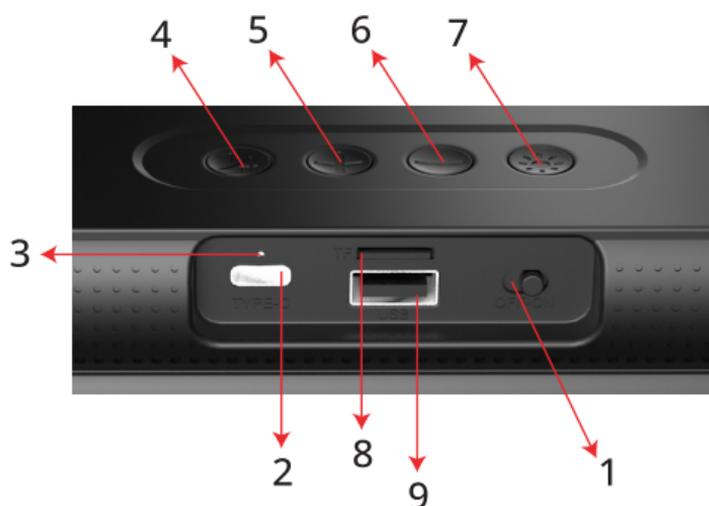

1. On | Off Switch
2. Type-C Charging Port
3. Charging and Pairing Indicator
4. Play/Pause Button | Mode Switch
5. Volume Increase
6. Volume Decrease
7. RGB Mode Switch | Long Press to Redial
8. mSD Card Slot
9. USB Drive Slot

Instructions for Button Use :

+ Short press to change next track / channel, long press to increase the volume.

- Short press to change previous track / channel, long press to decrease the volume.



Short Press to change the RGB Modes, Long Press the button for TWS Pairing & Double Press to Unpair | Re-pair the Speaker.



Short Press to Play/Pause the Media & Answer. Hang up the calls, Long Press to switch between the Modes & Double Press to Redial.

General Instructions:

Bluetooth connectivity

When the speaker is in BT mode, scan for nearby bluetooth devices on your phone and connect with the device named ZEB-Delight 30.

USB Mode

Once a USB is inserted, the speaker will detect & automatically start playing songs from the USB.

Micro SD Mode

Once the micro SD card is inserted, the speaker will detect & automatically start playing songs from the micro SD card.

FM Connectivity

- Switch the speaker to FM mode using the mode (M) button.
- Connect the micro USB cable to the speaker and leave the other end open (this act as the FM antenna).
- Press the Play/Pause button once to scan the FM Channels.
- Once the scanning is done, the speaker will start playing from first saved channel.
- To Change the channels you can use the +/- buttons

TWS Mode

Turn on both ZEB-DELIGHT 30 Speaker. Make sure that the speakers are in BT mode. Long Press the RGB Mode Button on any one of the speakers to activate TWS mode.

Now, the speaker will automatically connect to each other.

Now, search for nearby BT devices in your mobile and tap on the BT name ZEB-DELIGHT 30 to connect.

Charging Instruction

Connect the charging cable to a DC 5V Adapter /
A red LED would glow while charging & the LED
would turn OFF once charging is complete.

