



ZEB Mini Soundbar
ZEB **DELIGHT** *pro*



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing “ZEB-Delight Pro” BT speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the use of this product at the high-temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adaptor output rated voltage DC 5V.*

Features

Wireless BT

Supports USB & mSD card

Built-in FM Radio

AUX Input

Call Function

Media / Volume control

EQ Modes

Built-in Rechargeable battery

Touch Control

Remote Control

Wall Mountable

Dual Passive Radiators

LED Display

TWS Function

Specification


Output Power (RMS)	: 20W (10W +10W)
BT Version	: 5.0
Driver Size	: 52mm x 2
Speaker Impedance	: 4Ω
Frequency Response	: 100Hz-18kHz
S/N Ratio	: ≥70dB
Max Supported USB /mSD memory size	: 32GB
Supported Audio formats	: MP3, WAV, WMA
Charging time	: 4h
Playback time	: 10h*
Product Dimension	: 470 x 65 x 65mm (W x D x H)
Net. Weight	: 855g

Package Contents

Speaker	: 1 U
Remote Control	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U

**at 50% volume*

Button Description:

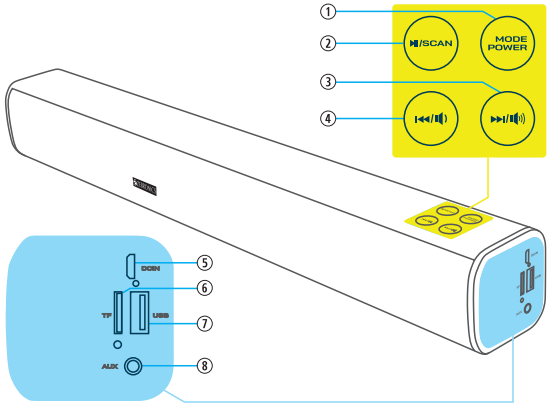

1. Mode Change (Short Press), Power On/Off (long Press)
2. Play/Pause (Short Press), Scan Channels in FM Mode (Long Press)
3. Next Track (Short Press), Volume + (Long Press)
4. Previous Track (Short Press), Volume - (Long Press)
5. DC 5V 1A (Micro USB)
6. mSD Card
7. USB
8. AUX

Instructions for Use:

Charging the Speaker

1. Connect the micro USB charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adaptor.
2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

BT mode

1. Switch the Input mode to BT on your “ZEB-Delight Pro”
2. Turn ON BT on your phone / tablet and search for nearby BT devices.
3. Search for the BT name “ZEB-Delight Pro” and tap to connect it.

USB/ micro SD mode

Connect the USB/ micro SD card device to the respective ports of “ZEB-Delight Pro” and the speaker would automatically start playing from the micro SD card/USB device.

AUX mode

Connect the speaker to an audio source (phone, TV, PC) using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

FM Radio mode

Switch to FM mode and long press the “SCAN” button to scan for the available FM Channels. Once the Scanning is done, the first scanned channel will start playing. Use Next/Previous button to access scanned channels.

Call Function

BT should be connected with a mobile phone.

During Call

- short press the “Play/Pause” button to answer/end the call
- long press the “Play/Pause” button to reject the call.

TWS(True Wireless Stereo) function

When two speaker are in Bluetooth mode, long press button “Play/Pause” on one of the speaker to enter TWS mode, It will search and connect with another speaker automatically, when two speakers connected successfully, you can control two speaker at the same time.

Note: *Requires two speakers for TWS feature*