



Portable BT speaker

ZEB **EchoGlow**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-ECHOGLOW** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it results in voiding the Product's warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- 16W RMS Output
- Upto 7h* backup
- 12 RGB Modes
- 15W(Max.) Wireless Charging
- Passive radiator
- TWS function
- In-built Clock Function with Alarm
- BT v5.4 | USB | mSD | AUX | FM Radio
- Call Function
- Type-C Charging
- Built-in Rechargeable battery
- Luminous Carry Handle

- Mobile Holder
- Over current/Over Voltage
Short Circuit / Over heat Protection
- FOD Support
- Rapid charge
- Fabric Finish

Specifications:

- Model : ZEB-PSPK 71
- Output Power (RMS) : 16W
- BT Version : v5.4
- Driver Size : 5.2cm
- Speaker Impedance : 4Ω
- Frequency Response : 20Hz-20kHz
- FM Frequency Response : 87.5-108MHz
- S/N Ratio : ≥83dB
- Max Supported
USB/mSD memory size : 32GB
- Supported Audio formats : MP3
- Charging time : 4h
- Playback time : 7h*
- Product Dimension
(WxD xH) : 23.4x11x13.6 cm
- Package Dimension
(WxD xH) : 22 x22 x41.3cm
- Net. Weight : 895g
- Country of Origin : PRC

** at 70% volume (LED off)*

Wireless Charging Specification:

- Input Power : 5V,2A/9V,3A
- Output Power : 5V,1A/9V,1.67A
- No.of Coils : 1
- Rapid Charging Function : Yes
- FOD Support
(Foreign Object Detection) : Yes
- Protection : Over current/
Over Voltage /
Short Circuit /
Over heat
Protection
- Maximum Mobile Size : 17.78cm
- Phone Holder : Yes

Package Content:


- Speaker : 1 U
- Charging cable : 1 U
- Input cable : 1 U
- QR Code Guide : 1 U

Button Description:



1. LED Carry Handle
2. Wireless Charging Pad
3. Clock Button
4. Alarm Button
5. LED Modes/Power Button
6. Mode / Play-Pause Button
7. Screen-On Time Button / TWS Button
8. Next Track / Next channel / Volume Increase Button
9. Previous Track / Previous channel / Volume Decrease Button

Port Description:

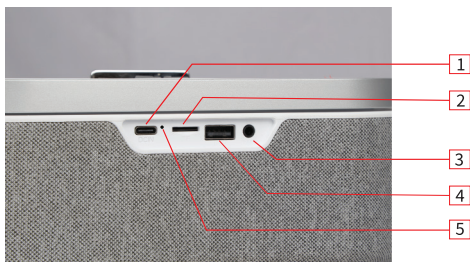

1. Type-C Charging
2. mSD Port
3. 3.5mm AUX Input
4. USB Port
5. LED Indicator

Instructions for Use:

BUTTON FUNCTIONS:

1. Long press the power switch " " to switch on or off the speaker. Short press the " " to change the LED Modes.
2. Long press the " " Button to switch the modes like BT/USB/FM/mSD/Ambient Sound modes. Short press the " " Button to Play/Pause the tracks & Scanning Function in FM Mode.

3. Single Press the " " Button for 'Next' Tracks/channel. Long Press the " " button to increase the volume.
4. Single Press the " " Button for 'Previous' Tracks/channel. Long Press the " " button to decrease the volume.
5. Single Press this " " Button to change the Screen-on Time of the Clock Function. Long press this " " button to TWS Function.

Call Function

BT should be connected with a mobile phone. During a call, short press the " " button to answer/end the call or long press the " " button to reject the call. Double press the " " button to re-dial the call.

BT Mode

- Power ON the speaker.
- Turn ON BT on your Source Device and search for nearby BT devices.
- Search for the BT name **ZEB-EchoGlow** and tap to connect it.

mSD Mode

- Connect the mSD device to the respective ports and the speaker would automatically start playing from the mSD device.

USB Mode

- Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

CLOCK Mode

1.Change the Time:

- When we turn ON the speaker we can see the Clock Function works automatically.
- To change the Time Manually Short Press the "" button it will show the blinking of "HH" then Press the "" to increase the value and Press this button "" to decrease the value. Once again Short Press the "" button it will shift to LED blinking to "MM".

2.Turn it to 24H Clock or 12H Clock:

- The In-built Clock Mode can be changed to 24Hours Clock or 12Hours Clock. To change simply Long Press the “” button to change it to any of the clocks.

3.Alarm Function:

- To set the Alarm Function just Press the “” button it shows the Blinking LED Indication on the "HH" then Press the “” to increase the value and Press this button “” to decrease the value. Once again Short Press the “” button it will shift to LED blinking to “MM”.
- To Turn on/off the Alarm Function just long press the button “”.
- To set different Alarm Tones Just Press the “” after the LED blinking to “MM” it changes to Alarm Tones then Press the “” to play the next Alarm Tone and Press this button “” to play the previous Alarm Tone.

Note:

- Here the “HH” denotes Hour and “MM” denotes the minutes.

- When we change the clock function to 12Hours format we cannot manually change the AM and PM.
- When we connect your mobile through BT it automatically syncs with the Time Format of the mobile.

AUX Mode:

- The Speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

FM Mode:

- Once the speaker is turned ON, please switch the speaker to FM mode by long pressing "  " button.
- Single press the "  " button to auto scan the available FM channel.
- Single Press the "  " Button for 'Next' channel. Long Press the "  " button to increase the volume.
- Single Press the "  " Button for 'Previous' channel. Long Press the "  " button to decrease the volume.

Note: Please use Type-C to USB cable as Antenna for better FM signal reception.

Ambient Sound Mode:

- Long pressing the “” get in to ambient mode, Once getting into ambient mode, we can here 7 different ambient noise by pressing “” & “” to switch between the ambient modes.

Charging the speaker:

- Connect the Type-C charging cable to the DC 5V,2A /9V,3A charging port of the speaker and insert the other end into a USB power adapter.
- The Mix of Red&Blue LED blinks on the LED indicator, indicating that the speaker is charging. A stable Blue LED lights glows on the LED indicator, once the speaker is fully charged.

Wireless Charging Function:

Instruction to Use :

- Connect the Speaker to an Adapter using the provided Charging Cable. Place the device (Smartphone) on Top of the Charging Pad. A full Red LED glows on the LED Indicator.
- The Wireless charging Support will provide up to 15W Rapid Charging which is Output 1 (Smartphone).

Note:

Please make sure if your device (Smartphone) has the wireless charging function.

Foreign Object Detection(FOD):

Connect the speaker to an Adapter using the provided cable if any metal objects are placed near the smartphone on the wireless charging pad the Pink LED blinks on the LED indicator.