

Portable BT speaker



# **User Manual**

www.zebronics.com

## Dear Customer,

Thank you for purchasing the **ZEB-ECHOSPIN** (Portable BT Speaker). Please read the user manual carefully before usage & save it for future reference

#### Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

### Features:

- 10W RMS Output
- Upto 9h\* backup
- Dual drivers
- 5 RGB Modes
- Passive radiator
- TWS function
- In-built Clock Function with Alarm
- BT v6.0 | USB | mSD | AUX | FM Radio
- Call Function
- Media / Volume control
- Type-C Charging
- Built-in Rechargeable battery

## Retro CD Player Design

## **Specifications:**

Model : ZEB-PSPK 70

Output Power (RMS) : 10W

BT Version : v6.0

• Driver Size : 5.2cm

Speaker Impedance : 3Ω

Frequency Response : 20Hz-20kHzFM Frequency Response : 87.5-108MHz

S/N Ratio : ≥95dB

Max Supported

USB/mSD memory size : 32GB

Supported Audio formats: MP3

Charging time : 4h

Playback time : 9h\*

• Product Dimension

(WxD xH) :18.8x12.4x7.5 cm

Package Dimension

(WxD xH) : 22 x22 x41.3cm

Net. Weight : 705g

Country of Origin : India

\* at 70% volume (LED off)

## **Package Contents:**

Speaker : 1 U
 Charging cable : 1 U
 Input cable : 1 U
 QR Code Guide : 1 U

## **Knob and Pull cord switch:**



- 1. Pull cord Switch
- 2. Volume Increase/decrease Knob

## To Turn on/Off the device:

Pull the cord to turn the speaker ON.
Pull the cord again to turn the speaker OFF.

## Volume increase/ Decrease

Rotate the knob clockwise :volume will increase Rotate the knob anticlockwise :volume will decrease

## **Port and Button Description:**



- Mode / Play-Pause Button / Change RGB Light
- 2. Previous Track / Previous channel / Volume Decrease Button
- 3. Next Track / Next channel / Volume Increase
  Button
- 4. Alarm Button / LED Brightness
- Clock Button / On Screen Mode / TWS Function
- 6. AUX input
- 7. USB port
- 8. mSD port
- 9. Type-C charging

## Instructions for Use:

### **BUTTON FUNCTIONS:**

Press M/NI button to play or pause music and auto scan in FM mode.

- Long press M/M button to change input mode (Bluetooth/FM/AUX etc.)
- Double press M/M button to switch between 5 RGB light modes.
- Press button to play the previous track, go to the previous FM channel, or decrease alarm or decrease time setting value.
- Press button to play the next track, go to the next FM channel, or increase alarm or increase time setting value.
- Press button to set the alarm.
- Long press to button to adjust LED brightness.
- Press button to set the time.
- Long press button to set a standby power-saving timer (15/30/60 mins).
- Double press button to activate TWS mode for stereo pairing.

#### Call Function:

• BT should be connected with a mobile phone. During a call, short press the "M/N" button to answer/end the call.

#### **BT Mode**

- Power ON the speaker.
- Turn ON BT on your Source Device and search for nearby BT devices.
- Search for the BT name "ZEB-ECHOSPIN" and tap to connect it.

#### mSD Mode

 Connect the mSD device to the respective ports and the speaker would automatically start playing from the mSD device.

### **USB** Mode

 Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

### **AUX Mode:**

- Connect the 3.5mm cable to the AUX port of the Speaker & other end to the Source device.
- Now the song played in the source device can be heard in the speaker.

### Clock Mode

## 1.Change the Time:

- When we turn ON the speaker we can see the Clock Function works automatically.
- To change the Time Manually Short Press the " button it will show the blinking of "HH" then Press the " to increase the value and Press this button " to decrease the value. Once again Short Press the " button it will shift to LED blinking to "MM".
- After set MM again enter " button and set the time.

### 2.Turn it to 24H Clock or 12H Clock:

- Single press " ( ) " to enter time.
- Long press " g" again to switch between
   12hrs/ 24hrs time format.

### 3.Alarm Function:

To set the Alarm Function just Press the
 " button it shows the Blinking LED
 Indication on the "HH" then Press the
 " to increase the value and Press this

- button " to decrease the value.Once again Short Press the " button it will shift to LED blinking to "MM".
- To set different Alarm Tones Just Press the
   "after the LED blinking to "MM" it changes to Alarm Tones then Press the
   "to play the next Alarm Tone and Press this button "to play the previous Alarm Tone.

### **Ambient Sound Mode:**

 Long pressing the "M/N" get into ambient mode, Once getting into ambient mode, we can hear 6 different ambient noise by pressing " & " M" to switch between ambient modes

## Charging the speaker

 Connect the Type-C charging cable to the DC 5V,2A charging port of the speaker and insert the other end into a USB power adapter.

### Note:

- Here the "HH" denotes Hour and "MM" denotes the minutes.
- When we change the clock function to

- 12Hours format we cannot manually change the AM and PM.
- When we connect your mobile through BT it automatically syncs with the Time Format of the mobile.
- For best performance keep the device charged
- Use TWS mode to connect two speakers wirelessly for stereo sound
- LED will not function in FM mode.

ISO 9001:2015 Certified Company www.zebronics.com