



ZEBRONICS
ALWAYS AHEAD

Wireless karaoke Microphone

ZEB **FUN**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-FUN** Wireless Karaoke Microphone. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the use of this product at the high-temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adaptor output rated voltage 5V.*

Features

Wireless BT

Supports Micro SD card

AUX Input

Karaoke Function

Media / Volume control

Built-in Rechargeable battery

Specifications

Output power (RMS)	: 3W
BT Version	: 5.0
Driver Size	: 52mm
Speaker Impedance	: 4Ω
Frequency Response	: 90Hz-10kHz
S/N Ratio	: ≥90dB
Max. Supported mSD memory size	: 32GB

Supported Audio

formats : MP3, WAV

Charging time : 5 - 6h

Playback time : 13h*

Product Dimension : 66.8 x 52.2 x 220 mm
(W x D x H)

Net. Weight : 226g

Package contents

Speaker : 1 U


Charging cable : 1 U

AUX Cable : 1 U

QR Code Guide : 1 U

**at 50% volume*

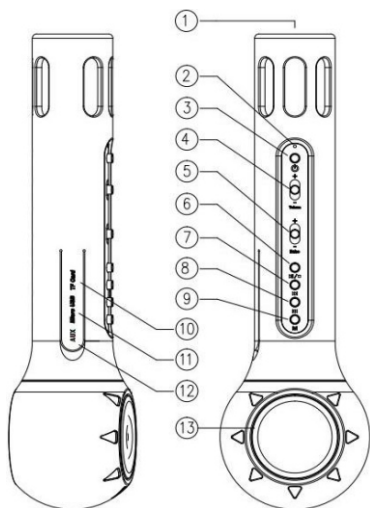

Button Descriptions:



1. Microphone
2. LED indicator
3. Power ON/OFF button
4. Volume Control
5. Echo Control
6. Play/Pause
7. Prev. Track
8. Next Track
9. Mode button
10. Micro SD card slot
11. Micro USB port
12. Aux - in
13. Speaker drive

Instructions for Use:

Button functions

1. Press the M button to change the input mode of the speaker.
2. Press the  button to change the NEXT/PREV, track in BT mode.
3. Slide the Volume control to increase/decrease the speaker volume.
4. Press the  button to Play/Pause the track being played.
5. Slide the Echo control to increase / decrease the Echo volume.

Charging the Speaker

1. Connect the Micro USB charging cable to the DC 5V Charging port of the speaker and insert the other end into a USB power source/adaptor.
2. Red LED glows indicating that the battery is being charged. The Red LED will turn off once it is fully charged.

Pairing your device with Bluetooth Speaker

1. Power ON the speaker until you hear the indication tone for Bluetooth mode.
2. Blue LED indicates that your speaker is now ON and is in pairing mode.
3. Switch ON BT on your phone or tablet and search for nearby BT devices.

4. Search for the BT name “**ZEB-FUN**” and tap to connect it.

Micro SD card mode

Connect the Micro SD card to the respective port of “ZEB-FUN” and the speaker would automatically start playing songs from the Micro SD card.

AUX mode

Connect the speaker to an audio source (phone, TV, PC) using the 3.5 mm to 3.5 mm cable provided in the box. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

Note: Do not hold the speaker by placing your hand too high or too low on it. The ideal position to hold is in the middle.

