



ZEBRONICS
ALWAYS AHEAD

Portable BT Speaker
ZEB **KNOCKOUT**



User Manual

www.zebronics.com

Thank you for purchasing **“ZEB-KNOCKOUT” Portable BT speaker**. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment
- Avoid self-disassembly of product, or it will result in the Voiding the product’s warranty.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

BT v5.3

RGB LED Lights with 7 Modes & Off mode

5.2cm Speaker Driver

Passive Radiator

TWS Function

Call Function

USB / mSD

Media / Volume Control

Inbuilt Rechargeable Battery

FM Radio

Type C Charging

Compact Design

Specification


Output Power (RMS)	: 10W
BT Version	: 5.3
Driver Size	: 52mm
Speaker Impedance	: 3Ω
Frequency Response	: 80Hz-18kHz
S/N Ratio	: ≥85dB
Separation	: ≥45dB
Max Supported USB/mSD	
Memory Size	: 32GB
Supported Audio formats	: Mp3
Charging Time	: 4.5h
Playback Time	: 10h*
Product Dimension	
(W x D x H)	: 21.3 x 8.2 x 6.6 cm
Net. Weight	: 338g

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U

** at 50% Volume (LED OFF)*

Instruction Of Buttons

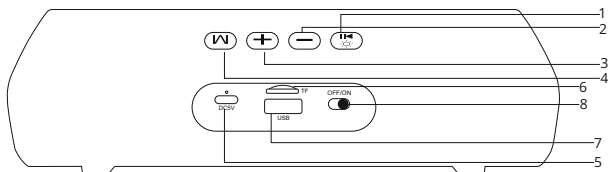

1. Long press to change the RGB light mode; short press to play/pause, answer/hang up calls, and scan FM channels.
2. Short press for the previous track or previous FM channel; long press for volume down.
3. Short press for the next song or next FM channel; long press for volume up.
4. Short press for mode change; long press for TWS mode.
5. Charging port.
6. microSD port.
7. USB port.
8. On/Off switch.

Operation Instruction

BT Mode:

Switch on Bluetooth on your phone or tablet and search for nearby Bluetooth devices. Search for the Bluetooth name **"ZEB-KNOCKOUT"** and tap to connect.

USB/mSD Mode:

The speaker automatically switches to USB/mSD input mode when a USB pendrive/microSD card is inserted. You can listen to songs from the audio source through the speaker.

FM Mode:

Press the mode button to select FM mode. Short press the play/pause button to initiate the FM scanning process. Once the scanning process is complete, the speaker will automatically play the first channel. Insert the charging cable for better signal performance.

Charging Instructions:

Connect one end of the power cable to the speaker and the other end to a rated DC 5V adapter. The speaker's LED indicator will remain red when charging and turn off when fully charged.

TWS Function:

When two speakers are in Bluetooth mode, long press the "Mode button" on one of the speakers to enter TWS mode.

It will automatically search for and connect to the other speaker. Once the two speakers are successfully connected, you can control both speakers simultaneously.

To enable True Wireless Stereo function, purchase another **ZEB-KNOCKOUT** speaker.

ISO 9001:2015 Certified Company
www.zebronics.com

