



Portable BT Speaker

ZEBRONICS MUSIC BOMB 2



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-MUSIC BOMB 2** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the use of this product in high-temperature and high-humidity environments.
- Avoid the self-disassembly of the products or it results in voiding the product's Warranty.

<https://zebronics.com/pages/warranty-policy>

Features

BT v5.1

USB / mSD / AUX

80W RMS Output

Upto 10h* Backup

TWS Function

2-Way Speaker

6.3mm Guitar Input

6.3mm & 3.5mm Microphone Inputs

Wireless Microphone

Type-C Charging

Detachable Carry Strap

Media, Volume & Bass control

Built-in Rechargeable Battery

Speaker Drivers on either side

Remote Control

Karaoke & Recording Function

Specifications


Output Power (RMS)	: 80W
BT Version	: 5.1
Driver Size	
Tweeter	: 7.62cm x 2
Woofer	: 10.16cm x 2
Speaker Impedance	
Tweeter	: 4Ω
Woofer	: 4Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: ≥58dB
Max Supported USB/mSD memory size	: 32GB
Supported Audio formats	: Mp3
Charging time	: 6 h
Playback time	: 10 h*
Product Dimension (W x D x H)	: 30 x 14 x 16 cm
Net. Weight	: 3.2kg

Package Contents


** at 50% Volume*

Speaker	: 1 U
Charging Cable	: 1 U
AUX Cable	: 1 U
QR Code Guide	: 1 U
Carry Strap	: 1 U
Wireless Microphone	: 1 U
Remote Control	: 1 U

Button Description:

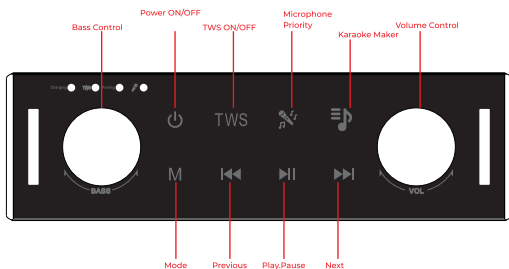

Port Description:

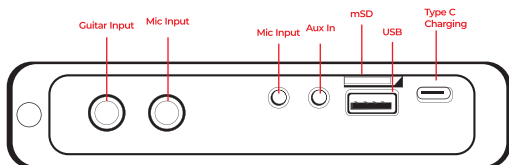

Microphone Description:

1. LED Display
2. Microphone Volume
3. Effects Volume
4. Indoor & Outdoor Modes
5. Effects selection
6. Power On/Off
7. Type C Charging port



Remote Inscription



Wireless Microphone:

1. LED Display indicates the microphone's Pairing and battery information.
2. Use these buttons to increase / decrease the microphone's volume (Mic volume and echo controls also reflected in wired Mic).
3. Use these buttons to increase / decrease the microphone's effects volume.
4. Single press this button to change the microphone's mode to Indoor or outdoor

5. Single press this button to toggle between reverb and echo effects for the microphone.
6. Press and hold this button for 2 seconds to Power On/Off the microphone.
7. Use Type C cable for charging the wireless microphone with a DC 5V adapter.
(Note: The wireless MIC connects to the speaker automatically once it's turned on)

BT Mode:

- Turn ON BT on your phone, tablet or laptop and search for the nearby BT devices.
- Search for the BT name "**ZEB-MUSIC BOMB 2**" and tap on it to connect.

Micro SD/USB Mode:

- Once the speaker is ON, insert the Micro SD card/USB drive into the respective ports and the speaker will automatically detect the MP3 tracks from the USB drive/Micro SD card and starts the Playback.
- The speaker will enter into these modes only if the drive is connected.

TWS Function:

- Power ON two **ZEB-MUSIC BOMB 2** speakers and make sure the speakers are in BT discovery mode.

- Press the TWS button in both speakers to activate TWS mode. After few seconds, both the speaker will be connected.
- Now, search for nearby BT devices in your source device and tap on the BT name **"ZEB-MUSIC BOMB 2"**
- Press the TWS button again to disconnect from TWS Mode.

AUX Mode:

The speaker can be connected to an audio source using a 3.5mm to 3.5mm cable. Connect the one end of the 3.5mm connector to the speaker and the other end of the cable to an audio source. The speaker automatically detects the input and the songs from the audio source can be heard through the speaker.

(Note: Kindly decrease the volume of the speaker while plugging in the Aux and wired Mic ports.)

Charging the Speaker:

- Connect the charging cable to DC 5V Type C port of the speaker and insert the other end into a DC 5V power adapter.

LED Indication:

- The Red LED On, indicating the speaker is being charged.
- The Red LED goes off after the speaker gets fully charged.

ISO 9001:2015 Certified Company

www.zebronics.com

