



Portable BT Speaker

ZEB **MUSIC**
BOMB X50



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-MUSIC BOMB X50** (Portable BT Speaker). Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- Upto 7h* backup
- Dual Wireless MICs with Built in MIC Holder
- Karaoke Maker & Voice Changing Modes
- LED Pixel Display
- 17 Animated Patterns
- Built in 4000mAh Battery
- Silicone Wrapped Body
- BT v5.3 | USB | mSD
- TWS Function
- Mic With Integrated Control
- Media / Volume Control
- Type-C Charging
- Lanyard

Specifications:


Model	: ZEB-PSPK 79
Output Power (RMS)	: 20W
BT Version	: v5.3
Driver Size	: 5.2 cm
Speaker Impedance	: 3.5Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: ≥85dB
Max Supported USB/mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging Time	: 5h
Playback Time	: 7h*
Product Dimension (W x D x H)	: 22.5 x 5 x 9.12 cm
Package Dimension (W x D x H)	: 10.7 x 7.5 x 23.5 cm
Net. Weight	: 602g

**at display off*

Package Contents:


Speaker	: 1 U
Charging cable	: 1 U
MIC	: 2 U
QR Code Guide	: 1 U

Button Description:

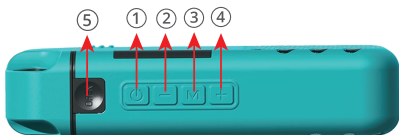

- ① Power switch on/off & Play/pause
- ② Volume Decrease / Previous Track
- ③ Switch between different animated patterns
- ④ Volume increase/ Next Track
- ⑤ Open Button - to take out the two mini wireless microphones

Port Description:

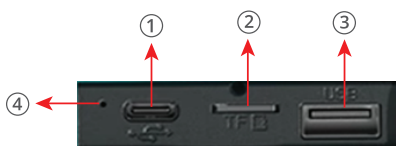

- ① Type C Charging Port
- ② mSD port
- ③ USB Port
- ④ LED Indicator

Button Function:

- Long press "⏻" button to turn ON/ OFF the speaker.
- Single press ⏻ button to Play & Pause the music.
- Short press "+" or "-" to adjust the volume.
- Long press "+" or "-" to control the media.
- Single press "M" button to switch between Modes
- Long press the "M" button to switch between different Animated Patterns.


BT pairing:

- Once the speaker is ON, please make sure that the speaker is in BT mode.
- Now search for nearby BT device in your mobile and tap on the BT name **"ZEB-MusicBomb X50"** to connect.

USB/mSD:

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

TWS Function:

- When two speakers are in Bluetooth mode, double press the  button on one of the speakers to enter TWS mode. It will search and connect with another speaker automatically.
- Once the two speakers are connected successfully, you can control both speakers at the same time.


Note: Requires two speakers for the TWS feature.

Microphone Placement:

Press and slide up the OPEN button to access the two mini wireless microphones are securely placed in the built-in mic holders.



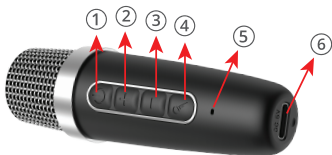

Microphone Description:



- ① Microphone On & Off / Microphone mute & unmute
- ② Mic volume increase / Echo maximum
- ③ Mic volume decrease / Echo minimum
- ④ Mic voice changing effects/ Karaoke function
- ⑤ LED Indicator
- ⑥ Type-C Charging Port

Microphone Function:

- Press and hold the  button for 2 seconds to turn ON/OFF the microphone
- Single press  button to mute or unmute the microphone.
- Single Press “+” button to increase microphone volume.
- Double Press the “+” button to set the echo to maximum.
- Single Press the “-” button to decrease the microphone volume.

- Double Press the “—” button to set the echo to minimum.
- Single press 🎧 button to activate karaoke function.
- Long press 🎧 button to switch between 5 voice changing preset effects

Charging the Speaker:

- Connect the Type-C charging cable to the DC 5V, 1A charging port of the speaker and insert the other end into a USB power source/adapter.
- While charging, a red LED will glow, and the LED will turn OFF once the speaker is fully charged.

LED Indication:

Speaker:

- Blue LED blinking - Bluetooth discovery mode
- Blue LED steady - Bluetooth paired successfully
- Red LED steady - charging
- Red LED off- Fully charged

Microphone:

- Blue LED blinking - Power on & discovery mode
- Blue LED steady- Connected to speaker.

