



ZEBRONICS
ALWAYS AHEAD

Portable BT Speaker

MUSIC
BOMB X Pro



User Manual

www.zebronics.com

Dear Consumer,

Thank you for purchasing **MUSIC BOMB X PRO** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the voiding your warranty.
- Please charge the product with power adapter output rated voltage DC 5V.

Features:

BT v5.1

Supports USB/mSD

Built-in FM Radio

TWS Function

AUX Input

Call Function

RGB Lights with 11 Modes

Media / Volume control

Built-in Rechargeable battery

Dual passive radiator

Specification:

Output power (RMS) : 20W (10W + 10W)

BT Version : 5.1

Driver size : 5.7 cm x 2

Speaker impedance : 4Ω



Frequency response	: 80Hz-20kHz
S/N Ratio	: ≥80dB
Max. supported memory size	: 32GB (USB/mSD)
Supported Audio formats	: Mp3
Charging time	: 5h
Playback time	: 22h*
BT name	: ZEB MUSIC BOMB X PRO
Product Dimension	: 25.2 x10.4 x 12.4 cm (W x D x H)
Net. weight	: 1.1kg

Package Content

Speaker	: 1 U
Charging cable	: 1 U
AUX cable	: 1 U
QR Code Guide	: 1 U
Carry strap	: 1 U

**At 50% Volume(LED OFF)*

Product Details

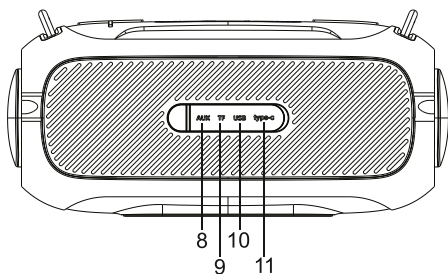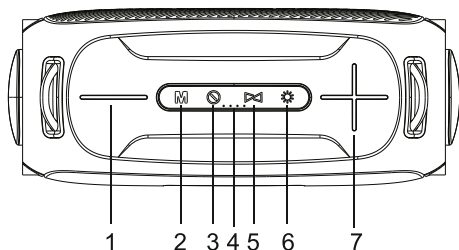

- 1- Volume Down / Previous
Short Press :To Decrease Volume
Long Press : Previous track In BT/USB/mSD mode or Prev Channel In FM mode
- 2- Input Mode : To Switch Input modes
- 3- Power Button :
Long Press : Power On/Off
Short Press : Play/Pause
Double Press on FM Mode : FM Scanning
- 4- LED Indicator
- 5- TWS Button / Call Function
Short Press : To enable/disable TWS Function
- 6- LED Mode Switch / LED On/Off
Long Press : LED On/Off

Short Press : To switch LED modes

7- Volume Up / Next

Short Press : To increase Volume

Long Press : Next track In BT/USB/mSD mode or Next Channel In FM mode

8- AUX IN

9- Micro SD Slot

10- USB Port

11- Type C Charging

Instructions for Use:

Charging the Speaker

1. Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter with minimum DC 5V 1A power rating.
2. LED blinks in a row, indicating that the battery is being charged. The LED will glow in a row once it is fully charged.

***Note:** Once the input source is connected, the modes will automatically be chosen. If you need to access a specific mode while multiple input sources are connected, hold down the Mode button for a few seconds to switch between devices.*

BT mode

1. Switch the Input mode to BT on your **"ZEB MUSIC BOMB X PRO"**
2. Turn ON BT on your phone / tablet and search for nearby BT devices.
3. Search for the BT name **"ZEB MUSIC BOMB X PRO"** and tap to connect it.

USB/ mSD mode

Connect the USB/ mSD card device to the respective ports of "MUSIC BOMB X PRO "and the speaker would automatically start playing from the mSD card/USB device.

AUX mode

Connect the speaker to an audio source (phone, TV, PC) using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

Call Function

BT should be connected with a mobile phone. During a call, short press "TWS" button to answer/end the call or long press the "TWS" button to reject the call.

To re-dial a call, double press the "TWS" button to dial a call.

FM Mode:

Double Press the power button in FM mode to scan the available FM channels once scanning complete first channel will play automatically.

Note: For better FM reception use th input cable included in the package

TWS(True Wireless Stereo) function

When two speakers are in Bluetooth mode, short press button "TWS" on one of the speaker to enter TWS mode, It will search and connect with another speaker automatically, when two speakers connected successfully, you can control two speaker at the same time.

Note: Requires two Zebronics Music Bomb X Pro for TWS feature

ISO 9001:2015 Certified Company

www.zebronics.com

