



Portable BT Speaker

ZEB **MUSIC**
BOMBI 10



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-MUSIC BOMB i10** BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Please charge the product with power adaptor output rated voltage DC 5V.

<https://zebronics.com/pages/warranty-policy>

Features:

- 16W RMS
- Upto 12h* Backup
- 57mm Dual Drivers
- Passive Radiator
- TWS Function
- Splash proof
- BT v5.4 | USB | mSD | AUX
- Call Function
- Media | Volume Control
- Fabric Finish
- Carry Loop
- Type-C Charging
- Built-in battery

Specifications:


Model	: ZEB-PSPK 74
Output Power (RMS)	: 16W
BT Version	: v5.4
Driver Size	: 5.7cm x 2
Speaker Impedance	: 3.5Ω
Frequency Response	: 70Hz-20kHz
S/N Ratio	: ≥75dB
Max Supported USB/mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 3.5h
Playback time	: 12h*
Product Dimension (Dia x H)	: 9.5 x 16 cm
Net. Weight	: 795g

** at 70% Volume*

Package Contents:


Speaker	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U
Input Cable	: 1 U

Product Description :

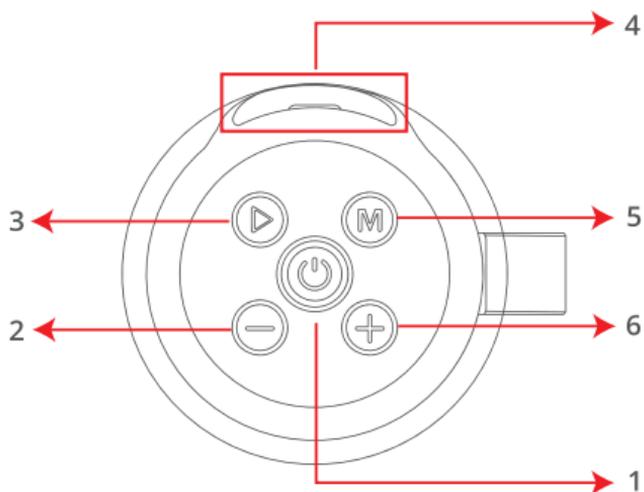

1. Power On|Off Button
2. Volume Decrease
3. Play|Pause Button
4. Ports
5. Mode Button
6. Volume Increase

Port Description :

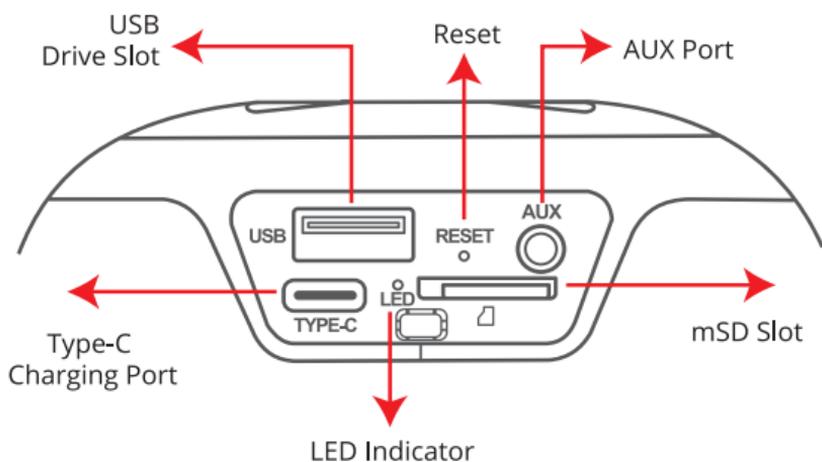

Instructions for Button Use :

1. Long Press the Power Button to Turn On|Off the Speaker. Double Press the Power button to activate Voice Assistant Feature.
2. Short Press the Play|Pause Button to play and pause the media. Long Press the button for TWS Function. Double Press the button for Redial Feature.
3. Short Press the volume Increase |Decrease Button to increase the volume of the media. Long Press to switch to Next|Previous Track.
4. Hold the Mode button to switch among the modes when multiple input sources are connected. Double Press the Mode Button to Unpair|Re-pair the Speaker to the connected device.

Note :

Once the input source is connected, the modes will automatically be chosen. If you need to access a specific mode while multiple input sources are connected, hold down the Mode Button to switch between devices.

Bluetooth :

- Turn ON the speaker using the Power Button
- Turn ON BT on your phone / tablet and search for nearby BT devices.
- Search for the BT name **“ZEB-MusicBomb i10”** and tap to connect it.

USB / mSD Mode :

Connect the USB/ mSD card device to the respective ports of **“ZEB-MusicBomb i10”** and the speaker would automatically start playing from the mSD card/USB device.

AUX-IN :

Connect the speaker to an audio source (phone, TV, PC) using 3.5mm cable. Once connected AUX IN mode will automatically be chosen and thereafter audio can be streamed via the speaker from the connected source.

TWS (True Wireless Stereo) Function :

Turn on both **ZEB-MusicBomb i10** Speakers. Make sure that the speakers are in BT Mode. Long Press the Play | Pause Button on any one of the speakers to activate TWS mode. Now, the speaker will automatically connect to each other.

Now search for nearby BT devices in your mobile and tap on the BT name **ZEB-MusicBomb i10** to connect.

Charging Instruction :

Connect the charging cable to a DC 5V Adapter . A Red LED would glow while charging & the LED would turn OFF once charging is complete.