



Portable BT Speaker

PARTY *Fyre* **100**



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-PARTY FYRE 100** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at high-temperature environments and high-humidity*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.*

Caution:

- *There is a risk of explosion if the product is disposed in the fire*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features

- 90W RMS Output
- Upto 6h* Backup
- 16.5cm woofer driver
- Dual 9.3cm full range drivers
- TWS Function
- Karaoke Function
- Wireless Rechargeable Mic with Display
- RGB LED Lights
- Bass Boost
- BT v5.3 | USB | AUX

* at 70% Volume (LED Off)

- 6.3mm Microphone Input
- Volume & Media control
- Type C charging
- Carry Handle

Specifications

Model No	: ZEB-USPK 102
Output Power (RMS)	: 90W
BT Version	: v5.3
Driver Size	
Woofer	: 16.5cm x 1
Full Range	: 8.89cm x 2
Speaker Impedance	
Woofer	: 4Ω
Full Range	: 8Ω
Frequency Response	: 70Hz-18kHz
S/N Ratio	: ≥65dB
Max Supported USB memory size	: 32GB
Supported Audio formats	: Mp3
Charging time	: 4 h
Playback time	: 6h*
Product Dimension	: 24.5 x 23.5 x 48 cm (W x D x H)
Net. Weight	: 5.4kg
Country of Origin	: PRC

* at 70% Volume (LED Off)

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
Wireless Microphone	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U


Top Panel Description



Mic Description



Port Description

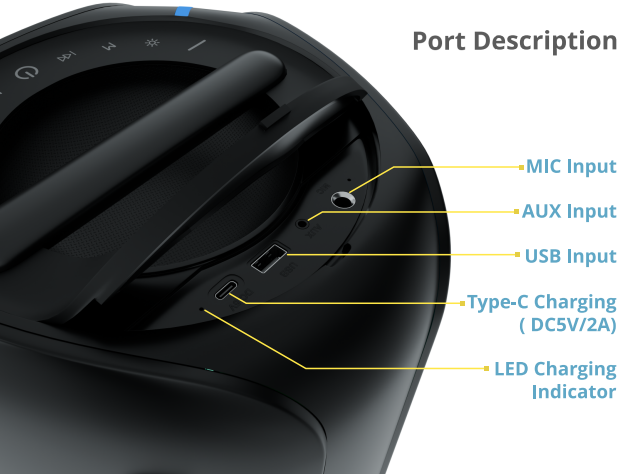

General Instructions

BUTTON FUNCTIONS:

1. Turn the speaker ON/OFF using the **Power Button**.
2. Use **Volume (+)** button to increase and **Volume (-)** button to decrease the volume of the speaker.
3. Press **Bass** button to toggle Bass ON/OFF of the speakers.
4. Press **Play/Pause** button to play track or pause track being played.
5. Press the **Prev/Next** button to control the media.
6. Press **Mode** Button to switch between BT | USB | AUX mode.
7. Press the **RGB LED** button to change the modes of the RGB lighting of the speaker.

BT Mode

- Switch the speaker to BT mode
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "**ZEB-PARTY FYRE 100**" to connect.

USB Mode

- Insert the USB Drive into the slot provided on the speaker.
- The speaker will automatically detect the USB drive and the supported audio

connect will be played from it.

Note: *This mode isn't selectable on the speaker unless a USB drive and a supported audio content will be played from it.*

AUX-Input

- The speaker can be connected to an audio source using a 3.5mm cable.
- Connect the one end of the cable to the AUX port on the speaker and the other end an audio source.
- The audio from the source can be played through the speaker.

TWS Function

- Turn on both **"ZEB-PARTY FYRE 100"** speakers in BT (wireless) mode. Press and hold the **Play/Pause** button for 2 seconds in any one of the speaker to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in your mobile phone or other source device and tap on BT name **"ZEB-PARY FYRE 100"** to connect. To exit TWS mode, press and hold the **Play/Pause** button for 2 seconds.

Charging Instruction

- Use a DC 5V/2A power adapter connected with the Type-C Charging cable provided.
- When charging, the LED indicator glows RED.
- When the Speaker is Fully Charged, the RED light stops Glowing.

Charging Indication

Low Charge	: Red LED glows
Full Charge	: Red LED stops

