

ZEBRONICS

Portable BT Speaker

ZEB **PARTY Fyre 110**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-PARTY FYRE 110** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference

Note:

- *Avoid the usage of this product at high-temperature environments and high-humidity*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty*

Caution:

- *There is a risk of explosion if the product is disposed in the fire*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.3 | USB | AUX
- RGB LED Modes
- TWS Function
- Wireless Rechargeable Mic with Display
- Karaoke Function
- 6.3mm Mic Input
- Deep Bass
- Media / Volume control
- Built-in 7000 mAh battery

Specifications:

Output Power : 110W

BT Version : 5.3


| | |
|----------------------------------|-----------------------------|
| Driver Size | |
| Woofer | : 16.51cm |
| Full Range | : 9.3cm x 2 |
| Speaker Impedance | |
| Woofer | : 4Ω |
| Full Range | : 8Ω |
| Frequency Response | : 70Hz-19kHz |
| S/N Ratio | : ≥65dB |
| Max Supported USB memory size | : 32GB |
| Supported Audio formats | : MP3,WAV, FLAC,WMA, APE |
| Charging time | : 4h |
| Playback time | : 6h* |
| Product Dimension (W x D x H) | : 23.5 x 24 x 52.5 cm |
| Package Dimension (W x D x H) | : 28.2 x 29 x 59.5 cm |
| Net. Weight | : 5.7kg |

* at (LED Off)

Package Contents:


| | |
|----------------|-------|
| Speaker | : 1 U |
| Wireless MIC | : 1 U |
| Charging cable | : 1 U |
| AUX cable | : 1 U |
| QR Code Guide | : 1 U |

Button Description:

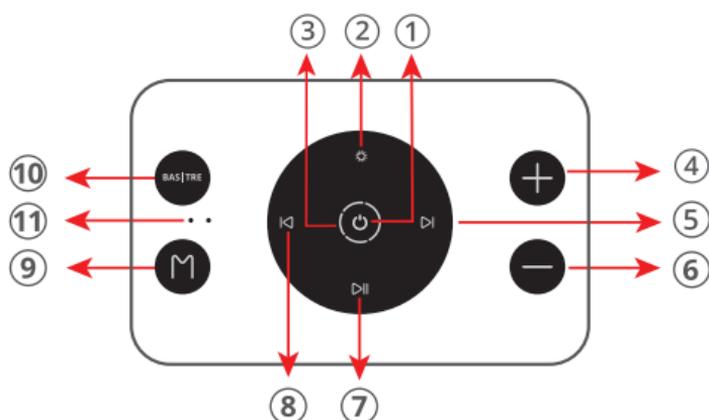

- ① Power On/Off button
- ② LED Mode button
- ③ Battery Level Indicator
- ④ Volume Increase Button
- ⑤ Next Track Button
- ⑥ Volume Decrease Button
- ⑦ Play/Pause Button
- ⑧ Previous Track Button
- ⑨ Input Mode Button
- ⑩ Bass/Treble Volume Adjustment Button
- ⑪ Bass/Treble Mode Indicator

Port Description:

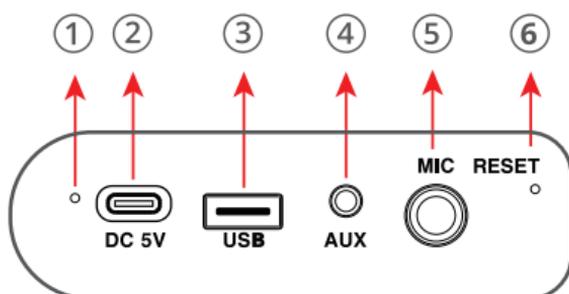

- ① Charging Indicator
- ② DC 5V Type-C charging port
- ③ USB Port
- ④ AUX Port
- ⑤ 6.3mm MIC Input Port
- ⑥ RESET

General Instructions:

Button Functions:

- Turn the speaker On/Off by pressing the Power button.
- Short Press the Bass/Treble Volume adjustment button to select between which Audio Volume adjustment is required. Long Press the Bass/Treble Volume adjustment button will reset the device.
- Short Press the Input Mode to switch between different Input modes. Long Press the Input Mode to force disconnect the BT Mode. Double Press the Input Mode button to get into MIC Echo Adjustment.
- Short Press the LED Mode button to change between different LED Modes. Long Press this button to Turn the LED's Off.
- Short Press the Volume Decrease button to decrease the Volume level of Master Volume, Bass, Treble & MIC Volume/Echo Controls. Long Press the Volume Decrease button to decrease the Volume level quickly.

- Short Press the Volume Increase button to Increase the Volume level of Master Volume,Bass,Treble & MIC Volume/Echo Controls.Long Press the Volume Increase button to Increase the Volume level quickly.
- Short Press the Previous Track button to change it into Previous Track.
- Short Press the Next Track button to change it into Next Track.
- Short Press the Play/Pause button to Play/Pause the Tracks.Long Press the Play/Pause button to get into TWS Mode/Exit the TWS Mode.

BT Mode:

- Short Press the Mode button to enter BT Mode.
- Turn on the BT on your device and search for the BT compatible devices.
- Then pair the speaker with the name **"ZEB-PartyFyre 110"** on your device to connect.Once paired successfully a tone will be played.

USB Mode:

- When you insert a USB to the USB Port of the speaker it automatically starts to Play the songs in the speaker.

AUX Mode:

- When you insert an AUX cable and then press the Mode button to switch into AUX Mode

Note: *The Media Controls of the speaker cannot be controlled on this speaker on the AUX Mode*

TWS Function:

- When the speaker is in BT Mode Long press the Play/Pause button to enter into BT TWS Mode. The secondary device automatically searches and gets connected. To disconnect the TWS Function, Long press the Play/Pause Button once again

Note: *Requires two ZEB-PARTY FYRE 110 speakers for TWS Mode. Users need to make a TWS connection first, then make BT connection with the mobile phone.*

Charging instruction :

- Connect the charging cable to the DC 5V port of the speaker and insert the other end into a DC 5V charging power source/adapter.
- LED glows indicating that the battery is being charged.
- The red LED goes OFF after the speaker gets fully charged

