



Portable BT Speaker
ZEB **PARTY** *Fyre* **650**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-PARTY FYRE 650** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features :

Up to 7h* backup

Dual 16.51 cm Full Range Drivers

TWS Function

Dual Wireless Mic

Karaoke | Recording Function

6.3mm Microphone Inputs x 2

BT v5.0 | USB | mSD | AUX

Volume, Bass & Treble Controls

Mic Volume & Echo Controls

LED Display

8 RGB Modes

Remote Control

Built-in Battery

Mobile holder

Specifications :

BT Version: v5.0

Driver Size

Full Range : 16.51cm x 2

Tweeter : 5.71cm

Impedance

Full Range : 4Ω

Tweeter : 6Ω

Frequency Response : 58Hz-19kHz

S/N Ratio : ≥87db

Supported Audio

formats : MP3

Max Supported

Memory Size : 32GB (USB/mSD)

Charging Time : 7h

Playback Time : 7h*

Product Dimension : 27 x 29 x 59 cm
(W x D x H)


Net. Weight : 8 Kg


** at 70% volume (LED off)*

Package Contents :

Speaker	: 1 U
Wireless Mic	: 2 U
Remote Control	: 1 U
Charging Cable	: 1 U
Power Cord	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U


Buttons Description :

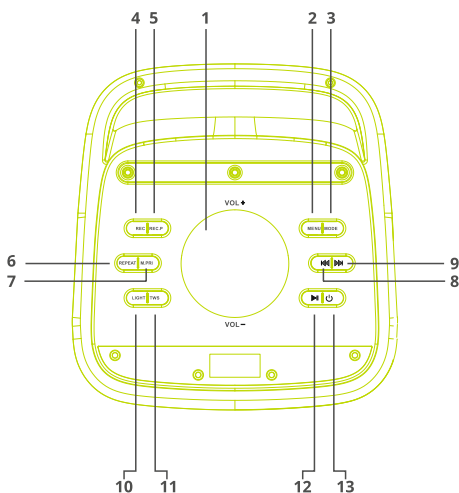

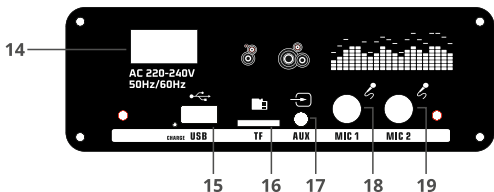

1. Volume control
2. MENU button (Bass, Treble, Echo mode)
3. MODE button (Bluetooth, AUX, FM mode)
4. REC button (Recording)
5. REC.P button (Recording play)
6. REPEAT button
7. M.PRI button
8. Previous track button
9. Next track button
10. RGB Light switch button
11. TWS button
12. Play/Pause button
13. Power ON/OFF button
14. AC power input
15. USB port
16. TF card slot
17. AUX input
18. MIC 1 input
19. MIC 2 input

Remote Control :

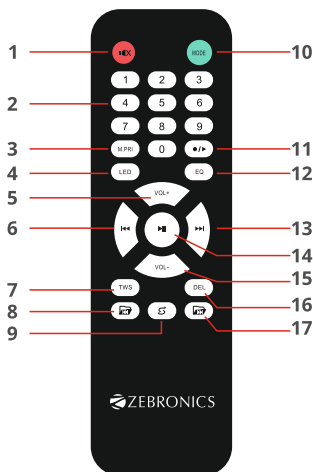

1. Mute button
2. 0-9 Number Control button
3. Mic priority
4. RGB on/off
5. Volume+
6. Previous Channel
7. TWS
8. Previous Folder
9. Repeat (Long press reminder on/off)
10. Mode control button
11. Recording (Hold) / Play recording (Press)
12. EQ mode
13. Next Channel
14. Pause & Play
15. Volume-
16. Delete current recording file
17. Next Folder

Instruction for Use :

Button Function :

1. Turn the speaker ON/OFF using the power switch.
2. Press mode button to change it to BT mode.
3. Use Master volume control knob to increase / decrease the volume.
4. Press MIC Priority button to control Mic Vol to increase / decrease the MIC volume.
5. Press Prev/Next button to control the media / FM Channels
6. Press Play-Pause button to play track or pause track being played.

Micro SD / USB Mode :

Once the speaker is ON, insert the micro SD card / USB drive to the respective ports of the **"ZEB-PARTY FYRE 650"** and the speaker will automatically detect the track from the USB drive/Micro SD card and play. Press Prev/Next button to control the media. Use the Master volume knob to control the volume of the speaker.

TWS Function :

- Switch ON two **"ZEB-PARTY FYRE 650"** speakers you want to pair.
- Short Press the TWS button in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.

- Now, search for nearby BT device in your mobile and Tap on the BT name "**ZEB-PARTY FYRE 650**" to connect.
- To exit TWS mode, Short Press the TWS button in any one speaker to exit from TWS mode.

Charging the Speaker :

1. **Charging** - Connect the speaker to an AC power outlet (220–240 V, 50/60 Hz). The battery level will be shown on the LED display while charging.
2. **Fully Charged** - When charging is complete, the LED display shows a full battery.

