



Portable BT Speaker

ZEB **PARTY** *Fyre* **90**



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-PARTY FYRE 90** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at high-temperature and high-humidity environments.*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.*

Caution: *There is a risk of explosion if the product is disposed in the fire*

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- 60W RMS Output
- Upto 10h* Backup
- Dual 16.51cm Full Range Drivers
- TWS Function
- Karaoke Maker
- MIC Recording
- Wireless MIC with Display
- BT v5.4 | USB | mSD | FM | AUX
- 6.3mm Mic Input
- Media, Volume, Bass & Treble Controls
- Mic Volume, Bass, Treble & Echo Controls
- RGB Lights

- Remote Control
- LED Display
- Mobile Holder
- Type-C Charging
- Built-in Rechargeable Battery

Specifications:

Output Power (RMS) : 60W (30W + 30W)

Driver Size

Full Range / Tweeter : 16.7cm x 2 / 4.5cm

Speaker Impedance

Full Range / Tweeter : 4Ω / 9Ω

Frequency Response : 25Hz-18kHz

S/N Ratio : ≥60dB

File Format Support : MP3 (USB/mSD)

Line Input : 3.5mm

Max Supported

Memory Size : 32GB (USB/mSD)

FM Frequency Range : 88 MHz - 108 MHz

Charging Time : 6h

Playback Time : 10h*

BT Name : ZEB-PARTY FYRE 90


BT Version : v5.4

Product Dimension : 29.5 x 26.5 x 57.5 cm
(W x D x H)

Net. Weight : 6.3kg


**at 50% Volume (LED OFF)*

Port & Button Description:

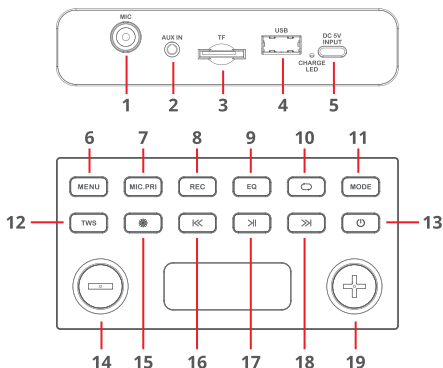

1. Microphone Input Jack
2. AUX Input
3. mSD
4. USB
5. Type-C
6. Menu : Bass / Treble / Mic Volume / Mic Echo / Mic Treble / Mic Bass
7. MIC.PRI : Microphone Priority
8. REC : Recording your voice by microphone, First long press REC button, Recording voice playback. Undoing recording voice playback long press REC button, delete voice recording in USB/TF
9. EQ : In Door / Out Door Mode
10. Repeat / Long Press : Voice Cancel
11. Mode : FM / AUX / BT / USB / mSD
12. TWS Function
13. Power ON/OFF
14. Volume -
15. Light Switch
16. I<< Previous Track / In FM Mode, Selects Previous channel
17. >II Pause / Play, In FM Mode : Auto Scan FM
18. >>I Next Track / In FM Mode, Selects Next FM channel
19. Volume +

Remote Control:

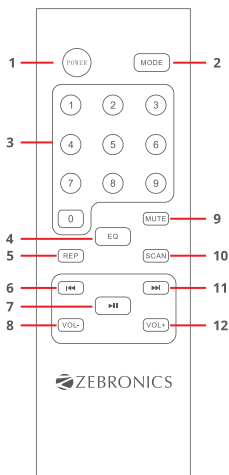

1. POWER : POWER ON /OFF
2. MODE : FM / AUX / BT / USB / mSD
3. 0-9, Key number for selecting the certain tracks in the USB / mSD Card.
4. EQ : Indoor / Outdoor Mode.
5. REP : Repeat One / Repeat All.
6. I<< Previous Track / In FM Mode, Selects Previous channel.
7. >II Pause / Play, Press to PAUSE and resume to PLAY.
8. VOL- : Decrease the master volume.
9. MUTE : Press this button to mute the unit.
10. SCAN : When it is on the mode of FM/press this button to auto scan all channels.
11. >>I Next Track / In FM Mode, Selects Next FM channel.
12. VOL+ : Increase the master volume.

General Instructions

BT Mode:

Switch on the speaker to BT mode, Scan for nearby BT devices in your device. Tap on **"ZEB-PARTY FYRE 90"** to connect.

USB/mSD Mode:

Insert the USB Drive / mSD Card to the Speaker. The speaker will detect the USB/mSD Card and the audio files from the drive / card will be played automatically.

FM Radio:

Switch the speaker to FM. In FM Mode, Short Press the Play/Pause Key to scan the available FM channels. Once the scanning is done, the speaker will start playing the first scanned channel.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

Recording Function:

To record a voice, first plug-in a USB/mSD card into the speaker which will act as a storage device. Press the REC. key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC. PLAY key to play the recorded file.

Note: *Speaker can record the Mic input.*

TWS Connectivity:

1. Turn on both **ZEB-PARTY FYRE 90** speakers and select BT Input Mode on both the speakers.
2. Press the TWS button on any one of the speaker.
3. You will hear a tone which indicates the TWS mode is activated between both speakers.
4. Open BT Settings on your device and search for BT name **ZEB-PARTY FYRE 90** then tap to connect on it.

Note: Requires two speakers for TWS feature

Charging Indication:

Charging Indication : Red LED Glows

Full Charging Indication : Red LED goes Off

