



Portable BT Speaker  
ZEB **ROCKET200**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB-ROCKET 200** Portable Bt Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid self-disassemble of product, or it will result in the failure of warranty.
- Please charge the product with power adapter output rated DC 5V/ 2A.

*To know more about Terms and conditions for warranty policy, please visit*

*<https://zebronics.com/pages/warranty-policy>*

## **Features**

BT v5.1 / FM / USB / AUX

Deep Bass

Type C Charging

Volume & Media Controls

Dual 5.08cm Drives

Built-in Rechargeable Battery

Microphone Input

TWS Function

Passive Radiator

Aluminium Alloy Handle

## Specifications



Output Power (RMS)	: 20W (10W+10W)
BT Version	: 5.1
Driver Size	: 5.08 cm x 2
Speaker Impedance	: 3Ω
Frequency Response	: 80Hz-16kHz
S/N Ratio	: ≥80dB
Max Supported Memory Size	: 32GB (USB)
Supported Audio Formats	: MP3/WAV/WMA
Charging Time	: 3h
Playback Time	: 6h*
Product Dimension	: 33x94.5x15.6cm (W x D x H)
Net. Weight	: 1.22kg

## Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
AUX Cable	: 1 U
QR Code Guide	: 1 U

*\* at 50% volume*

## Buttons and Ports Description

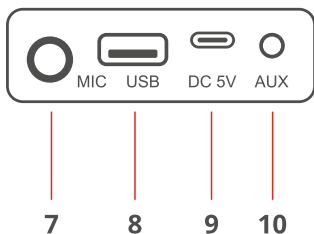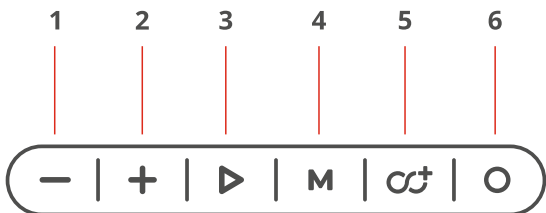

- 1 - Previous Track / Volume Down / Previous Channel
- 2 - Next Track / Volume Up / Next Channel
- 3 - Play/Pause / FM Scan
- 4 - Mode Button (Switch between BT, USB, FM, AUX)
- 5 - TWS Button
- 6 - Power On/Off
- 7 - MIC Port
- 8 - USB Port
- 9 - Type-C Charging Port
- 10 - AUX Port

## **BT Mode**

- Switch the Input mode to BT on your **“ZEB-ROCKET 200”**
- Turn ON BT on your phone / tablet and search for nearby BT devices.
- Search for the BT name **“ZEB-ROCKET 200”** and tap to connect it.

## **FM Mode**

To Switch to FM mode short press the **“M”** button. To scan for the available FM Channels, long press the **Play/Pause** button. Long press the **Next/Prev.** button navigates between the scanned channels.

## **USB Mode**

Connect the USB device to the respective ports of **“ZEB-ROCKET 200”** and the speaker would automatically start playing from the USB device.

## **AUX Mode**

Connect the speaker to an audio source (phone, MP3 player, PC) using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

## **Call Function**

- Short press the **Play/Pause** button to accept and end the call.

- Long press the **Play/Pause** button to reject the call.

### **TWS Function**

- Turn on both the speakers and make sure both speakers are in BT discovery mode.
- Short press the TWS button on any of the speakers. After a few seconds it will indicate a voice prompt for TWS pairing.
- Now open your device's BT settings & select **ZEB-ROCKET 200** to pair with it.
- To be noted that a single BT name **ZEB-ROCKET 200** will be visible in the BT menu.
- Upon connecting you can experience the TWS function.

*Note: Requires two speakers for TWS feature.*

### **Microphone port:**

You can connect the 6.5mm Microphone to the rear side of the speaker and enjoy the karaoke function. (Wired Microphone not included with the package)

### **Charging instruction**

Connect the charging cable to the Type-C port of the speaker and other end to the power adapter.

**ISO 9001:2015 Certified Company**  
**[www.zebronics.com](http://www.zebronics.com)**

