



Portable BT Speaker

ZEB **ROCKET**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-ROCKET** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassembly of product, or it will result in the failure Warranty.*
- *Please charge the product with power adaptor output rated voltage DC 5V.*
- *To know more about Terms and conditions for warranty policy, please visit :*

<https://zebronics.com/pages/warranty-policy>

Features :

- Upto 5h* backup
- Can-Inspired Design
- 360° top glow Lights
- BT v6.0 | USB
- Twin Wireless MICs
- Karaoke Maker & Voice Changing Modes
- Mic With Integrated Control
- Type-C Charging
- Carry Loop
- Media / Volume control
- Built-in Battery

Specifications :


Model No	: ZEB-ROCKET
BT Version	: v6.0
Driver Size	: 5.2cm
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥80dB
Max Supported USB memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 3h
Playback time	: 5h*
Product Dimension (Dia x H)	: 7 x 13.2 cm
Net. Weight	: 375g

** at 70% Volume (LED off)*

Package Contents :

Speaker	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U
Wireless MIC	: 2 U

Button Description :

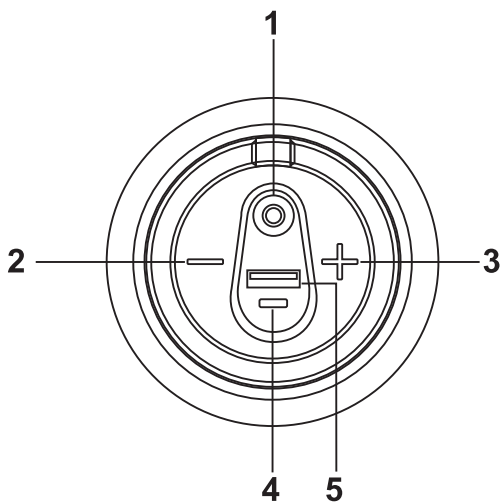

1. Power Button
2. Volume -
3. Volume +
4. Type-c Charging Port
5. USB Port


General Instructions :

Button functions :

- Long press the Power Button to turn ON/OFF the speaker.
- Double press the Power Button to change between different LED modes of the speaker.

- Short press the Power Button to Play or Pause the audio playback.
- Short press the Volume + button to increase the volume.
- Long press the Volume + button to change to the Next song.
- Short press the Volume - button to decrease the volume.
- Long press the Volume - button to change to the Previous song.

Mic Description :

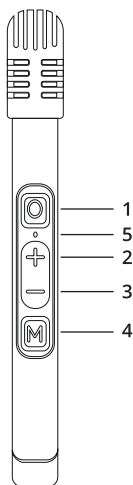

1. Power Button
2. Volume +
3. Volume -
4. Mode Button
5. LED Indicator

Mic Functions :

- Long press the Power Button to turn ON/OFF the Mic.
- Short press the Volume + button to increase the Mic volume.
- Long press the Volume + button to change to the Next song.
- Short press the Volume - button to decrease the Mic volume.
- Long press the Volume - button to change to the Previous song.
- Double press the Mode button to activate the Karaoke Maker.
- Short press the Mode button repeatedly to toggle between Echo, Low Pitch, High Pitch, and Sound Monster modes.

Charging the Speaker :

- Connect the charging cable to the Type-C Charging Port of the speaker and Microphone insert the other end into a DC 5V charging power source/adapter.
- Red LED glows indicating that the battery is being charged.
- Once the speaker is fully charged, the RED LED will be OFF

