



Portable BT Speaker

SONIC POD 22



User Manual

www.zebronics.com

Thank you for purchasing the “**ZEB-SONIC POD 22**” Portable BT Speaker. Please read this user manual carefully and keep it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.3 | USB | mSD | FM | AUX
- TWS Function
- Call Function
- Media / Volume control
- Built-in Rechargeable battery
- Fabric finish with Carry loop
- Type-C charging
- RGB LED mode

Specifications:


Model No.	: ZEB-PSPK 37
Output Power (RMS)	: 8W
BT Version	: v5.3
Driver Size	: 5.7 cm
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: $\geq 88\text{dB}$
Max Supported USB/mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 4 h
Playback time	: 15h*
Product Dimension (Dia x H)	: 10 x 10 x 12.4cm
Net. Weight	: 450g

Package Contents:

Speaker	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U

** at 50% volume(LED off)*

Control Panel Description:

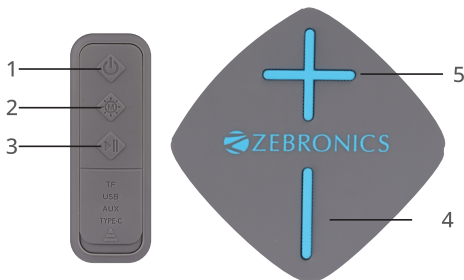

Buttons:

1. Power Button : Long press the button to ON/OFF the speaker.

2. Mode/ LED :

- Double press to change the RGB modes of the speaker.

- Single press to Switch between BT & FM mode.

3. Play/Pause: Short press to Play or Pause the Song.

4. "-" Button:

- Short press to Decrease the volume of the speaker.


- Long press to change to previous Track.

5. "+" Button:

- Short press to increase the volume of the speaker.

- Long press to change to Next Track.

Rear Panel functions

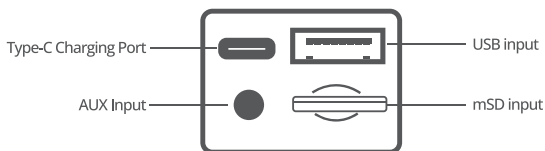

General Instructions

BT Mode:

Switch on the BT on your mobile phone or other source device and search for BT name **"ZEB-SONIC POD 22 "** and tap to connect your source device with speaker.

TWS Function:

- Turn on two **ZEB-SONIC POD 22** speakers.
- Long press the "M" button for few seconds on any one speaker to activate TWS function.
- After Few seconds, you'll hear TWS connected notification from the speakers when they are connected successfully.
- Open BT settings on your source device connect to the BT name **ZEB-SONIC POD 22** once successfully connected, you can hear your source music on both the speakers.

Note: Requires two Zebronics Sonic Pod 22 speakers for TWS feature.

AUX-IN:

- The speaker can be connected to an audio source using a 3.5mm to 3.5mm cable.
- Connect the one end of the 3.5mm connector to the speaker and the other end of the cable to an audio source. The speaker automatically detects.

USB:

- The speaker automatically switches to USB input mode when a USB flash drive is inserted into the speaker.
- The songs from the USB audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a USB flash drive is connected).

FM Mode:

- Press the Play/Pause button to select FM mode. Single press power button to initiate FM Scanning process. Once the scanning process is done, the Speaker automatically plays the First channel of the FM.

Micro SD Mode:

- The Speaker automatically switches to mSD mode when the card is inserted to the slot and start playing the music from the card automatically.

Charging Instruction:

- Connect the one end of the power cable to speaker and connect the other end to a rated DC 5V adapter.
- The Speaker has constant Red led indication when the speaker is charging. The Indicator turns off when the speaker is completely charged.

