



Portable BT Speaker

**ZEB** **SONO PLUS**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB-SONO PLUS** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

## **Features**

48W RMS Output

Upto 5.5h\* Backup

20.32cm Full Range Driver

TWS Function

Karaoke Function / Recording

Wireless Mic

6 RGB LED Modes

BT v5.0 | USB | mSD | AUX

FM Radio

6.3mm Microphone Input

Volume, Bass & Treble Controls

Mic Volume and Echo controls

Built-in Rechargeable Battery

Type C charging

Carry Handle

Remote Control

## Specifications

 
Output Power (RMS)	: 48W
Driver Size	
Full Range	: 20.32cm
Tweeter	: 2.54cm
Impedance	
Full Range	: 2.2Ω
Tweeter	: 16Ω
Frequency Response	: 60Hz to 18kHz
S/N Ratio	: ≥60dB
Supported Audio	
Formats	: Mp3
Max Supported	
Memory Size	: 32GB (USB/mSD)
Charging Time	: 5h
Playback Time	: 5.5h*
BT Version	: v5.0
Product Dimension	: 28 x 27 x 33.5 cm (W x D x H)
Net. Weight	: 3.1 Kg

## Package Contents:

Speaker	: 1 U
Wireless Mic	: 1 U
Charging Cable	: 1 U
Input cable	: 1 U
Remote	: 1 U
QR Code Guide	: 1 U


*\* at 50% volume (LED off)*

## Buttons Description

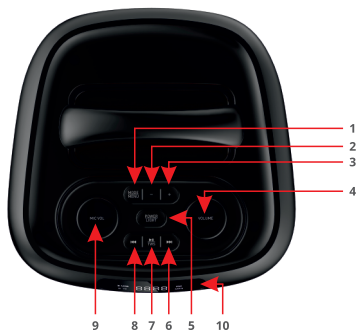


1. MODE Switch | Bass and Treble Controls
2. Bass | Treble Decrease
3. Bass | Treble Increase
4. Master Volume Control
5. Power ON/OFF Switch | LED RGB Controls
6. Next Track
7. Play/Pause | TWS Pairing Button
8. Previous Track
9. MIC Volume Control
10. LED Display

## Ports / Control Description

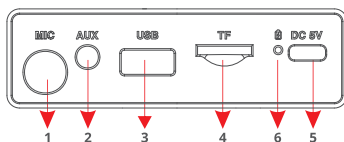 

1. MIC Input
2. AUX Input
3. USB Drive Slot
4. mSD Card Slot
5. Type-C Charging Port
6. LED Charging Indicator

# Remote Control

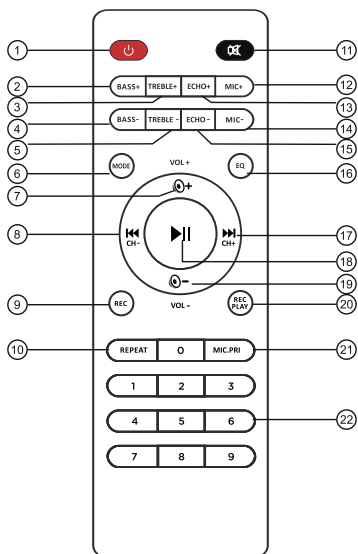 

1. Standby/Awake

2. Music bass +

3. Music treble +

4. Music bass -

5. Music treble -

6. Input modes

7. Volume +

8. Previous track/  
Long press for music  
rewind.

9. Recording

10.Repeat music  
(works under  
USB / mSD modes)

11.Mute

12.Mic volume +

13.Mic echo +

14.Mic volume -

15.Mic echo -

16.EQ

17.Next track/  
Long press for  
music forward.

18.Play/Pause

19.Volume -

20.Play the recorded file

21.Mic priority ON/OFF

22.Numeric keys (0-9)  
for selecting tracks  
in USB/mSD

## **Button Functions :**

1. Turn the speaker ON/OFF using the Power Button.
2. Use Master Volume Knob to increase (+) and decrease (-) the volume of the speaker.
3. Use MIC Volume Knob to increase (+) and decrease (-) the volume of the Microphones.
4. Press the Prev/Next button to control the media.
5. Press Press Play/Pause button to play track or pause track being played.
6. Long Press the Play/Pause Button for TWS Pairing between the Speakers.
7. Press Mode Button to switch between BT | USB | AUX mode.
8. Long Press the Mode button to toggle between the Bass | Treble | ECHO of the speaker
9. Press Bass | Treble button to adjust Bass or Treble of the speakers.
10. Long Press the Power Button to change the modes of the RGB lighting of the speaker.

## **BT Mode :**

Switch the speaker to BT mode, Scan for nearby BT devices in your mobile phone or source device & tap on ZEB- SONO PLUS to connect.

### **USB/mSD :**

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

*Note: Bass, Treble & EQ controls cannot be adjusted in AUX mode*

### **AUX-IN:**

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

### **TWS Connectivity :**

1. Turn on both **ZEB-SONO PLUS** speakers in BT mode.
2. Press and hold the Mode button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
3. After few seconds both speakers will get connected successfully.
4. Now search for nearby BT device in you mobile phone or other source device and tap on BT name **ZEB-SONO PLUS** to connect.

*Note: To exit TWS mode, press and hold the Play/Pause button for 3-5 seconds.*

### **Charging the Speaker :**

Charge the speaker using DC 5V 2A rated power adapter with included Type-C charging cable. RED color LED will be glowing while speaker is charging and it goes off after full charge.

