




ZEBRONICS
ALWAYS AHEAD

Portable BT Speaker

ZEB **SOUND** **FEAST** **51**

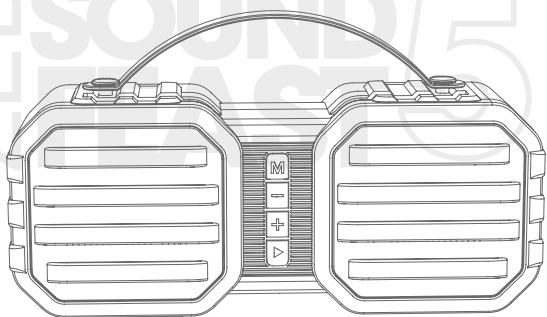

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing ZEB-SOUND FEAST 51 BT Speaker. Please read this user manual carefully before operation & save this user manual for further reference.

Features

Wireless BT

Supports USB & mSD card

Built-in FM Radio

AUX Input

Call Function

Media / Volume control

Built-in Rechargeable battery

Specification

Output Power (RMS) : 14W (7W + 7W)

BT Version : 5.0

Driver Size : 57mm x 2

Speaker Impedance : 3Ω

Frequency Response : 20Hz-20kHz

S/N Ratio : ≥80dB


Max Supported USB/ mSD memory size	: 128GB
Supported Audio formats	: MP3, WAV
Charging time	: 5H
Playback time	: 20H*
Product Dimension	: 230 x 80 x100mm (W x D x H)
Net. Weight	: 710g

Package Contents

Speaker	: 1 Unit
Charging cable	: 1 Unit
AUX cable	: 1 Unit
User Manual	: 1 Unit

* at 50% volume level

Product Description

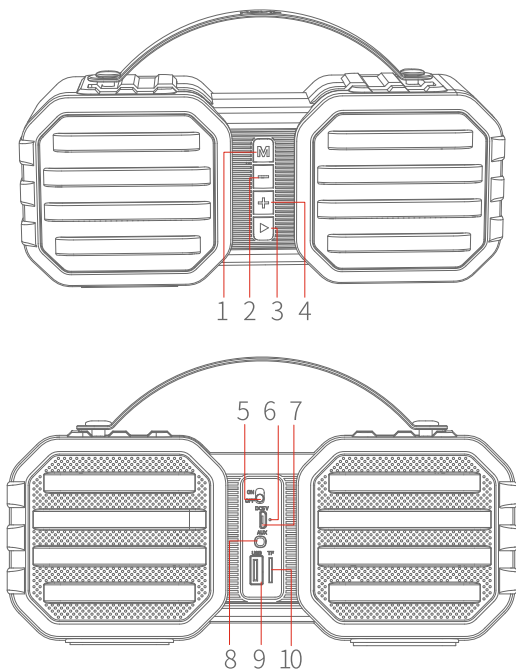

- | | |
|-------------------|----------------------------|
| 1. Mode switching | 6. LED indicator |
| 2. PREVIOUS/VOL- | 7. Micro USB charging port |
| 3. MFB/PLAY/PAUSE | 8. AUX in |
| 4. NEXT/VOL+ | 9. USB slot |
| 5. Power switch | 10. Micro SD card slot |

Power ON/OFF

1. Turn the power switch to “on”, the LED indicator lights up blue for 3s.
2. Turn the power switch to “off” to switch off the speaker.

Bluetooth Connection

1. Turn on the Bluetooth speaker, the LED indicator flashes blue continuously while waiting for pairing.
2. Switch ON the Bluetooth of your phone and search for “ZEB-SOUND FEAST 51”. Click manually to connect. If the connection is successful, the LED indicator will turn steady blue.
3. Since the speaker can automatically reconnect to the last paired device. When the Bluetooth of your device

turns on, (Just turn on the speaker), it will automatically reconnect.

Answer incoming calls

Press the MFB button to answer incoming calls.

End the call

Press the MFB button once to end the current call.

Reject incoming calls

Long press the MFB button for 2s to reject when there comes a call.

Last number redial

Double press the MFB button to redial the last dialed number.

Mode switching

Short press M to select mode.
(Bluetooth/Micro SD card/AUX in/USB/FM)

Micro SD card mode

Insert a micro SD card, the speaker will automatically recognize and start playing music from it. (The Max storage of the micro SD card is 128GB).

AUX mode

Connect your music player/phone to the speaker via 3.5mm audio cable, then the speaker will automatically recognize.

USB mode

Insert a USB disk, the speaker will automatically recognize and start playing music in it.

Music playing

1. Short press the MFB to PAUSE/PLAY
2. Long press the "-" for PREV.
3. Long press the "+" for NEXT.
4. Short press the "-" for VOL-
5. Short press the "+" for VOL+

FM mode

1. Once the speaker is in FM mode, Press & hold the PLAY/PAUSE to start scanning for FM channels.
2. Once scanning is complete, Long press the "+" or "-" button to change the channels.

TWS function (requires two speakers)

1. Keep both speakers in BT mode.
2. Long press the "M" button of both speakers, until there is a voice prompt and LED indicator of one speaker will be flashing, which means two speakers are paired with each other.
3. Now switch ON the phone Bluetooth to search for "ZEB-SOUND FEAST 51" & tap to pair it.
4. If would like to disconnect the two speakers, long press "M" button.

Voice Assistant

When the speakers is connect to a mobile/tablet via BT, Press & hold the PLAY/PAUSE key to activate the mobile's voice assistant.

Charging

Connect the micro USB cable to the charging port of the speaker and the other end of the USB to a DC 5V adapter for charging.

Charging Indication: Red LED glows

Full charge indication: Red LED turns off



ISO 9001:2015 Certified Company
www.zebronics.com