



Portable BT Speaker

ZEB **SOUND**
FEAST **110**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-SOUND FEAST 110** (Portable BT Speaker). Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- 14W RMS
- Up to 6h* Backup
- BT v5.4 | USB | mSD | AUX
- Voice changing Wireless mic
- Mic With Integrated Controls
- Splash Proof
- 6 RGB LED Modes
- Mobile Holder
- Carry handle
- Media / Volume control
- Built-in battery

Specifications:

 
Model	: ZEB-PSPK 72
Output Power (RMS)	: 14W
BT Version	: v5.4
Driver Size	: 10.16 cm x 1
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz—20kHz
S/N Ratio	: ≥75dB
Max Supported USB/ mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 3h
Playback time	: 6h*
Product Dimension (W x D x H)	: 17.7 x 13.1 x 21.5 cm
Package Dimension (W x D x H)	: 19.6 x 17 x 22.8 cm
Net. Weight	: 872 g

** at 70% volume (LED off)*

Package Contents:


Speaker	: 1 U
MIC	: 1 U
Charging cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

Button Description:

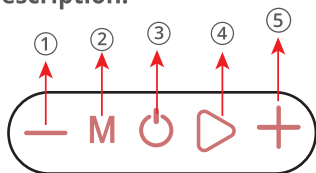

- ① Volume Decrease/Previous Track/Previous FM channel
- ② Mode Button
- ③ Power on/off
- ④ Play/ pause
- ⑤ Volume Increase/ Next Track/ Next FM channel

 Port Description:

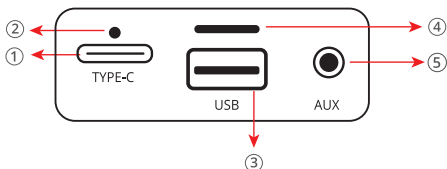

- ① Type C Charging Port
- ② LED Indicator
- ③ USB Input port
- ④ Micro SD Card Slot
- ⑤ AUX input Port

Speaker Button Function:

- Press and hold the “⏻” button for 2 seconds to power On/Off.
- Single press the “M” button to switch between modes.
- Single press the “▷” button to play or pause the music.
- Single press the “-” button to decrease the volume level and long press for previous track
- In FM mode, long press the “-” button to switch to the previous channel.
- Single press the “+” button to increase the volume level and long press for Next Track.
- In FM mode, long press the “+” button to switch to the next channel.

Instruction for Use

Charging the Speaker:

- Connect the Type C charging cable to the DC 5V Charging port of the speaker and insert the other end into a USB power source/adaptor.

Bluetooth pairing Instructions:

- Make sure you are in BT discovery mode.
- In your source device settings, search for the BT name “ZEB-Sound Feast 110”
- Once the BT name is visible in the settings, tap on it and click pair to connect.

USB/mSD mode:

Insert the USB drive/mSD card to the speaker. The speaker will detect the USB/mSD card and the audio files from the drive /card will be played automatically.

Note: *This mode isn't selectable on the speaker unless a USB drive and a supported audio content will be played from it.*

AUX-Input


- The speaker can be connected to an audio source using a 3.5mm cable.
- Connect the one end of the cable to the AUX port on the speaker and the other end an audio source.
- The audio from the source can be played through the speaker.

Note: *Media controls can not be controlled via microphone in AUX mode.*

Microphone function:

- Long press the "  " button for 2 seconds to turn the microphone On/Off and activate Neutral mode.
- Single press the "  " button to turn off the mic but function is working.
- Double press "  " button to play and pause the song

- Single press the **(vol+ , vol-)** buttons to adjust the microphone's volume.
- Long press the **(vol+ , vol-)** buttons to adjust the speaker's volume.
- Double press the **(vol+ , vol-)** buttons to change tracks (Next / Previous).
- Single press the **EFF** button to switch between 6 preset voice effects: Neutral mode, Echo mode, High Pitch mode 1, High Pitch mode 2, Low Pitch mode, Sound Monster mode.
- Long press the **EFF** button to Karaoke mode Turn On/Off
- The blue LED indicator shows the Power On/Off status of the microphone.

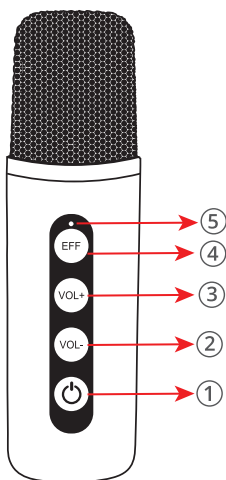

- ① Power On/Off , Mic On/Off, Play & Pause
- ② Volume Decrease Mic/Previous Track
Change/Volume Decrease Speaker
- ③ Volume increase Mic/Next Track
change/Volume Increase Speaker
- ④ Voice EFF change/ Karaoke maker
- ⑤ LED indicator

LED indication

Speaker:

- Blue light blinks -BT discovery mode
- Blue light glows constant -BT paired successfully
- Red light glows- charging
- Red light turns off- Fully charged

