



Portable BT Speaker  
**ZEB SOUND FEAST 200**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing **ZEB-Sound Feast 200** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

**Note:**

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adapter output rated DC 5V/1 A.*

*To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

**Features:**

BT v5.3/FM/ USB /mSD/ AUX

Deep Bass

Call Function

Type C Charging

Media / Volume control

Dual 6.6 cm Drivers

Built-in Rechargeable Battery

TWS Function

Passive Radiator

Splash Proof

## Specifications:


Model No	: ZEB-PSPK 46
Output Power (RMS)	: 30W(15W + 15W)
BT Version	: 5.3
Driver Size	: 6.6cm x 2
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥75dB
Max. Supported USB/mSD Memory Size	: 32GB
Supported Audio Formats	: MP3/WAV/WMA
Charging Time	: 7h
Playback Time	: 30h*
Product Dimension (W x D x H)	: 32.2x11.5x15.5 cm
Net. Weight	: 1.3kg

## Package Contents :

Speaker	: 1 U
Charging Cable	: 1 U
AUX cable	: 1 U
QR Code Guide	: 1 U


*@50% volume (LED off)*

## Buttons Description :

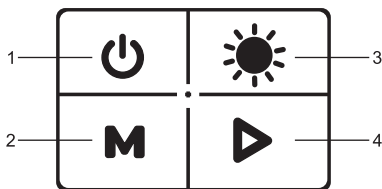

- 1. Power ON/OFF
- 2. Mode Button
- 3. LED Button
- 4. Play /Pause /TWS
- 5. Volume Up / Next Track or Channel
- 6. Volume Down / Previous Track or Channel

## Port Description :

 

### **BT Mode :**

- Switch the Input mode to BT on your **"ZEB-Sound Feast 200"**
- Turn ON BT on your phone / tablet and search for nearby BT devices.
- Search for the BT name **"ZEB-Sound Feast 200"** and tap to connect it.

### **FM Mode :**

To Switch to FM mode short press the "M" button. To scan for the available FM Channels, long press the **Play/Pause** button. Long press the **Next/Prev.** button navigates between the scanned channels.

### **USB Mode :**

Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

### **AUX Mode :**

Connect the speaker to an audio source Device using 3.5mm cable. Once connected, change the speaker to AUX mode and thereafter audio can be streamed via the speaker from the connected source.

### **Call Function :**

- Short press the Play/Pause button to accept and end the call.

- Long press the Play/Pause button to reject the call.

### **TWS Function :**

- Turn on both the speakers and make sure both speakers are in BT discovery mode.
- Long press the **Play/Pause** button on any of the speakers. After a few seconds it will indicate a voice prompt for TWS pairing.
- Now open your device's BT settings & select **ZEB-SOUND FEAST 200** to pair with it.
- To be noted that a single BT name **ZEB-SOUND FEAST 200** will be visible in the BT menu.
- Upon connecting you can experience the TWS function.

*Note: Requires two speakers for TWS feature.*

### **Charging instruction :**

Connect the charging cable to the Type-C port of the speaker and other end to the power adapter.

**ISO 9001:2015 Certified Company**  
**[www.zebronics.com](http://www.zebronics.com)**

