




Portable BT Speaker
ZEB **SOUND**
FEAST 250

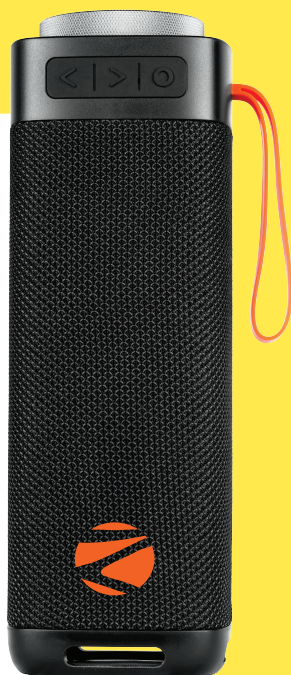

User Manual

www.zebronoics.com

Thank you for purchasing **ZEB-SOUND FEAST 250** Portable BT Speaker. Please read this user manual carefully before operation & save it for future refere.

Note:

1. Avoid the usage of this product at high-temperature environments and high-humidity

2. Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.

Caution:

There is a risk of explosion if the product is disposed in the fire

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- 40W RMS Output
- Up to 6h* backup
- Dual 6.35cm Drivers
- Deep Bass
- Passive Radiators
- TWS Functon
- IPX5 Water-Resistance

- BTv5.3 | AUX | mSD
- Call Function
- Voice Assistant support
- Multicolor LED Lights
- Carry Loop
- Media / Volume Control
- Built-in Rechargeable battery
- Fabric Finish

Specification


Model No	: ZEB-PSPK 69
Output Power (RMS)	: 40W
BT Version	: v5.3
Driver Size	: 6.35cm x 2
Speaker Impedance	: 4Ω
Frequency Response	: 80Hz-20kHz
S/N Ratio	: ≥85dB
Max Supported mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 3h
Playback time	: 6h*
Product Dimension (W x D x H)	: 8 x 8 x 25 cm
Net. Weight	: 1.31Kg

* at 100% volume (LED on)

Package Contents

Speakers	: 1 U
Charging Cable	: 1 U
Input Cable	: 1 U
QR code Guide	: 1 U

Product Details

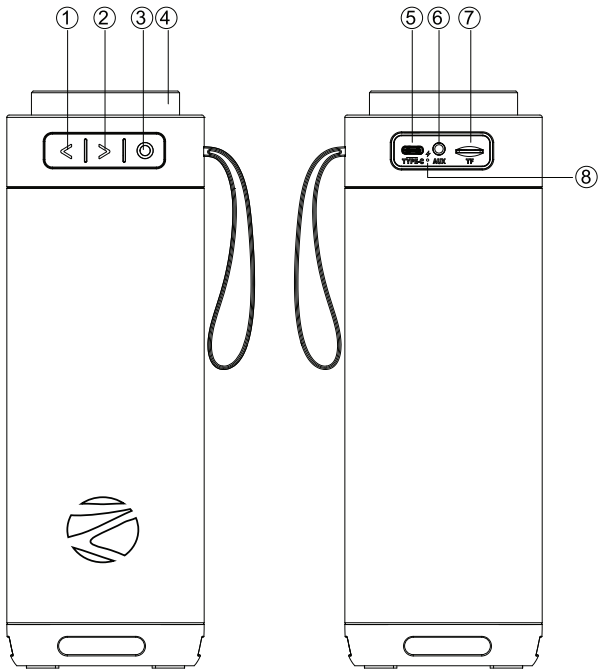

1.Previous Track

2.Next Track

3. Multi Function Button

- Long press to power On /OFF the speaker
- Single press to Switch between modes.

4. Volume Control Knob

- Rotate the knob clockwise to increase the volume
- Rotate the knob Anti-clockwise to decrease the volume
- Single press the Knob to Play/ Pause the track
- Long press the Knob to Switch between EQ modes.

5. Charging Port

6. AUX jack

7. mSD Port

8. Built-in Microphone

General Instructions

BT Mode:

- Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on "**ZEB-SOUND FEAST 250**" to connect.

mSD Mode:

- Insert the mSD card to the speaker. The speaker will detect the mSD card and the audio files from drive will be played automatically.

AUX-IN:

- The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

TWS Connectivity:

- Turn on both speakers in BT (wireless) mode. Long press the ">" button in both the speaker, both the speaker will connect automatically in TWS connect the source device to the master speaker and your TWS mode is ready to go.

Call Function:

- Short-press power button to accept the call
- Long-press 2S power button to reject the call.
- During the call, long press 2S power button to switch to talking on the phone.
- Short-press power button to end the call.

Charging Instruction:

- Connect the charging cable to a DC5V adapter and connect the other end to the speaker. while charging a Red LED will glow and the LED goes OFF once the speaker is fully charged.

