



Portable BT Speaker

NEB SOUND FEAST 400

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-SOUND FEAST 400** Portable Speaker. Please read the user manual carefully before usage & save it for future reference.

Features

BT v5.1

Supports USB

Built-in FM Radio

RGB Light

AUX Input

Type C Charging

Call Function

Media / Volume control

Built-in Rechargeable battery

Specifications

Output Power (RMS)	: 60W (30W+30W)
BT Version	: 5.1
Driver Size	: 8.89 cm x 2
Speaker Impedance	: 4Ω
Frequency Response	: 80Hz-16kHz
S/N Ratio	: ≥80dB
Max Supported Memory Size	: 32GB (USB)
Supported Audio Formats	: MP3, WAV, WMA, FLAC
Charging Time	: 3.5h
Playback Time	: 11h*

Product Dimension : 35.4 x 14.4 x 18.7 cm
(W x D x H)

Package Dimension : 37.3 x 17.2 x 20.5 cm
(W x D x H)

Net. Weight : 2.07kg

**at 50% volume and LED OFF*

Package Contents


Speaker : 1 U

Charging cable : 1 U

AUX cable : 1 U

QR Code Guide : 1 U

Product Details

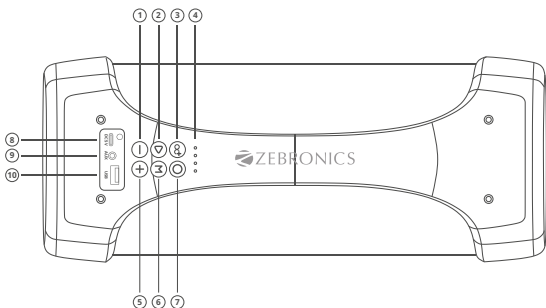

1 - Previous/Volume Down

2 - Play/Pause

3 - TWS Button

4 - Battery Indicator

5 - Next/Volume Up

6 - Mode Button

7 - Power On/Off

8 - Charging Port

9 - AUX Port

10 - USB Port

Button Function:

Power On/off

Long-press the Power button to turn the speaker on and off.

Bluetooth

- Once the speaker is on, Please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-SOUND FEAST 400** to connect.
- Long-press “+” or “-” to control the media
- Short-press “+” or “-” to adjust the volume
- Short press “ **Play/Pause** ” to play/Pause the music
- Long-press “ **Play/Pause** ” to disconnect the Wireless connection with the mobile device.
- Short press “ **TWS** ” to activate voice assistant **Siri/Google Assistant**.

USB Mode

- Once the speaker is ON, Insert a USB pen drive to the speaker
- The speaker will automatically detect the songs from the pen drive and play
- Long-press “+” or “-” to control the media
- Short-press “+” or “-” to adjust the volume
- Short press “ **Play/Pause** ” to play/Pause the music

FM Radio

the speaker to FM mode using the Mode button.

- Press and hold the " **Play/Pause** " key to auto scan the available FM channels.
- Long-press " **+** " or " **-** " to change the scanned FM channels
- Short-press " **+** " or " **-** " to adjust the volume

***Note:** Please use Aux cable as antenna for better FM signal reception.*

TWS Function

- Turn on two **ZEB-SOUND FEAST 400** speakers you want to pair
- Long press the " **TWS** " button on any one speaker to activate TWS mode.
- After Few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **ZEB-SOUND FEAST 400** to connect.
- To exit TWS mode, long Press " **TWS** " button again.

***Note:** Users need to make TWS connection first, then make Bluetooth connection with the mobile phone.*

AUX-IN

Switch the speaker to AUX Mode, Connect one end of the AUX Cable to the speaker & connect the other end to an audio source. The

songs played from the audio source can be heard through the speaker.

RGB Lighting

When the speaker is turned on, the RGB light is on automatically, user can long-press the Mode button to switch the RGB light on and off.

Charging Instruction

Connect Type C cable to the speaker & connect the other end of the cable to a 5V DC adapter.

Call Function

- Single-tap Play Button to accept an incoming call or to end an active call.
- Double-tap Play Button to reject an incoming call.

Note:

- *Don't keep the speaker near places which are at high temperature.*
- *Don't open the speaker in order to avoid electrical shock & other accidents*
- *Turn off the speaker if the speaker is not being used for a long period of time*

ISO 9001:2015 Certified Company
www.zebronics.com

