



Portable BT Speaker  
**SOUND  
FEAST 40**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing **ZEB-SOUND FEAST 40** Portable BT Soundbar. Please read this user manual carefully before operation & save it for future reference.

**Note:**

- *Avoid the use of this product at the high-temperature and high humidity environment.*
- *Avoid self-disassemble of product, or it will result in the failure of warranty.*
- *Please charge the product with power adapter output rated voltage DC 5V.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

**Features:**

BT v5.3

USB | mSD

FM Radio

TWS Function

Call Function

Dual 5.2cm Drivers

Deep Bass

Passive Radiator

Upto 16h\* Backup

8W RMS Output

Type-C Charging

Built-in Rechargeable Battery

## Specifications:



Output Power (RMS)	: 8W (4W + 4W)
BT Version	: 5.3
Driver Size	: 5.2cm x 2
Speaker Impedance	: 4Ω
Frequency Response	: 100Hz-18kHz
S/N Ratio	: ≥70dB
Max. Supported USB/mSD Memory Size	: 32GB
Supported Audio Formats	: MP3
Charging Time	: 3.5h
Playback Time	: 16h*
Product Dimension (Dia x H)	: 20.5 x 8 x 12 cm
Net. Weight	: 442g

*\* at 50% Volume*

## Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U

# Buttons and Ports Description

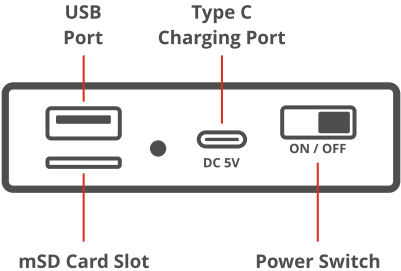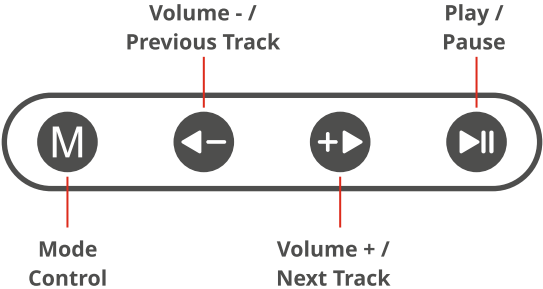

## Instructions for Use:

Slide the Power button to ON/OFF the speaker.

- Short press “ +▶ ” to increase the volume by one level. Long press to skip to the next track / channel.
- Short press “ ◀- ” button to decrease the volume & Long press to skip to previous track / channel
- Short Press “ M ” to switch between the modes
- Short Press “ ▶|| ” to Play or Pause the Track.

## BT Mode

- Power ON the speaker.
- Turn ON BT on your Source Device and search for nearby BT devices.
- Search for the BT name **ZEB-SOUND FEAST 40** and tap to connect it.

## mSD Mode

Connect the mSD device to the respective ports and the speaker would automatically start playing from the mSD device.

## USB Mode

Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

## **FM Radio Mode**

- Short press “**M**” button to Switch to FM mode & Short Press “▶||” button to scan the FM channel.
- Once the Scanning is done, the speaker will automatically play the first channel.

## **Charging the Speaker**

- Connect the Type-C charging cable to the DC 5V charging port of the speaker and insert the other end into a USB power adapter.
- Red LED glows, indicating that the battery is being charged. The LED will turn Green once it is fully charged.

