



Portable BT Speaker

**ZEB** **SOUND**  
**FEAST** **450**



# User Manual

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB-SOUND FEAST 450** (Portable BT Speaker). Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

*<https://zebronics.com/pages/warranty-policy>*

### **Features:**

- Speaker with 3 Drives
- RGB LED Modes
- TWS Function
- Deep Bass
- BT v5.3 | USB | AUX
- Media / Volume control
- 6.3mm Mic Input
- Built-in battery

### **Specifications:**

Output Power : 50W

BT Version : 5.3


Driver Size	
Woofer	: 8.9cm
Full Range	: 5.7cm x 2
Speaker Impedance	
Woofer	: 4Ω
Full Range	: 6Ω x 2
Frequency Response	: 90Hz-19kHz
S/N Ratio	: ≥65dB
Max Supported USB memory size	: 32GB
Supported Audio formats	: MP3, WAV, FLAC
Charging time	: 3h
Playback time	: 5h*
Product Dimension (W x D x H)	: 32.4 x 13.5 x 17.3 cm
Package Dimension (W x D x H)	: 36.5 x 16.5 x 20.5 cm
Net. Weight	: 1.98kg

\* at (LED Off)

### **Package Contents:**


Speaker	: 1 U
Charging cable	: 1 U
AUX Cable	: 1 U
QR Code Guide	: 1 U

## Button Description:

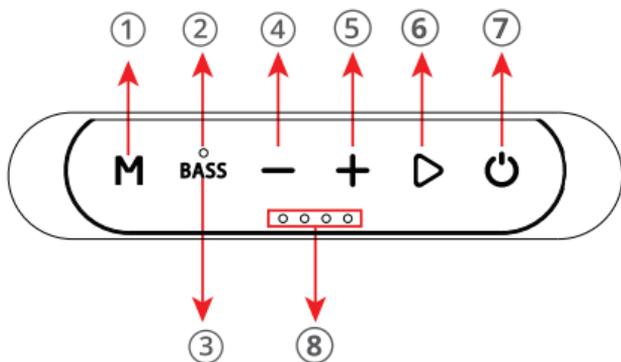

- ① Mic Echo adjust mode / Mode change
- ② Bass LED indicator
- ③ Bass boost/change RGB light
- ④ Volume Decrease/Previous Track
- ⑤ Volume increase/Next Track
- ⑥ Play & Pause/TWS mode
- ⑦ Power switch On/Off
- ⑧ Battery Level Indicator

## Port Description:

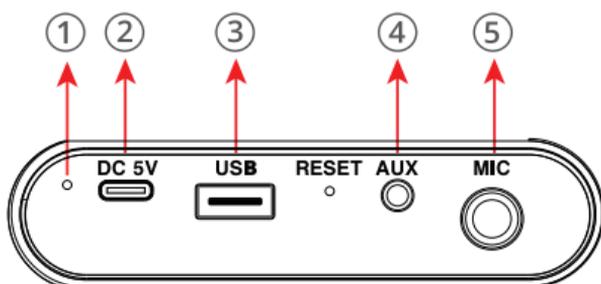

- ① Charging LED indicator
- ② Type-C charging
- ③ USB port
- ④ AUX input
- ⑤ MIC input

### **Button Function:**

- Double press “**M**” button to mic echo adjust mode
- Single press “**M**” button to switch between mode
- Short press “**BASS**” button to boost the bass.
- Long press the “**BASS**” button to switch between different LED Modes.
- Short press “+” or “-” to adjust the volume.
- Long press “+” or “-” to control the media
- Short press “▶” button to play & pause the music
- Long press “▶” button to enter or exit the TWS Mode

### **Power On/Off:**

- Long press “⏻” button to turn ON/OFF the speaker

### **BT pairing:**

- Once the speaker is ON, please make sure that the speaker is in BT mode.
- Now search for nearby BT device in your mobile and tap on the BT name “ZEB-SoundFeast 450” to connect.

### **USB mode:**

- Connect the USB device to the respective ports and the speaker would automatically start playing from the USB device.

### **TWS Function:**

- When two speakers are in Bluetooth mode, long press the “▶” button on one of the speakers to enter TWS mode. It will search and connect with another speaker automatically.
- Once the two speakers are connected successfully, you can control both speakers at the same time.

**Note:** *Requires two speakers for the TWS feature.*

### **AUX-Input:**

- Connect one end of the AUX cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

### **Charging the Speaker:**

- Connect the Type-C charging cable to the DC 5V, 3A charging port of the speaker and insert the other end into a USB power source/adaptor.
- While charging, a red LED will glow, and the LED will turn OFF once the speaker is fully charged.

### **LED Modes:**

- Long press the “**BASS**” button to change the LED modes and to turn the LEDs off.

### **Battery Level Indication:**

The are 4 indication lights on the control panel:

- 100% - 4 indication lights ON
- 75% - 3 indication lights ON
- 50% - 2 indication lights ON
- Below 25% - 1 indication light will be flashing.

### **Mic mode:**

- Connect the mic to the 6.3mm Mic input port
- Double press” M” button to enter mic echo mode
- Then press +/- to adjust the mic reverb level

